

# **RAVENHEAT®**

## **Instructions for Use Installation and Servicing**

**To be left with the user**

### **HIGH EFFICIENCY**

### **CONDENSING**

### **COMBINATION BOILER**

### **HE 25 C - 30 C - 35 C - 40 C**


### **COMPACT**

Natural Gas (G20) II<sub>2H3P</sub>

LPG (G31) II<sub>2H3P</sub>



**Listed by The United Kingdom Water  
Fitting Byelaws Scheme**

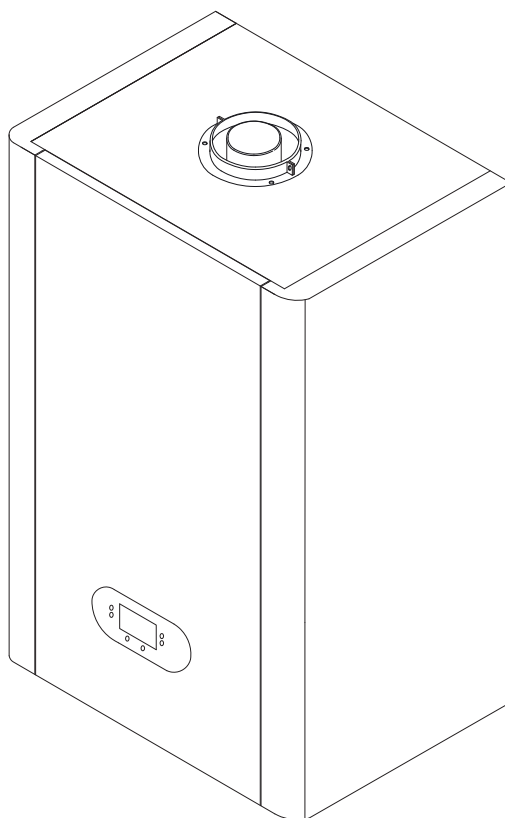


**CE 1312**



Technical and illustrative data are not binding and can be modified without prior notice.  
The descriptions and illustrations in the present booklet are for guidance purposes only.

 RAVENHEAT INTERNATIONAL s.r.l. Via Dell' Agricoltura, 50 37059 Zevio (VR) IT  
Tel. 045/6051578 - Fax 045/6060662  
e-mail: info@ravenheat.it



## HIGH EFFICIENCY CONDENSING BOILER FOR CENTRAL HEATING AND DOMESTIC HOT WATER

This new highly efficient turbo-modulating boiler is designed to meet domestic hot water and central heating requirements at super high efficiency.

### POSITION

The appliance is extremely versatile as it can be fitted in almost any room. The appliance is room sealed so there is no contact between the combustion chamber and living accommodation. This guarantees maximum safety and efficiency. Each boiler has been designed and manufactured in our modern plant to exacting ISO 9001 discipline, all boilers carry full CE marking of approval. This product is guaranteed by Ravenheat International srl Via Dell' Agricoltura, 50 - 37059 Zevio (Verona) Italy. Guarantee is a full 24 months from date of purchase providing the appliance has been fitted in accordance with these instructions and relevant codes of practice.

### MAJOR COMPONENTS

- Modulating gas valve.
- Modulating pump head suitable for any type of central heating system.
- Burner with flame stabiliser designed to operate under all thermal conditions.
- Unique **condensing heat exchanger** for high thermal flue transfer from gases to water.
- Stainless steel plate heat exchanger for super high heat transfer to domestic hot water supply.
- Built in frost protection.
- Printed circuit board designed to connect to room stat and/or timer.
- Aesthetically pleasing panels and controls.
- On/Off ball valves for shutting off gas, central heating and domestic hot water circuit.
- Safety relief valve (for safety discharge).
- 

**NOTE: Due to the high efficiency of this boiler a plume of water vapour will form at the flue terminal during operation.**

### COSHH - CONTROL OF SUBSTANCES HAZARDOUS TO HEALTH IMPORTANT

It is the Users/Installers responsibility to ensure that the necessary personal protective clothing is worn when handling this appliance, and where applicable the pertinent parts that contain any materials that could be interpreted as being injurious to health and safety.

#### GENERAL INFORMATION:

GLUES AND SEALANTS - exercise caution - if these are still in liquid form.

RAVENHEAT use only high quality material for production of this product, in an effort to protect the environment wherever possible components should be recycled.

**WARNING:** when installing the appliance, care should be taken to avoid any possibility of injury when handling sheet metal parts.

## Users instructions

Sections	Page	Sections	Page
1	6	5	27
1.1	6	5.1	27
1.2	6	5.2	27
1.3	6	5.3	27
		5.4	27
1.4	7	5.5	28
1.5	8	5.6	29
1.6	8	5.7	30
1.7	8	5.8	31
		5.9	31
2	9		
2.1	10	5.10	34
2.2	11	5.11	34
2.3	11		
2.4	11	5.12	30
2.5	11	5.13	35
2.6	11	5.14	37
2.7	12		
2.8	12	5.15	37
2.9	12	5.16	38
3	13		
3.1	14	5.17	38
3.2	15		
3.3	16	5.18	38
3.4	17		
3.5	18	5.19	39
3.6	19		
3.7	20	5.20	40
		5.21	40
4	21	5.22	40
4.1	21	5.23	40
		5.24	40
4.2	21	5.25	40
4.3	22	5.26	41
4.4	22	5.27	41
4.5	22	5.28	42
4.6	22	5.29	42
4.7	23		
4.8	23	6	42
4.9	23	6.1	42
4.10	24	6.2	42
4.11	24	6.3	42
4.12	24	6.4	42
4.13	25		
4.14	25	6.5	43
4.15	26	6.6	43
4.16	26	6.8	44
4.17	26		
4.18	27		
4.19	27		
4.20	27		

<b>Sections</b>	<b>Page</b>	<b>Sections</b>	<b>Page</b>
6.9 Combustion check	44	10 Electrical system diagram	56
6.10 Checking the flue system	45	11 Template drawing	57
6.11 Checking the heating thermostat	45	12 Spare parts checklist details	58
6.12 Testing/regulating the D.H.W flow	45		
6.13 Keep hot	45		
6.14 C.H. high/low temperature	45		
6.15 Range rating central heating or/and domestic hot water	46		
6.16 Test mode	46		
6.17 Instructing the user	46		
7 Servicing instructions	47		
7.1 Boiler frost protection	47		
7.2 To inspect and clean the appliance	48		
8 Replacements of parts	49		
8.1 General	49		
8.2 To remove front panel	49		
8.3 To remove left and right panels	49		
8.4 To remove/replace fan	49		
8.5 To remove/replace the electrodes	50		
8.6 To remove/replace the burner	50		
8.7 To remove/replace the heat exchanger	50		
8.8 To remove/replace expansion vessel	51		
8.9 To remove/replace gas valve	51		
8.10 To remove/replace plate heat exchanger	51		
8.11 To remove/replace the water pressure transducer	51		
8.12 To remove/replace diverter valve motor	52		
8.13 To remove/replace C.H. diverter valve	52		
8.14 To remove/replace D.H.W. diverter valve mechanism	52		
8.15 To remove/replace pump	52		
8.16 To remove/replace automatic air vent	52		
8.17 To remove/replace safety relief valve	53		
8.18 To remove/replace D.H.W. sensor	53		
8.19 To remove/replace C.H. flow and return sensors	53		
8.20 To remove/replace flue sensor	53		
8.21 To clean and remove/replace condensing trap	53		
8.22 To remove control box	54		
8.23 To remove/replace control board	54		
8.24 To remove/replace digital display board	54		
8.25 External control connection	54		
9 Fault finding Central heating	55		
9.1 Fault finding Domestic Hot Water	56		

## 1 USERS GUIDE

**It is the law that all gas appliances are installed by a competent person, in accordance with the gas safety installation and to the current Gas Safety (Installation and Use) Regulations B.S.5440:2-(2009).**

**Do NOT search for gas leaks with a naked flame.**

**WARNING:** This appliance must be earthed.

### 1.1 INTRODUCTION

Please carefully read the information given in this booklet to help you gain maximum control from your appliance with minimum trouble and cost.

Your Ravenheat Condensing Low Nox combination boiler has been designed to supply your Central Heating and Domestic Hot Water directly from one unit.

When Central Heating is operating, the circulation will be interrupted when Domestic Hot Water is being drawn off (domestic hot water has priority).

This will normally not affect the level of Heating.

#### **PLEASE NOTE:**

Due to the high efficiency of this appliance and resulting low flue gas exhaust temperature a white plume of condensation vapour (cool steam) will be emitted from the flue outlet terminal, this is quite normal. It will be particularly evident during periods of low outdoor temperature or when the boiler is working at its optimum performance (Plume Management kits are available on request).

#### **IMPORTANT:**

In the unlikely event of the exhaust flue gases exceeding the overheat temperature setting, the boiler operation will be stopped to prevent damage to the appliance.

### 1.2 CLEARANCES AROUND THE APPLIANCE

#### **Side clearance:**

The position of the appliance must provide a minimum clearance of only 5 mm as the side panels do not require removing for servicing.

However, if the option is preferred to remove the panels then a minimum clearance of 55 mm is required.

#### **Top clearance:**

The top clearance should be a minimum of 125 mm.

#### **Bottom clearance:**

A minimum bottom clearance of 80 mm is required between the appliance and any surface, though 150 mm is preferred whenever possible.

#### **Front clearance:**

A minimum of 450 mm is required in front of the appliance for access during servicing, the front clearance can be reduced when installed in a cupboard to 25 mm from the access door.

## USER CONTROLS

This appliance is designed to operate with the minimum of ease for the user. All the controls are found on the control panel on the front of the boiler.

### 1.3 OPERATING SAFETY CHECKS TO PROTECT YOUR APPLIANCE (CHECKING THE SYSTEM PRESSURE)

Before lighting the appliance check that the Central Heating system pressure is not less than 1 bar. If it is below this it will be necessary to re-pressurise the system, between 1 and 1.5 bar to allow the boiler to operate. To view the system pressure press the INFO button once, this will display the current pressure (**if the pressure is on nil or too low, then error code 08E is displayed**).

A filling device (filling loop) will have been fitted on the system.

This is usually on the pipework near to the boiler. If you are unsure of its position, or you cannot identify it, consult the installer who fitted the boiler.

The filling loop usually consists of two taps and a separate silver coloured braided flexible pipe with connection fittings. Only when re-pressurising should the braided flexible pipe be connected between the two taps, ensure that the nuts or the pipe ends are tightened onto the taps.

Fully open one of the taps first and then while monitoring the water pressure on the digital display, carefully open the second tap. When the water pressure is to a maximum of 1.5 bar turn both taps off.

Disconnect the flexible pipe from the taps (a small amount of water may be present).

Keep the pipe in a safe place for future use.

Press the ESC button once to return to the main screen.

**In the event of an error, the appliance will show a sequence code displayed on the digital display of the control panel (fig. 1). By pressing the "RESET" button it is possible to relight the boiler (see page 52 and 53 for list of error codes).**

## 1.4 APPLIANCE STATUS INDICATORS

The boiler is equipped with a large LCD display that indicates the appliance operating status (fig. 1).

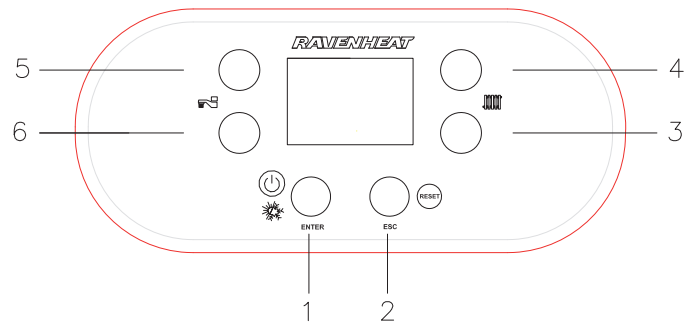


Fig. 1

### KEY:

- 1 - ON/OFF button.  
Press to turn the boiler ON, summer mode (hot water symbol only), winter mode (hot water and radiator symbol), and OFF.  
Press the button also to confirm selections.
- 2 - Press to RESET the appliance if ever an error code is displayed or ESC to back-up from the boiler menus.
- 3/4 - Temperature and function mode selectors.  
Press the arrow up or the arrow down to increase or decrease the central heating set-point temperature.  
Press also to show the boiler values or to show the options program when the digital display is in INFO or in USER PARAMETERS.
- 5/6 - Temperature selectors.  
Press the arrow up or the arrow down to increase or decrease the heating hot water outlet temperature.
- 2/6 - INFO: press together 2 and 6 buttons for to show the boiler values and use the arrow up and arrow down buttons (3/4) to scroll.
  - Flow temperature
  - Domestic hot water temperature
  - % power of modulation
  - Return temperature
  - External temperature, if the external probe is present
  - Fan speed (example 20=2000ppm).

Press ESC to esc INFO mode.
- USER PARAMETERS (for service people): press the ESC and the arrow down buttons together (buttons 2 and 3).  
Press the arrow up and arrow down buttons to show the boiler parameters.
  - P001: C.H. max fan speed.
  - P002: D.H.W. max fan speed.
  - P003: Keep hot "0" disabled and "1" enabled
  - P004: C.H. High/Low temperature: "0" low (max 50°C) / "1" high (max 80°C)
  - P005: Climatic curve: default "20" (full instructions are provided with the Outdoor Sensor Kit).
  - P006: Enable locking pump "0" disable / "1" enable.
  - P007: Test mode: "0" disabled, "1" enable. (the function is enable for maximum 15 minutes).  
Press ESC to esc Test mode.
  - P008: Weather compensator control.  
0= Normal remote control.  
1= Ravenheat remote control with D.H.W. selection in boiler.  
2= Honeywell remote control.
  - P009: Ignition power. Is possible to set the soft start power level (% of max boiler power, range 0:99).
  - P010: Boiler power selection ("1" HE 25C - "2" HE 30C - "3" HE 35C - "4" HE40C).
  - P011: Boiler type ("1" instantaneous - "2" only heating).
  - P012: Gas type ("0" Natural gas - "1" LPG gas).
  - P013: Modulating pump type selection ("0" Wilo - "1" Grundfos).
  - P014: Water pressure sensor selection: "0" pressure switch - "1" transducer

Press ESC to esc USER PARAMETERS mode.

## 1.5 DIGITAL DISPLAY

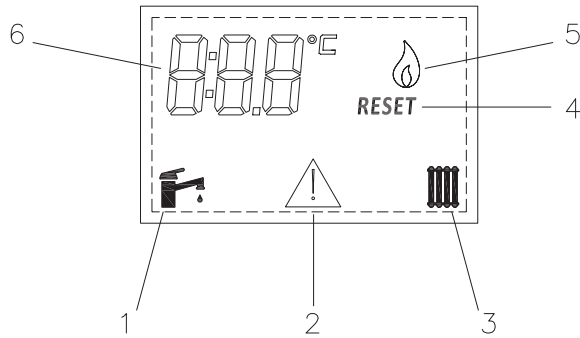


Fig. 2

### KEY

- 1 - D.H.W. request present / D.H.W. setpoint setting (not used on only heating)
- 2 - Generic error indicator
- 3 - C.H. enabled / C.H. setpoint setting
- 4 - User vlockout reset request
- 5 - Flame presence
- 6 - Temperature

## 1.6 BOILER VALUE

It is possible to show the boiler value.  
Press together 2 and 6 buttons for to show the boiler values.

Use the arrow up and the arrow down buttons C.H. setpoint, (item 3 and 4 fig. 1) to show the following info:

- Flow temperature
- Domestic hot water temperature
- External temperature, if the external probe is present
- % power of modulation.

## 1.7 DIAGNOSTIC


The display shows eventual error or faulty message.

**Stop boiler:** The boiler stops the operating cycle and waits for the disappearance of the cause of the error in order to go back to be operating mode.

**Block boiler:** the boiler requires a manual reset to become operational again.



**2.0 GENERAL LAYOUT (Fig. 3)**

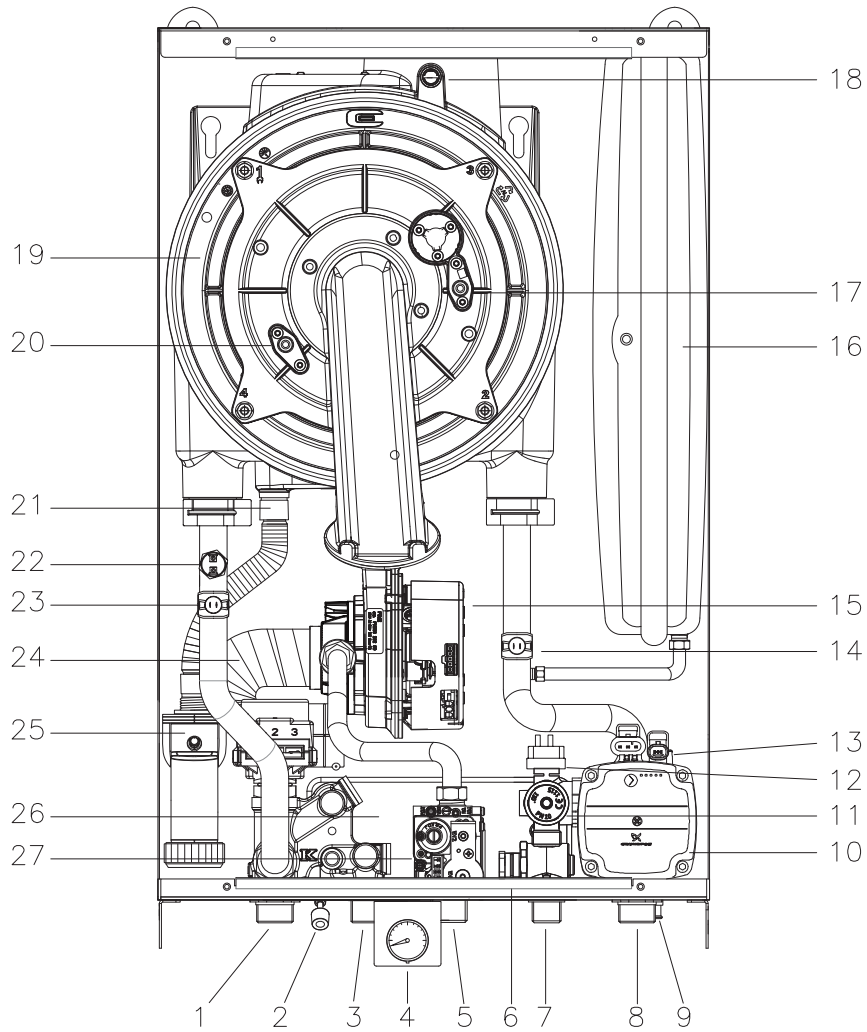


**Fig. 3**

**KEY**

- |                                   |                                  |                           |
|-----------------------------------|----------------------------------|---------------------------|
| 1 - C.H. flow                     | 12- Water pressure               | 23 - C.H. flow sensor     |
| 2 - Water load (Not UK version)   | 13 - Automatic air vent          | 24 - Silencer             |
| 3 - D.H.W. outlet                 | 14 - C.H. return sensor          | 25 - Condensate trap      |
| 4 - Pressure gauge                | 15 - Fan                         | 26 - Plate heat exchanger |
| 5 - Gas inlet                     | 16 - Expansion vessel            | 27 - Gas valve            |
| 6 - D.H.W. flow detector          | 17 - Spark electrode             |                           |
| 7 - Water inlet                   | 18 - Flue temperature sensor     |                           |
| 8 - C.H. return                   | 19 - Main heat exchanger         |                           |
| 9 - Drain point                   | 20 - Sensing electrode           |                           |
| 10 - Pump                         | 21 - Condensate drain            |                           |
| 11 - Safety pressure relief valve | 22 - Overheat cut off thermostat |                           |

**2.1 OPERATING SCHEME (Fig. 4)**

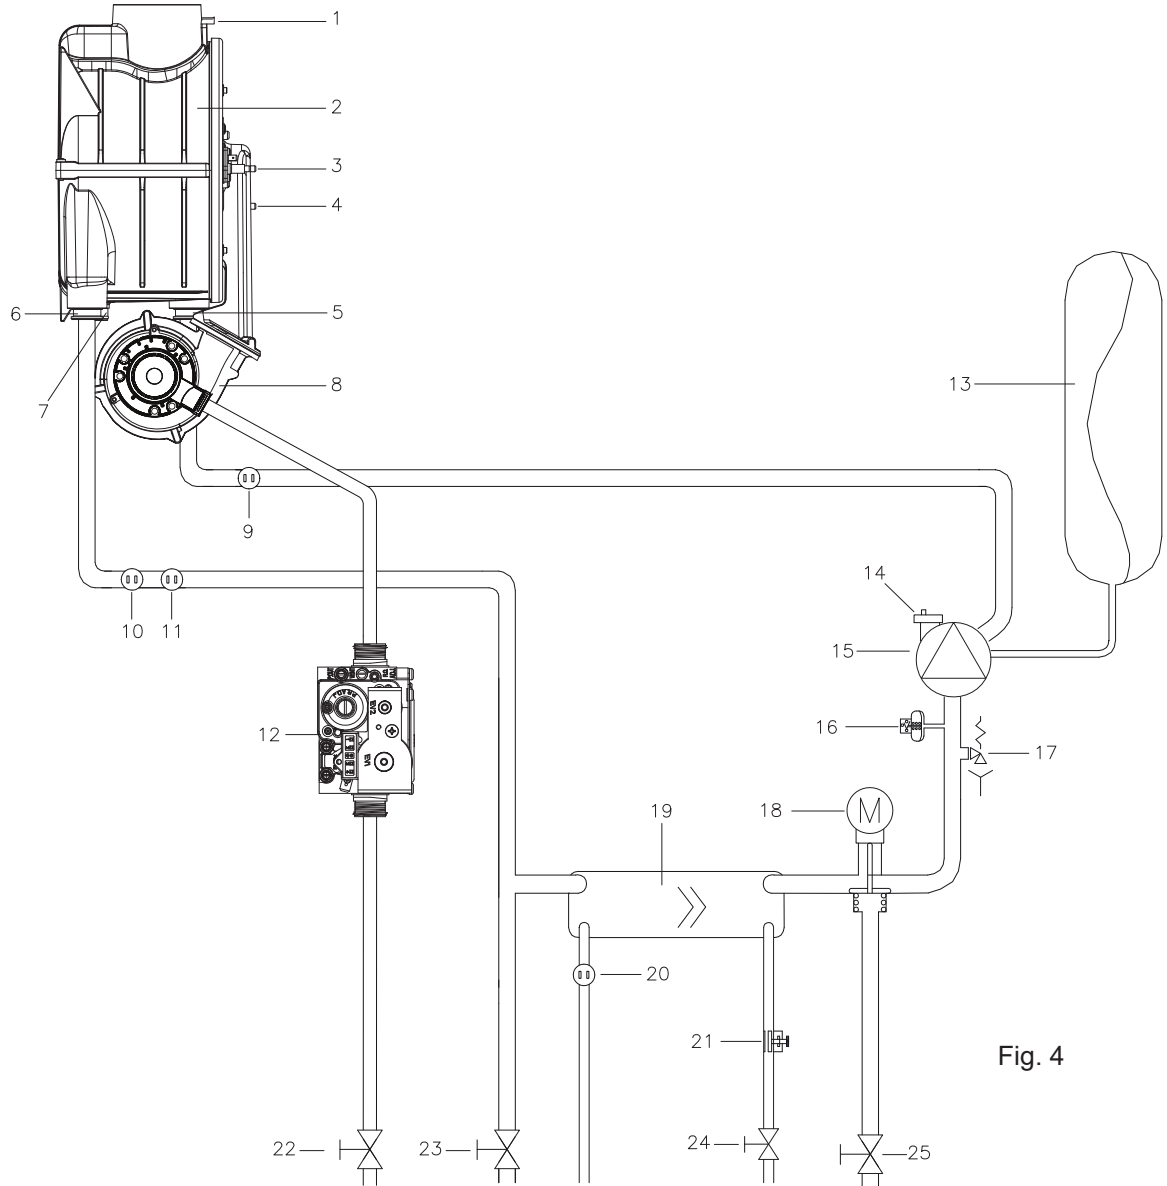

**Fig. 4**

**KEY**

- |                             |                                  |                                 |
|-----------------------------|----------------------------------|---------------------------------|
| 1 - Flue temperature sensor | 10 - Overheat cut off thermostat | 19 - Plate heat exchanger       |
| 2 - Main heat exchanger     | 11 - CH flow sensor              | 20 - DHW sensor                 |
| 3 - Sensing electrode       | 12 - Gas valve                   | 21 - DHW flow sensor            |
| 4 - Spark electrode         | 13 - Expansion vessel            | 22 - Gas service cock           |
| 5 - CH return               | 14 - Automatic air vent          | 23 - CH compression ball valve  |
| 6 - CH flow                 | 15 - Pump                        | 24 - DHW compression ball valve |
| 7 - Condensate drain        | 16 - Water pressure transducer   | 25 - CH compression ball valve  |
| 8 - Fan                     | 17 - Safety pressure system      |                                 |
| 9 - CH return sensor        | 18 - Diverter valve motor        |                                 |

## 2.2 INTRODUCTION

This boiler is designed for the production of central heating and domestic hot water combined in one unit.

It is fitted with an automatic domestic hot water priority valve.

It is possible to select either a summer or winter function with the summer position only being for domestic hot water.

The winter position being for central heating with domestic hot water priority.

## 2.3 DESCRIPTION OF CONTROL SYSTEM AND SEQUENCE OF OPERATION

### 2.4 Domestic hot water mode

When the appliance is in rest mode, select the summer position by pressing the ON/OFF button (item 1 fig. 1) please ensure that the heating circuit is charged with water (above 1 bar).

If the domestic hot water tap is turned on, the boiler will function in the following sequence:

The pump starts. The fan starts and sends a signal back to the ignition board that the fan is running.

The spark ignition system is powered which in turn commences the spark igniter to operate and light the burner.

At this point the ignition board opens the gas valve to light the burner.

When the electrode sensor senses the signal that the burner is alight, the spark igniter stops.

The fan speed settings on the boiler increases to the maximum permissible speed over a period of 5 seconds and will remain at its maximum required power until its maximum regulated temperature is achieved and then will modulate to maintain this.

When the domestic hot water tap is closed the diverter valve goes back into rest mode, the burner is shut down along with the fan which is also switched off.

### 2.5 Central heating mode

If the appliance is in winter mode with a demand for heat to supply radiators, etc. , with the heating circuit fully charged above 1 bar, so as to operate the low water sensor device the boiler will start in the same way as domestic hot water mode.

As the heating sensor reaches temperature the fan speed modulates to maintain the temperature set on the display panel.

When starting, the fan will always start at the set-point speed.

The boiler is fitted with an anti-cycling device on the control board. This delays the boiler from re-firing within 10 minutes.

If the heating temperature goes 20 °C below the set point, the burner restarts immediately. The domestic hot water will always take priority and is unaffected by the anti-cycling device.

## 2.6 GENERAL FUNCTION

The instrument panel allows adjustment of the boiler to the heating requirements, between the maximum and minimum settings.

Air and gas are drawn by the fan for combustion. The fan also forces exhaust gas through the flue to the outside, this creates a lesser pressure in the sealed combustion chamber, thus sucking in combustion air, through the inlet duct.

The boiler water temperature is automatically controlled by a built in thermostat.

Interior space temperature is set by the room thermostat to be installed as part of the heating system. The boiler already carries connection terminals for this thermostat, as well as for an external timer if required. The burner continues to operate until it is stopped by the digital clock or one of the thermostats.

When the internal CH temperature sensor or the room thermostat intervenes the burner shuts down. The fan stops but the pump continues to operate for 3 minutes.

The boiler also incorporates an anti-block system which powers the pump every 24 hours, allowing it to operate for 2 minutes if the boiler has not been in use. This operation may in some cases be heard for a short period when the pump has been activated.

The heat exchanger in the DHW circuit is a stainless steel plate heat exchanger water to water, and domestic water is heated by converting the water in the central heating circuit. The transfer of heat is very high because the two fluids move in a counter direction.

Select the winter position by pressing the ON/OFF button (item 1 fig. 1). When a hot water tap is turned on the diverter valve motor moves to exclude the central heating circuit, the boiler automatically modulates to maintain the domestic hot water at a constant temperature. The water temperature can be regulated by the digital display.

When there is a demand for domestic hot water, the burner and pump perform as they do during central heating except that the burner is commanded by the DHW thermostat.

When DHW is no longer called for (tap is turned off), the boiler will automatically return to the central heating mode. Select the summer position by pressing the summer/winter button. The boiler functions like an automatic gas hot water heater. When DHW is no longer required the burner and pump and fan will immediately turn off. This also takes place when in winter mode, if there is no demand for heat to the central heating system or until the digital clock and room thermostat (if fitted) demands the

## 2.8 SAFETY DEVICE

In both central heating and domestic hot water mode safe operation is ensured by a control board which shuts off the main burner, if the fan stops or the flue or combustion air intake duct is obstructed.

An overheat cut off thermostat acts to turn off the burner to resettable "lockout". A safety valve is fitted on the central heating circuit set at 3 bar. A low water pressure switch set at 0.4 bar is fitted on heating circuit, to prevent the boiler operating below this boiler system pressure.

## 2.7 OVERALL DIMENSION (Fig. 5)


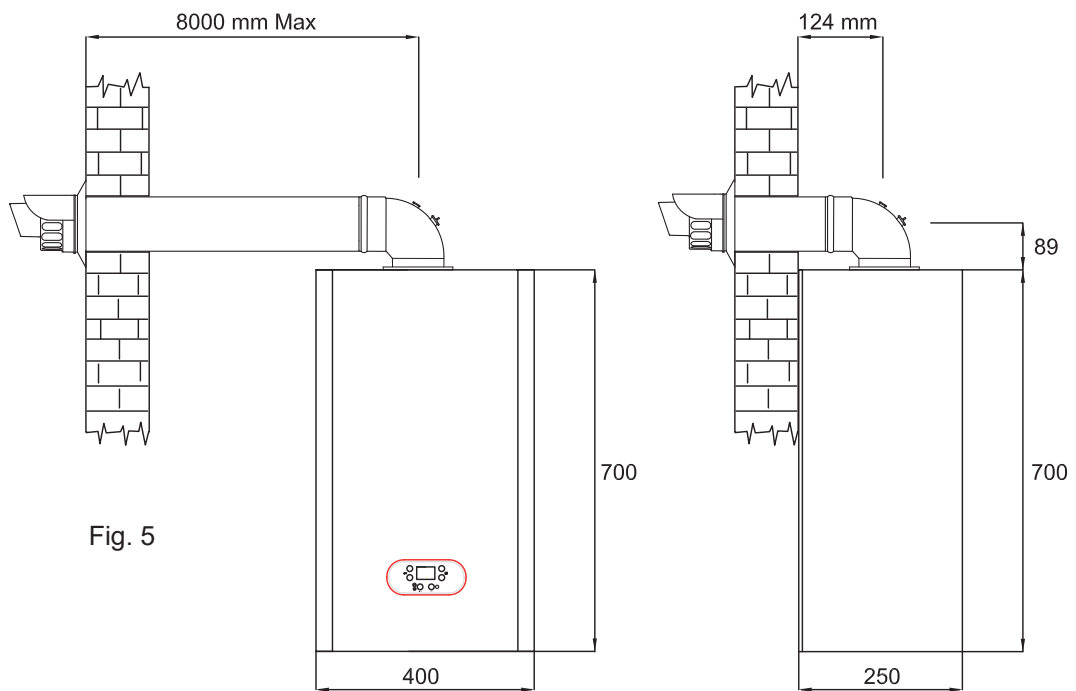


Fig. 5

## 2.9 AVAILABLE PUMP HEAD

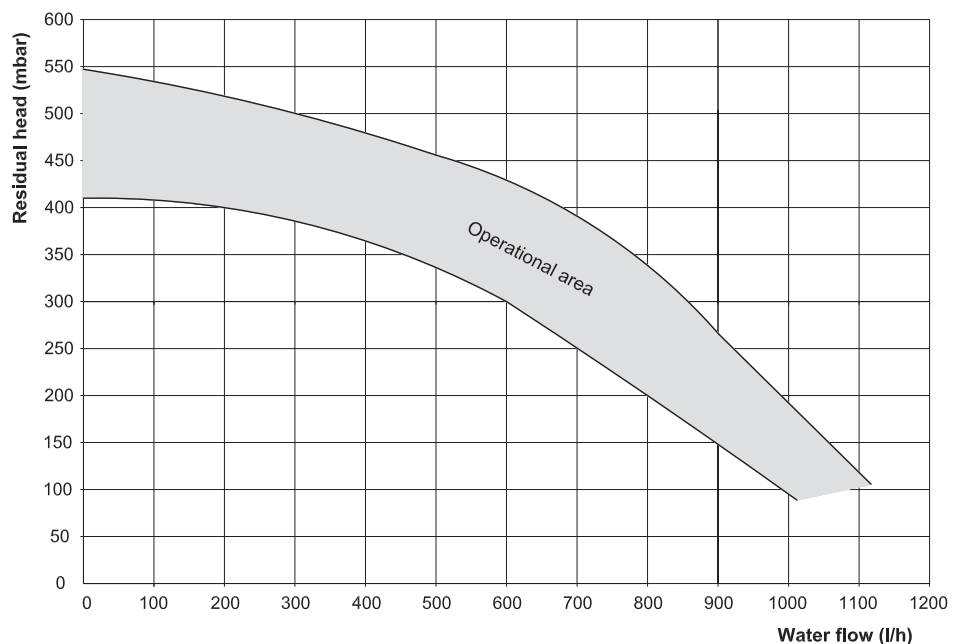

### 3 TECHNICAL DATA

## HE 25 C COMPACT

TABLE A

### NATURAL GAS (G 20) II<sub>2</sub>H3P

Nominal heat Input net QMS	21.0 kW		
Minimum heat Input net	3.7 kW		
Nominal heat output	20.4 kW		
Nominal heat output condensing	22.1 kW		
Minimum heat output	3.5 kW		
Minimum heat output condensing	3.9 kW		
Inlet pressure	20 mbar	Gas rate after 10 minutes	Max 2.1 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h
Fan speed	Max 5200 rpm - 173 Hz	Combustion % CO <sub>2</sub> :	9.0 (+ 0.5 / - 0.5) Case On
C.H.	min 1200 rpm - 40 Hz		9.0 (+ 0.5 / - 0.5) Case Off
Electrical supply:	230 V ~ 50 Hz		
External fuse rating:	3 A	Internal fuse F1:	3.15 A (20 mm To BS 4265)
Dry weight :	31 Kg	Water content C.H.:	0.8 Litre
		Water content D.H.W.:	0.2 Litre
Gas Supply Connection	15 mm compression isolating valve		
Flow connection C.H.	22 mm compression isolating valve		
Return connection C.H.	22 mm compression isolating valve		
Inlet connection D.H.W.	15 mm compression isolating valve		
Outlet connection D.H.W.	15 mm compression valve		
Safety discharge C.H.	15 mm copper pipe		
Condensation drain	3/4" (21.5 mm) push fit over flow		
Max cold water capacity without additional expansion vessel	110 Litre		
Sealed water system C.H.			
Max pressure PHS	2.5 bar		
Minimum working pressure	0.5 bar		
7 Litres expansion vessel pre-charge-pressure	0.5 bar		
Central Heating operating temperature	Max 80 °C	min 35 °C	
Design flow rate	1066 l/h 20 °C rise		
Minimum flow rate C.H.	350 l/h		
D.H.W. flow rate 30 °C rise	11.9 l/min		
D.H.W. flow rate 35 °C rise	10.2 l/min		
D.H.W. flow rate 40 °C rise	8.9 l/min	10°C Inlet temperature	
D.H.W. temperature	Max 60 °C	min 35 °C	
Fan speed D.H.W.	Max 6200 rpm - 207 Hz	min 1200 rpm - 40 Hz	
Qmw Input Net	Max 25.5 kW	min 3.7 kW	
D.H.W. Pressure Pmw	Max 6.5 bar		
D.H.W. Pressure Pmw	min 0.5 bar		
D.H.W. Minimum Flow Rate	2.5 l/min		
Flue outlet nom. diameter	100 mm specially supplied with boilers (If required)		
Destination:	GB, IE	Category: II <sub>2</sub> H3P	
Flue Type: C13 - C33 - C53	SEDBUK A	Electrical protection index: IP X4 D	
LWA sound power level, indoors	50.5 dB	NO <sub>x</sub> class 5 - 24.40 mg/kWh	

ErP		D.H.W.	
Seasonal space heating energy efficiency class	<b>A</b>	Water heating energy efficiency class	<b>A</b>
<b>η<sub>s</sub></b> seasonal space heating energy efficiency	91.7 %	Load Profile	<b>XL</b>
<b>P<sub>n</sub></b> nominal heat input	21.0 kW	<b>η<sub>wh</sub></b> water heating energy efficiency	85.1 %
<b>P<sub>4</sub></b> nominal heat output high temperature	20.4 kW	<b>Q<sub>fuel</sub></b> daily fuel consumption	22.774 kWh
<b>P<sub>1</sub></b> nominal heat output (30% P <sub>n</sub> ) low temperature	6.1 kW	<b>AFC</b> Annual fuel consumption	17.284 GJ
		<b>Q<sub>elec</sub></b> daily electricity consumption	0.2046 kWh
		<b>AEC</b> annual electricity consumption	44.802 kWh
<b>μ<sub>4</sub></b> efficiency at nominal heat output high temperature	87.3 %		
<b>μ<sub>1</sub></b> efficiency at 30% nominal heat output low temperature	97.0 %		
<b>Auxiliary electricity consumption:</b>			
<b>e<sub>lmax</sub></b> at full load	0.034 kW	<b>PSB</b> in standby mode	0.005 kW
<b>e<sub>lmin</sub></b> at part load	0.016 kW	<b>P<sub>stby</sub></b> standby heat loss	0.028 kW

### 3.1 TECHNICAL DATA

## HE 25 C COMPACT

TABLE B

### LPG ( G 31) II<sub>2</sub>H3P

Nominal heat Input net QMS	21.0 kW		
Minimum heat Input net	3.7 kW		
Nominal heat output	20.4 kW		
Nominal heat output condensing	22.1 kW		
Minimum heat output	3.5 kW		
Minimum heat output condensing	3.9 kW		
Inlet pressure 37 mbar	Gas rate after 10 minutes	Max 2.1 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h	
Fan speed Max 5000 rpm - 167 Hz	Combustion % CO <sub>2</sub> : 10.5 (+ 0.5 / - 0.5) Case On		
C.H. min 1200 rpm - 40 Hz	10.5 (+ 0.5 / - 0.5) Case Off		
Electrical supply: 230 V ~ 50 Hz			
External fuse rating: 3 A		Internal fuse F1: 3.15 A (20 mm To BS 4265)	
Dry weight : 31 Kg	Water content C.H.: 0.8 Litre	Water content D.H.W.: 0.2 Litre	
Gas Supply Connection	3/4"		
Flow connection C.H.	3/4		
Return connection C.H.	3/4		
Inlet connection D.H.W.	1/2"		
Outlet connection D.H.W.	1/2"		
Safety discharge C.H.	15 mm copper pipe		
Condensation drain	21.5 mm push fit over flow		
Max cold water capacity without additional expansion vessel		110 Litre	
Sealed water system C.H.			
Max pressure PHS	2.5 bar		
Minimum working pressure	0.5 bar		
7 Litres expansion vessel pre-charge-pressure	0.5 bar		
Central Heating operating temperature	Max 80 °C	min 35 °C	
Design flow rate	1066 l/h 20 °C rise		
Minimum flow rate C.H.	350 l/h		
D.H.W. flow rate 30 °C rise	11.9 l/min		
D.H.W. flow rate 35 °C rise	10.2 l/min		
D.H.W. flow rate 40 °C rise	8.9 l/min 10°C Inlet temperature		
D.H.W. temperature	Max 60 °C	min 35 °C	
Fan speed D.H.W.	Max 6000 rpm - 200 Hz	min 1200 rpm - 40 Hz	
Qmw Input Net	Max 25.5 kW	min 3.7 kW	
D.H.W. Pressure Pmw	Max 6.5 bar		
D.H.W. Pressure Pmw	min 0.5 bar		
D.H.W. Minimum Flow Rate	2.5 l/min		
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)			
Destination: GB, IE		Category: II2H3P	
Flue Type: C13 - C33 - C53		SEDBUK A	Electrical protection index: IP X4 D
LWA sound power level, indoors	50.5 dB	NO <sub>x</sub> class 5 - 24.40 mg/kWh	
<b>ErP</b>			
Seasonal space heating energy efficiency class	<b>A</b>	<b>D.H.W.</b>	
<b>µs</b> seasonal space heating energy efficiency	91.7 %	Water heating energy efficiency class	
<b>Pn</b> nominal heat input	21.0 kW	Load Profile	
<b>P4</b> nominal heat output high temperature	20.4 kW	<b>XL</b>	
<b>P1</b> nominal heat output (30% Pn) low temperature	6.1 kW	<b>µwh</b> water heating energy efficiency	
		85.1 %	
		<b>Q<sub>fuel</sub></b> daily fuel consumption	
		22.774 kWh	
		<b>AFC</b> Annual fuel consumption	
		17.284 GJ	
		<b>Q<sub>elec</sub></b> daily electricity consumption	
		0.2046 kWh	
		<b>AEC</b> annual electricity consumption	
		44.802 kWh	
<b>µ4</b> efficiency at nominal heat output high temperature	87.3 %		
<b>µ1</b> efficiency at 30% nominal heat output low temperature	97.0 %		
<b>Auxiliary electricity consumption:</b>			
<b>elmax</b> at full load	0.034 kW	<b>PSB</b> in standby mode	0.005 kW
<b>elmin</b> at part load	0.016 kW	<b>Pstby</b> standby heat loss	0.028 kW

### 3.2 TECHNICAL DATA

TABLE C

## HE 30 C COMPACT NATURAL GAS (G 20) II<sub>2</sub>H3P

Nominal heat Input net QMS		25.0 kW	
Minimum heat Input net		4.0 kW	
Nominal heat output		24.3 kW	
Nominal heat output condensing		26.4 kW	
Minimum heat output		3.7 kW	
Minimum heat output condensing		4.2 kW	
Inlet pressure	20 mbar	Gas rate after 10 minutes	Max 2.6 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h
Fan speed	Max 5400 rpm - 180 Hz	Combustion % CO <sub>2</sub>	9.0 (+ 0.5 / - 0.5) Case On
C.H.	min 1200 rpm - 40 Hz		9.0 (+ 0.5 / - 0.5) Case Off
Electrical supply: 230 V ~ 50 Hz			
External fuse rating: 3 A		Internal fuse F1: 3.15 A (20 mm To BS 4265)	
Dry weight : 32 Kg		Water content C.H.: 0.8 Litre	
		Water content D.H.W.: 0.2 Litre	
Gas Supply Connection		3/4"	
Flow connection C.H.		3/4	
Return connection C.H.		3/4	
Inlet connection D.H.W.		1/2"	
Outlet connection D.H.W.		1/2"	
Safety discharge C.H.		15 mm copper pipe	
Condensation drain		21.5 mm push fit over flow	
Max cold water capacity without additional expansion vessel		110 Litre	
Sealed water system C.H.			
Max pressure PHS		2.5 bar	
Minimum working pressure		0.5 bar	
7 Litres expansion vessel pre-charge-pressure		0.5 bar	
Central Heating operating temperature		Max 80 °C min 35 °C	
Design flow rate		1811 l/h 20 °C rise	
Minimum flow rate C.H.		350 l/h	
D.H.W. flow rate 30 °C rise		14.0 l/min	
D.H.W. flow rate 35 °C rise		12.0 l/min	
D.H.W. flow rate 40 °C rise		10.5 l/min 10°C Inlet temperature	
D.H.W. temperature		Max 60 °C min 35 °C	
Fan speed D.H.W.		Max 6600 rpm - 220 Hz min 1200 rpm - 40 Hz	
Qmw Input Net		Max 31.0 kW min 4.0 kW	
D.H.W. Pressure Pmw		Max 6.5 bar	
D.H.W. Pressure Pmw		min 0.5 bar	
D.H.W. Minimum Flow Rate		2.5 l/min	
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)			
Destination: GB, IE		Category: II <sub>2</sub> H3P	
Flue Type: C13 - C33 - C53		SEDBUK A Electrical protection index: IP X4 D	
LWA sound power level, indoors		52 dB NO <sub>x</sub> class 5 - 36.06 mg/kWh	
<b>ErP</b>			
Seasonal space heating energy efficiency class		<b>A</b>	
<b>µs</b> seasonal space heating energy efficiency		92.0 %	
<b>Pn</b> nominal heat input		25.0 kW	
<b>P4</b> nominal heat output high temperature		24.3 kW	
<b>P1</b> nominal heat output (30% Pn) low temperature		7.9 kW	
<b>D.H.W.</b>			
Water heating energy efficiency class		<b>A</b>	
Load Profile		<b>XL</b>	
<b>µwh</b> water heating energy efficiency		84.86 %	
<b>Qfuel</b> daily fuel consumption		22.991 kWh	
<b>AFC</b> Annual fuel consumption		17.415 GJ	
<b>Qelec</b> daily electricity consumption		0.1533 kWh	
<b>AEC</b> annual electricity consumption		33.564 kWh	
<b>µ4</b> efficiency at nominal heat output high temperature		87.4 %	
<b>µ1</b> efficiency at 30% nominal heat output low temperature		97.1 %	
<b>Auxiliary electricity consumption:</b>			
<b>elmax</b> at full load		0.034 kW	
<b>elmin</b> at part load		0.016 kW	
<b>PSB</b> in standby mode		0.005 kW	
<b>Pstby</b> standby heat loss		0.028 kW	

### 3.3 TECHNICAL DATA

TABLE D

## HE 30 C COMPACT LPG (G 31) II<sub>2</sub>H3P

Nominal heat Input net QMS	25.0 kW	
Minimum heat Input net	4.0 kW	
Nominal heat output	24.3 kW	
Nominal heat output condensing	26.4 kW	
Minimum heat output	3.7 kW	
Minimum heat output condensing	4.2 kW	
Inlet pressure 37 mbar	Gas rate after 10 minutes	Max 2.6 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h
Fan speed	Max 5200 rpm - 173 Hz	Combustion % CO <sub>2</sub> : 10.5 (+ 0.5 / - 0.5) Case On
C.H.	min 1200 rpm - 40 Hz	10.5 (+ 0.5 / - 0.5) Case Off
Electrical supply: 230 V ~ 50 Hz		
External fuse rating: 3 A Internal fuse F1: 3.15 A (20 mm To BS 4265)		
Dry weight : 32 Kg	Water content C.H.: 0.8 Litre	Water content D.H.W.: 0.2 Litre
Gas Supply Connection	3/4"	
Flow connection C.H.	3/4	
Return connection C.H.	3/4	
Inlet connection D.H.W.	1/2"	
Outlet connection D.H.W.	1/2"	
Safety discharge C.H.	15 mm copper pipe	
Condensation drain	21.5 mm push fit over flow	
Max cold water capacity without additional expansion vessel 110 Litre		
Sealed water system C.H.		
Max pressure PHS	2.5 bar	
Minimum working pressure	0.5 bar	
7 Litres expansion vessel pre-charge-pressure	0.5 bar	
Central Heating operating temperature	Max 80 °C	min 35 °C
Design flow rate	1811 l/h	20 °C rise
Minimum flow rate C.H.	350 l/h	
D.H.W. flow rate 30 °C rise	14.0 l/min	
D.H.W. flow rate 35 °C rise	12.0 l/min	
D.H.W. flow rate 40 °C rise	10.5 l/min	10°C Inlet temperature
D.H.W. temperature	Max 60 °C	min 35 °C
Fan speed D.H.W.	Max 6400 rpm - 213 Hz	min 1200 rpm - 40 Hz
Qmw Input Net	Max 31.0 kW	min 4.0 kW
D.H.W. Pressure Pmw	Max 6.5 bar	
D.H.W. Pressure Pmw	min 0.5 bar	
D.H.W. Minimum Flow Rate	2.5 l/min	
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)		
Destination: GB, IE Category: II <sub>2</sub> H3P		
Flue Type: C13 - C33 - C53 SEDBUK A Electrical protection index: IP X4 D		
LWA sound power level, indoors 52 dB NO <sub>x</sub> class 5 - 36.06 mg/kWh		
<b>ErP</b>		
Seasonal space heating energy efficiency class	<b>A</b>	<b>D.H.W.</b>
<b>µs</b> seasonal space heating energy efficiency	92.0 %	Water heating energy efficiency class
<b>Pn</b> nominal heat input	25.0 kW	Load Profile
<b>P4</b> nominal heat output high temperature	24.3 kW	<b>XL</b>
<b>P1</b> nominal heat output (30% Pn) low temperature	7.9 kW	<b>µwh</b> water heating energy efficiency
		84.86 %
		<b>Qfuel</b> daily fuel consumption
		22.991 kWh
		<b>AFC</b> Annual fuel consumption
		17.415 GJ
		<b>Qelec</b> daily electricity consumption
		0.1533 kWh
		<b>AEC</b> annual electricity consumption
		33.564 kWh
<b>µ4</b> efficiency at nominal heat output high temperature	87.4 %	
<b>µ1</b> efficiency at 30% nominal heat output low temperature	97.1 %	
<b>Auxiliary electricity consumption:</b>		
<b>elmax</b> at full load	0.034 kW	<b>PSB</b> in standby mode
<b>elmin</b> at part load	0.016 kW	<b>Pstby</b> standby heat loss
		0.005 kW
		0.028 kW



### 3.4 TECHNICAL DATA

## HE 35 C COMPACT



TABLE E

### NATURAL GAS (G 20) II<sub>2</sub>H3P

Nominal heat Input net QMS	29.0 kW		
Minimum heat Input net	4.0 kW		
Nominal heat output	28.3 kW		
Nominal heat output condensing	30.5 kW		
Minimum heat output	3.7 kW		
Minimum heat output condensing	4.1 kW		
Inlet pressure 20 mbar	Gas rate after 10 minutes	Max 3.1 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h	
Fan speed	Max 6200 rpm - 206 Hz	Combustion % CO <sub>2</sub> :	9.0 (+ 0.5 / - 0.5) Case On
C.H.	min 1200 rpm - 40 Hz		9.0 (+ 0.5 / - 0.5) Case Off
Electrical supply: 230 V ~ 50 Hz			
External fuse rating: 3 A		Internal fuse F1: 3.15 A (20 mm To BS 4265)	
Dry weight : 31 Kg	Water content C.H.: 0.8 Litre	Water content D.H.W.: 0.2 Litre	
Gas Supply Connection	3/4"		
Flow connection C.H.	3/4		
Return connection C.H.	3/4		
Inlet connection D.H.W.	1/2"		
Outlet connection D.H.W.	1/2"		
Safety discharge C.H.	15 mm copper pipe		
Condensation drain	21.5 mm push fit over flow		
Max cold water capacity without additional expansion vessel		110 Litre	
Sealed water system C.H.			
Max pressure PHS	2.5 bar		
Minimum working pressure	0.5 bar		
7 Litres expansion vessel pre-charge-pressure	0.5 bar		
Central Heating operating temperature	Max 80 °C	min 35 °C	
Design flow rate	1066 l/h 20 °C rise		
Minimum flow rate C.H.	350 l/h		
D.H.W. flow rate 30 °C rise	16.7 l/min		
D.H.W. flow rate 35 °C rise	14.3 l/min		
D.H.W. flow rate 40 °C rise	12.5 l/min 10°C Inlet temperature		
D.H.W. temperature	Max 60 °C	min 35 °C	
Fan speed D.H.W.	Max 7300 rpm - 243 Hz	min 1200 rpm - 40 Hz	
Qmw Input Net	Max 36.0 kW	min 4.0 kW	
D.H.W. Pressure Pmw	Max 6.5 bar		
D.H.W. Pressure Pmw	min 0.5 bar		
D.H.W. Minimum Flow Rate	2.5 l/min		
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)			
Destination: GB, IE		Category: II <sub>2</sub> H3P	
Flue Type: C13 - C33 - C53 - C63 - C83		SEDBUK A	Electrical protection index: IP X4 D
LWA sound power level, indoors	50.5 dB	NO <sub>x</sub> class 5 - 24.72 mg/kWh	
<b>ErP</b>		<b>D.H.W.</b>	
Seasonal space heating energy efficiency class	<b>A</b>	Water heating energy efficiency class	<b>A</b>
$\mu_s$ seasonal space heating energy efficiency	93.2 %	Load Profile	<b>XL</b>
<b>P<sub>n</sub></b> nominal heat input	29.0 kW	$\mu_{wh}$ water heating energy efficiency	83.6 %
<b>P<sub>4</sub></b> nominal heat output high temperature	28.3 kW	<b>Q<sub>fuel</sub></b> daily fuel consumption	23.364 kWh
<b>P<sub>1</sub></b> nominal heat output (30% P <sub>n</sub> ) low temperature	9.5 kW	<b>AFC</b> Annual fuel consumption	17.641 GJ
		<b>Q<sub>elec</sub></b> daily electricity consumption	0.1736 kWh
		<b>AEC</b> annual electricity consumption	38.023 kWh
$\mu_4$ efficiency at nominal heat output high temperature	87.8 %		
$\mu_1$ efficiency at 30% nominal heat output low temperature	97.0 %		
<b>Auxiliary electricity consumption:</b>			
<b>e<sub>lmax</sub></b> at full load	0.034 kW	<b>PSB</b> in standby mode	0.005 kW
<b>e<sub>lmin</sub></b> at part load	0.016 kW	<b>P<sub>stby</sub></b> standby heat loss	0.028 kW

**3.5 TECHNICAL DATA**  
**TABLE F**

**HE 35 C COMPACT**  
**LPG ( G 31) II<sub>2</sub>H3P**

Nominal heat Input net QMS	29.0 kW	
Minimum heat Input net	4.0 kW	
Nominal heat output	28.3 kW	
Nominal heat output condensing	30.5kW	
Minimum heat output	3.7 kW	
Minimum heat output condensing	4.1 kW	
Inlet pressure 37 mbar	Gas rate after 10 minutes	Max 1.1 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h
Fan speed Max 6000 rpm - 200 Hz	Combustion % CO <sub>2</sub> : 10.5 (+ 0.5 / - 0.5) Case On	
C.H. min 1200 rpm - 40 Hz	10.5 (+ 0.5 / - 0.5) Case Off	
Electrical supply: 230 V ~ 50 Hz		
External fuse rating: 3 A	Internal fuse F1: 3.15 A (20 mm To BS 4265)	
Dry weight : 31 Kg	Water content C.H.: 0.8 Litre	Water content D.H.W.: 0.2 Litre
Gas Supply Connection	3/4"	
Flow connection C.H.	3/4	
Return connection C.H.	3/4	
Inlet connection D.H.W.	1/2"	
Outlet connection D.H.W.	1/2"	
Safety discharge C.H.	15 mm copper pipe	
Condensation drain	21.5 mm push fit over flow	
Max cold water capacity without additional expansion vessel	110 Litre	
Sealed water system C.H.		
Max pressure PHS	2.5 bar	
Minimum working pressure	0.5 bar	
7 Litres expansion vessel pre-charge-pressure	0.5 bar	
Central Heating operating temperature	Max 80 °C	min 35 °C
Design flow rate	1066 l/h 20 °C rise	
Minimum flow rate C.H.	350 l/h	
D.H.W. flow rate 30 °C rise	16.7 l/min	
D.H.W. flow rate 35 °C rise	14.3 l/min	
D.H.W. flow rate 40 °C rise	12.5 l/min 10°C Inlet temperature	
D.H.W. temperature	Max 60 °C	min 35 °C
Fan speed D.H.W.	Max 7100 rpm - 236 Hz	min 1200 rpm - 40 Hz
Qmw Input Net	Max 36.0 kW	min 4.0 kW
D.H.W. Pressure Pmw	Max 6.5 bar	
D.H.W. Pressure Pmw	min 0.5 bar	
D.H.W. Minimum Flow Rate	2.5 l/min	
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)		
Destination: GB, IE	Category: II <sub>2</sub> H3P	
Flue Type: C13 - C33 - C53 - C63 - C83	SEDBUK A	Electrical protection index: IP X4 D
LWA sound power level, indoors 50.5 dB	NO <sub>x</sub> class 5 - 24.72 mg/kWh	
<b>ErP</b>		<b>D.H.W.</b>
Seasonal space heating energy efficiency class 		Water heating energy efficiency class 
<b>µs</b> seasonal space heating energy efficiency	93.2 %	Load Profile <b>XL</b>
<b>Pn</b> nominal heat input	29.0 kW	<b>µwh</b> water heating energy efficiency
<b>P4</b> nominal heat output high temperature	28.3 kW	<b>Qfuel</b> daily fuel consumption
<b>P1</b> nominal heat output (30% Pn) low temperature	9.5 kW	<b>AFC</b> Annual fuel consumption
		<b>Qelec</b> daily electricity consumption
		<b>AEC</b> annual electricity consumption
<b>µ4</b> efficiency at nominal heat output high temperature	87.8 %	
<b>µ1</b> efficiency at 30% nominal heat output low temperature	97.0 %	
<b>Auxiliary electricity consumption:</b>		
<b>elmax</b> at full load	0.034 kW	<b>PSB</b> in standby mode
<b>elmin</b> at part load	0.016 kW	<b>Pstby</b> standby heat loss
		0.005 kW
		0.028 kW

### 3.6 TECHNICAL DATA

TABLE G



## HE 40 C COMPACT NATURAL GAS (G 20) II<sub>2</sub>H3P

Nominal heat Input net QMS		33.0 kW	
Minimum heat Input net		4.0 kW	
Nominal heat output		31.5 kW	
Nominal heat output condensing		34.3 kW	
Minimum heat output		3.6 kW	
Minimum heat output condensing		4.02 kW	
Inlet pressure	20 mbar	Gas rate after 10 minutes	Max 2.6 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h
Fan speed	Max 6800 rpm - 180 Hz	Combustion % CO <sub>2</sub>	9.0 (+ 0.5 / - 0.5) Case On
C.H.	min 1200 rpm - 40 Hz		9.0 (+ 0.5 / - 0.5) Case Off
Electrical supply: 230 V ~ 50 Hz			
External fuse rating: 3 A		Internal fuse F1: 3.15 A (20 mm To BS 4265)	
Dry weight : 32 Kg		Water content C.H.: 0.8 Litre	
		Water content D.H.W.: 0.2 Litre	
Gas Supply Connection		3/4"	
Flow connection C.H.		3/4	
Return connection C.H.		3/4	
Inlet connection D.H.W.		1/2"	
Outlet connection D.H.W.		1/2"	
Safety discharge C.H.		15 mm copper pipe	
Condensation drain		21.5 mm push fit over flow	
Max cold water capacity without additional expansion vessel		110 Litre	
Sealed water system C.H.			
Max pressure PHS		2.5 bar	
Minimum working pressure		0.5 bar	
7 Litres expansion vessel pre-charge-pressure		0.5 bar	
Central Heating operating temperature		Max 80 °C min 35 °C	
Design flow rate		1811 l/h 20 °C rise	
Minimum flow rate C.H.		350 l/h	
D.H.W. flow rate 30 °C rise		18.6 l/min	
D.H.W. flow rate 35 °C rise		16.9 l/min	
D.H.W. flow rate 40 °C rise		14.0 l/min 10°C Inlet temperature	
D.H.W. temperature		Max 60 °C min 35 °C	
Fan speed D.H.W.		Max 8300 rpm - 220 Hz min 1200 rpm - 40 Hz	
Qmw Input Net		Max 41.0 kW min 4.0 kW	
D.H.W. Pressure Pmw		Max 6.5 bar	
D.H.W. Pressure Pmw		min 0.5 bar	
D.H.W. Minimum Flow Rate		2.5 l/min	
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)			
Destination: GB, IE		Category: II <sub>2</sub> H3P	
Flue Type: C13 - C33 - C53 - C63 - C83		SEDBUK A Electrical protection index: IP X4 D	
LWA sound power level, indoors 52 dB		NO <sub>x</sub> class 5 - 19.42 mg/kWh	
<b>ErP</b>		<b>D.H.W.</b>	
Seasonal space heating energy efficiency class <b>A</b>		Water heating energy efficiency class <b>A</b>	
<b>µs</b> seasonal space heating energy efficiency 92.6 %		Load Profile <b>XL</b>	
<b>Pn</b> nominal heat input 33.0 kW		<b>µwh</b> water heating energy efficiency 84.86 %	
<b>P4</b> nominal heat output high temperature 31.5 kW		<b>Qfuel</b> daily fuel consumption 23.339 kWh	
<b>P1</b> nominal heat output (30% Pn) low temperature 10.8 kW		<b>AFC</b> Annual fuel consumption 17.626 GJ	
		<b>Qelec</b> daily electricity consumption 0.176 kWh	
		<b>AEC</b> annual electricity consumption 38.552 kWh	
<b>µ4</b> efficiency at nominal heat output high temperature 86.0 %			
<b>µ1</b> efficiency at 30% nominal heat output low temperature 97.9 %			
<b>Auxiliary electricity consumption:</b>			
<b>elmax</b> at full load 0.034 kW		<b>PSB</b> in standby mode 0.005 kW	
<b>elmin</b> at part load 0.016 kW		<b>Pstby</b> standby heat loss 0.028 kW	
0.033 kW			

### 3.7 TECHNICAL DATA

TABLE H

## HE 40 C COMPACT LPG (G 31) II<sub>2</sub>H3P

Nominal heat Input net QMS	33.0 kW		
Minimum heat Input net	4.0 kW		
Nominal heat output	31.5 kW		
Nominal heat output condensing	34.3 kW		
Minimum heat output	3.6 kW		
Minimum heat output condensing	4.0 kW		
Inlet pressure	37 mbar	Gas rate after 10 minutes	Max 1.4 m <sup>3</sup> /h - min. 0.4 m <sup>3</sup> /h
Fan speed	Max 6600 rpm - 173 Hz	Combustion % CO <sub>2</sub>	10.5 (+ 0.5 / - 0.5) Case On
C.H.	min 1200 rpm - 40 Hz		10.5 (+ 0.5 / - 0.5) Case Off
Electrical supply: 230 V ~ 50 Hz			
External fuse rating: 3 A		Internal fuse F1: 3.15 A (20 mm To BS 4265)	
Dry weight : 32 Kg	Water content C.H.: 0.8 Litre	Water content D.H.W.: 0.2 Litre	
Gas Supply Connection	3/4"		
Flow connection C.H.	3/4		
Return connection C.H.	3/4		
Inlet connection D.H.W.	1/2"		
Outlet connection D.H.W.	1/2"		
Safety discharge C.H.	15 mm copper pipe		
Condensation drain	21.5 mm push fit over flow		
Max cold water capacity without additional expansion vessel		110 Litre	
Sealed water system C.H.			
Max pressure PHS	2.5 bar		
Minimum working pressure	0.5 bar		
7 Litres expansion vessel pre-charge-pressure	0.5 bar		
Central Heating operating temperature	Max 80 °C	min 35 °C	
Design flow rate	1811 l/h	20 °C rise	
Minimum flow rate C.H.	350 l/h		
D.H.W. flow rate 30 °C rise	20.1 l/min		
D.H.W. flow rate 35 °C rise	17.3 l/min		
D.H.W. flow rate 40 °C rise	15.1 l/min	10°C Inlet temperature	
D.H.W. temperature	Max 60 °C	min 35 °C	
Fan speed D.H.W.	Max 8100 rpm - 213 Hz	min 1200 rpm - 40 Hz	
Qmw Input Net	Max 41.0 kW	min 4.0 kW	
D.H.W. Pressure Pmw	Max 6.5 bar		
D.H.W. Pressure Pmw	min 0.5 bar		
D.H.W. Minimum Flow Rate	2.5 l/min		
Flue outlet nom. diameter 100 mm specially supplied with boilers (If required)			
Destination: GB, IE		Category: II <sub>2</sub> H3P	
Flue Type: C13 - C33 - C53 - C63 - C83		SEDBUK A	Electrical protection index: IP X4 D
LWA sound power level, indoors	52 dB	NO <sub>x</sub> class 5 - 19.42 mg/kWh	
<b>ErP</b>		<b>D.H.W.</b>	
Seasonal space heating energy efficiency class		Water heating energy efficiency class	
<b>μs</b> seasonal space heating energy efficiency	92.6 %	Load Profile	<b>XL</b>
<b>Pn</b> nominal heat input	33.0 kW	<b>μwh</b> water heating energy efficiency	84.86 %
<b>P4</b> nominal heat output high temperature	31.5 kW	<b>Qfuel</b> daily fuel consumption	23.339 kWh
<b>P1</b> nominal heat output (30% Pn) low temperature	10.8 kW	<b>AFC</b> Annual fuel consumption	17.626 GJ
		<b>Qelec</b> daily electricity consumption	0.176 kWh
		<b>AEC</b> annual electricity consumption	38.552 kWh
<b>μ4</b> efficiency at nominal heat output high temperature	86.0 %		
<b>μ1</b> efficiency at 30% nominal heat output low temperature	97.9 %		
<b>Auxiliary electricity consumption:</b>			
<b>elmax</b> at full load	0.034 kW	<b>PSB</b> in standby mode	0.005 kW
<b>elmin</b> at part load	0.016 kW	<b>Pstby</b> standby heat loss	0.028 kW

## 4 GENERAL REQUIREMENTS

### 4.1 SAFETY

#### **Gas Safety (Installation and Use) Regulations.**

It is law that all gas appliances are installed and serviced by a Gas Safe registered installer in accordance with the above regulations and these installation instructions. All registered installers carry a Gas Safe I.D. card and have a registration number. Both should be recorded in your Benchmark commissioning checklist. You can check your installer on the Gas Safe register ([www.gassaferegister.co.uk](http://www.gassaferegister.co.uk)). Failure to install appliances correctly could lead to prosecution. It is in your own interest, and that of your safety, to ensure the law is complied with. Check the boiler and flue is the correct type for installation undertaken.

The installation of the boiler MUST be in accordance with the latest IET (BS 7671) Wiring Regulations, local building regulations, bye-laws of the local water authority, the building regulations and the Building Standards (Scotland) and any relevant requirements of the local authority.

### 4.2 GENERAL INFORMATION

Both the user and the manufacturer rely heavily on the installer, whose job it is to install the combination boiler and connect it to a correctly designed heating system. Acquaint yourself with the relevant British Standards concerning installation requirements. If you need further advice on any points contact the Technical Services Office on 0113 2527007 who would be pleased to help. It is recommended that tools suitable for brass fittings are used, and have a capability to accommodate hexagon sizes up to 50 mm.

#### **APPLICABLE CODES OF PRACTICE**

Ref: Documents.

Detailed recommendations are contained in the following British Standard Codes of Practice:

BS6891:2015: Low pressure installation pipes.

BS6798: Installation of gas fired hot water boilers of rated input not exceeding 70 kW.

BSEN12828: Design for water based heating systems.

BSEN12831: Heating systems in buildings, Method for calculation of the design heat load.

BSEN14336: Installation & commissioning of water based heating systems.

BS5546: Installation of gas hot water supplies domestic purposes (2nd Family Gases).

BS5440: 1 Refers to flues.

BSEN 15502-2-2:2014, BS EN 15502-1:2012+A1:2015, BS EN 15502-2-1.2012: Gas fired central heating boilers.

I.S. 813: Domestic gas Installations.

The followings standards give valuable additional information:

BS 7074: Expansion vessels and ancillary equipment for sealed water system.

BS 7593: Treatment of water in domestic hot water and central heating system.

#### **Health & Safety Document No.635 The Electricity at Work Regulations, 1989.**

#### **IMPORTANT:**

These appliances are CE certificated for safety and performance. It is therefore important that no external control devices e.g. flue dampers, economisers etc., are directly connected to this appliance unless covered by these Installation and Service Instructions or as otherwise recommended by Ravenheat in writing. If in doubt please enquire.

Any direct connection of a control device not approved by Ravenheat could invalidate the certification and the normal appliance warranty.

It could also infringe the Gas Safety regulations and the above regulations.

#### **NOTE:**

The Ravenheat HE 25/30/35/40 C combi boiler has been tested and examined by CERTIGAZ, in according to:

2006/95 EEC: the low voltage directive.

2004/108 ECC: EMC directive.

2009/142 EEC: gas directive

CE 1935/2004: materials into contact with foodstuffs

2009/125/EC: Ecodesign for energy-using appliance.

2010/30/UE: Indication by labelling of the consumption of energy by energy-related products.

811/2013: Delegated regulation.

813/2013: Delegated regulation.

Manufacturers instructions must NOT be taken in any way as overriding statutory obligations. If in doubt on any point please consult Ravenheat.

#### 4.3 LOCATION OF BOILER

Siting of Ravenheat HE 25/30/35/40 C combi boiler must be as follows.

The position of installation should be within the building, unless otherwise protected by a suitable enclosure.

Adequate space for installation, servicing and air circulation around the boiler must be allowed for.

Ravenheat HE 25/30/35/40 C combi boiler must be fitted on a flat and vertical wall capable of adequately supporting the weight of the boiler and any ancillary equipment.

The appliance may be fitted on a combustible wall. Insulation between the wall and the boiler is not necessary, unless required by the local authority.

For electrical safety reasons there must be no access available from the back of the boiler.

**The boiler must not be fitted outside.**

**LPG versions of this appliance shall not be installed in cellars or basements.**

#### 4.4 CLEARANCES AROUND THE APPLIANCE

##### **Side clearance:**

The position of the appliance must provide minimum clearance of 5mm as the side panels do not require removing for servicing.

However, if the option is preferred to remove the panels then a minimum clearance of 55 mm is required.

##### **Top clearance:**

The top clearance should be a minimum of 125 mm.

##### **Bottom clearance:**

A bottom clearance of 80 mm is required between the appliance and any surface.

Though 150 mm is preferred whenever possible.

##### **Front clearance:**

A minimum of 450 mm is required in front of the appliance for access during servicing, the front clearance can be reduced when installed in a cupboard, to 25 mm from the access door.

#### 4.5 IMPORTANT NOTICE

For installation into timber framed buildings, please refer to the Institute of Gas Engineers Document IGE/UP/7.

The boiler may be installed in any room or internal space, although particular attention is

Regulations applicable in Scotland, with respect to the installation of the combination boiler in a room or internal space containing a bath or shower.

Where a room sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control, utilising mains electricity should be situated so that it cannot be touched by a person using a bath or shower.

A compartment when used to enclose the combination boiler MUST be designed and constructed specifically for this purpose.

An existing cupboard, or compartment, may be used provided it is modified accordingly. Samples of the HE 25/30/35/40 C combi boiler have been examined by CERTIGAZ notification body, and are certified to comply with the essential requirements of the gas appliance.

Directive 90/396/EEC, the Low Voltage. Directive 72/23/EEC and shows compliance with the Electro Magnetic Compatibility. Directive 89/336/EEC and are therefore permitted to carry the CE Mark.

The appliance has been tested and approved by the WRc as meeting the requirements of G3 and L of the Building regulations and water Bylaws Scheme - Approved Products.

#### 4.6 GAS SUPPLY

A gas meter is connected to the service pipe by the Local Gas Supplier or the Local Gas Supplier contractor. An existing meter should be checked preferably by the Gas Supplier to ensure that the meter is adequate to deal with the rate of gas supply required for all appliances it serves. Installation pipes should be fitted in accordance with BS 6891:2015. Pipework from the meter to the boiler must be of adequate size

(22 mm) min to within at least one metre of the boiler, (15 mm) min. can then be used for remaining pipe work to the appliance.

A smaller size than the boiler inlet gas connection should not be used. The complete installation must be tested for soundness as described in the above code.

**N.B.** It is the responsibility of the Gas Installer to size the gas installation pipework in accordance with BS 6891:2015. Whilst the principle of the 1:1 gas valve ensures the Ravenheat range is able to deliver the full output at an inlet pressures as low as 14 mbar, other gas appliances in the property may not be as tolerant.

When operating pressures are found to be below the minimum meter outlet of 19 mbar these should be checked to ensure this is adequate for correct and safe operation.

Allowing for the acceptable pressure loss of 1 mbar across the installation pipework, it can be assumed that a minimum permitted operating pressure of 18 mbar (nat gas) will be delivered to the inlet of the appliance. (reference BS 6400-1 Clause 6.2 Pressure Absorption).

The external gas cock could further reduce the operating pressure when measured at its test point. The pressure drop is relative to the heat input to the boiler (kW), refer to graph below.

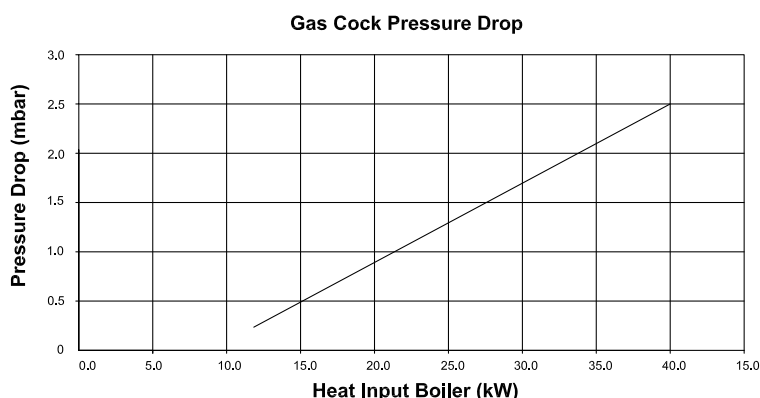


Fig.6

#### 4.7 FLUE SYSTEM

The terminal should be located where dispersal of combustion products is not impeded and with due regard for the damage or discolouration that might occur to building products in the vicinity (section 4.10).

The terminal must not be located in a place where it is likely to cause a nuisance in cold and/or humid weather as water vapour may condense on leaving the flue terminal. The effect of such plumbing must be considered.

The terminal must not be closer than 25 mm (1 inch) to any combustible material for protection of combustibles, refer to BS 5440: Part1.

Plumbing will occur at the terminal so, where possible, terminal positions which could cause a nuisance should be avoided.

The flue must be installed in accordance with the recommendations of BS 5440: Part 1.

#### IMPORTANT NOTES:

**For greater flue lengths see alternative flue instructions. Flue must be positioned in a place not likely to cause a nuisance from plumbing.**

**IMPORTANT NOTICE:** If the flue terminates below a balcony, above the ground, above a flat roof to which people have access, then a suitable **terminal guard** must be fitted if less than 2 metres high.

#### IMPORTANT:

The following notes are intended for general guidance.

The boiler **MUST** be installed so that the terminal is exposed to external air.

It is important that the position of the terminal allows the free passage of air across it at all times.

Minimum acceptable spacing from the terminal to obstructions and ventilation openings are specified in section 4.10.

**Note positions:** *Due to the terminal design, installation is possible with clearances less than those specified in BS 5440, Part 1*

#### NOTE:

The flue must be terminated in a place not likely to cause a nuisance.

A concentric vertical flue kit is available for longer flueing applications (see table 5 page 26).

For further details see vertical flue installation instructions.

#### 4.8 AIR SUPPLY

The following notes are intended for general guidance.

The room sealed fan flued boiler does not require a permanent air vent for combustion air supply.

Where installed in a cupboard or compartment ventilation is not required.

#### 4.9 WATER CIRCULATION (Central heating)

Detailed recommendations are given in BS 6798: 2014 - BSEN12828 - BSEN12831 - BSEN14336 (for smallbore and microbore central heating systems). The following notes are given for general guidance.

#### 4.10 PIPEWORK

Copper tubing to BSEN 1057:1 2006, BSEN 1172, BSEN 1652 and BSEN 1653, is recommended for water pipes. Jointing should be either capillary soldered or with compression fittings.

Where possible pipes should have a gradient to ensure air is carried naturally to air release points and water flows naturally to drain taps. It should be ensured as far as possible that the appliances heat exchanger is not a natural collecting point for air except where providing useful heat. Pipes should be insulated to prevent heat loss and to avoid freezing. Particular attention should be paid to pipes passing through ventilated spaces in roofs and under floors.

#### IMPORTANT:

A minimum length of 1 metre of copper pipe **MUST** be fitted to both the flow and return, as well as the cold mains inlet and the hot water outlet connections from the boiler before connecting to any plastic piping.

The water through the appliance heat exchanger circuit must exceed the min. 2.38 gals/min. (650 L/h) when the burner is firing. It is important to ensure that this rate is achieved when sections of the system are shut off either manually or by automatic controls.

If the volume of circulating water is too low, the boiler water temperature will rise too rapidly. This could cause noise in the system or even cause the safety thermostat to trip.

**This appliance is designed to work on a two pipe system as shown in fig.6.**

#### 4.11 BOILER INTERLOCK CONTROL

Central heating system controls should be installed to ensure the boiler is switched off when there is no demand for heating, in compliance with Building Regulations. The boiler has its own built in bypass.

If the system has thermostatic radiator valves on all radiators, or two port valves, then a bypass circuit must be fitted with an automatic bypass valve to ensure a flow of water should all valves be in the closed position (fig. 7). It is important that the system is flushed thoroughly before the appliance is fitted or left to operate (as recommended in BS 7593) in order to maintain an efficiently operating heating system. For replacement installations, the system **MUST** be flushed with the old boiler insitu, in order to prevent system debris. Once the system has been flushed, an inhibitor (suitable for stainless steel and aluminium heat exchanger) should be added (see section 4.18).

#### 4.12 DRAINING TAP

These must be located in accessible positions to permit the draining of the whole system. The taps must be at least 15 mm nominal size and manufactured in accordance with BS 2879.

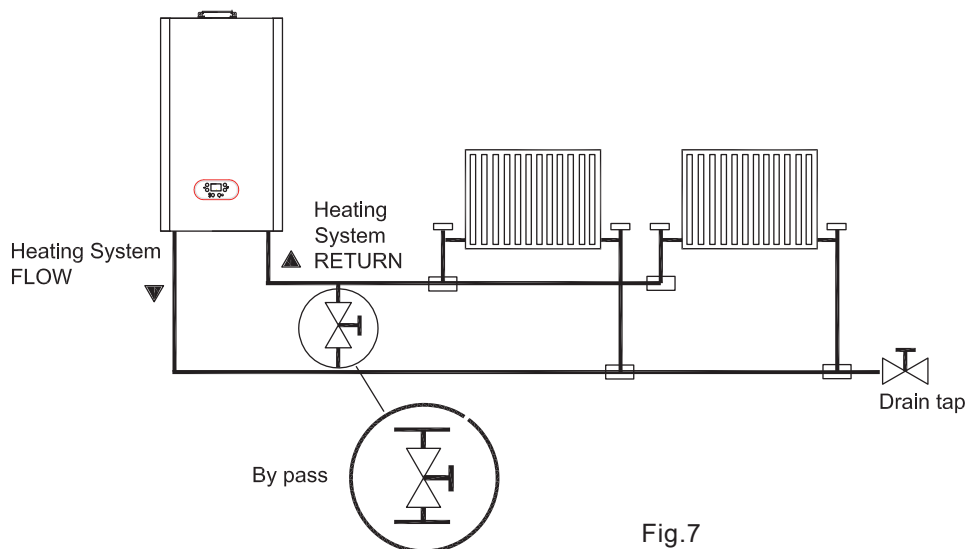


Fig.7



#### 4.13 AIR RELEASE POINTS

These must be fitted at all high points where air will naturally collect, and must be sited to facilitate complete filling of the system.

The appliance has an integral sealed expansion vessel to accommodate the increase of water volume when the system is heated. It can accept up to 7 L of expansion water. If the appliance is connected to a system with an unusually high water content, calculate the total expansion (see table 3) and add additional sealed expansion capacity as appropriate (Fig. 8). In general, modern systems below 7 L should not present any problem.

#### 4.14 MAINS WATER FEED. CENTRAL HEATING

There must be no direct connection to the mains water supply, even through a non-return valve, without the approval of the Local Water Authority.

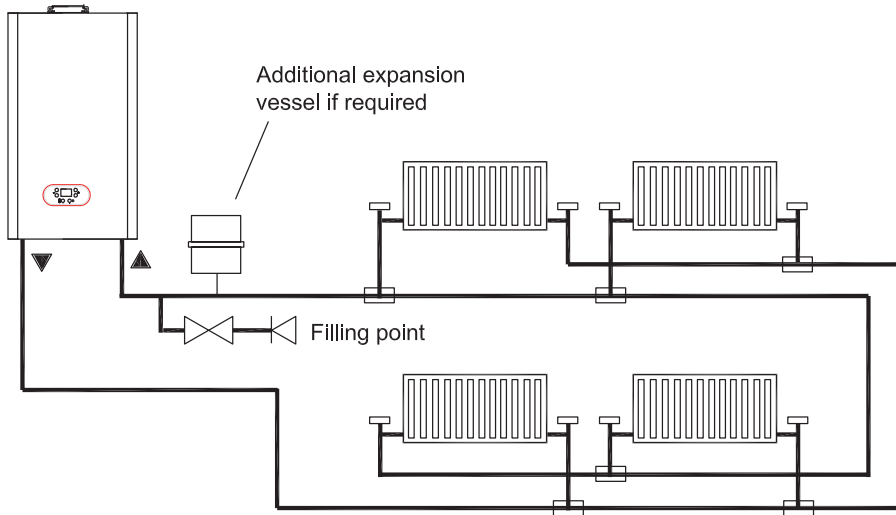


Fig.8

#### 4.15 SIZING OF ADDITIONAL EXPANSION VESSEL

Deduct from the value given in the table the 7 litre vessel supplied.

Safety valve setting (bar)	3.0									
Vessel charge pressure (bar)	0.5				1.0			1.5		
Initial system pressure (bar)	0.5	1.0	1.5	2.0	1.0	1.5	2.0	1.5	2.0	
Total water content of system	EXPANSION VESSEL VOLUME (LITRES)									
Litres										
25	2.1	3.5	6.5	13.7	2.7	4.7	10.3	3.9	8.3	
50	4.2	7.0	12.9	27.5	5.4	9.5	20.6	7.8	16.5	
75	6.3	10.5	19.4	41.3	8.2	14.2	30.9	11.7	24.8	
100	8.3	14.0	25.9	55.1	10.9	19.0	41.2	15.6	33.1	
125	10.4	17.5	32.4	68.9	13.6	23.7	51.5	19.5	41.3	
150	12.5	21.0	38.8	82.6	16.3	28.5	61.8	23.4	49.6	
175	14.6	24.5	45.3	96.4	19.1	33.2	72.1	27.3	57.9	
200	16.7	28.0	51.8	110.2	21.8	38.0	82.4	31.2	66.2	
225	18.7	31.5	58.3	124.0	24.5	42.7	92.7	35.1	74.5	
250	20.8	35.0	64.7	137.7	27.2	47.5	103.0	39.0	82.7	
275	22.9	38.5	71.2	151.5	30.0	52.2	113.3	42.9	91.0	
300	25.0	42.0	77.7	165.3	32.7	57.0	123.6	46.8	99.3	
325	27.0	45.5	84.1	179.1	35.7	61.7	133.9	50.7	107.6	
350	29.1	49.0	90.6	192.8	38.1	66.5	144.2	54.6	115.8	
375	31.2	52.5	97.1	206.6	40.9	71.2	154.5	58.5	124.1	
400	33.3	56.0	103.6	220.4	43.6	76.0	164.8	62.4	132.4	
425	35.4	59.5	110.1	239.2	46.3	80.7	175.1	66.3	140.7	
450	37.5	63.0	116.5	247.9	49.0	85.5	185.4	70.2	148.9	
475	39.6	66.5	123.0	261.7	51.8	90.2	195.7	74.1	157.2	
500	41.6	70.0	125.9	275.5	54.5	95.0	206.0	78.0	165.5	
For system volumes other than those given above, multiply the system volume by the factor across	0.0833	0.140	0.259	0.551	0.109	0.190	0.412	0.156	0.331	

Note: This pressure can be increased up to 1.5 bar to suit high static head situations.

If the capacity of the central heating system should exceed 110 L, an additional vessel should be installed on the return to the combination boiler from the heating system (fig. 7). Guidance on vessel sizing is given (see table "Sizing of additional expansion vessel").

Reference should be made to British Gas Publications. Draining taps should be at least 1/2" in BSP nominal size and be in accordance with BS 2879.

#### 4.16 INSTALLATION TO AN EXISTING CENTRAL HEATING SYSTEM

The combination boiler is designed to operate on a sealed system only. Therefore if the existing system is of the open water type it will have to be modified to comply with BS 6798. Before installing a new combination boiler to an existing system, flush out the old system with a recommended descaling agent.

If the boiler is installed in an existing system any unsuitable additives *MUST* be removed by thorough cleaning, and flushing out the old system with recommended descaling agent.

BS 7593:2006 details the steps necessary

to clean domestic central heating system. Also check pipework and renew any corroded pipework or fittings. Valve glands must be repacked or replaced wherever necessary and any defective controls exchanged.

**Debris from the system can damage the boiler and reduce the efficiency. Failure to comply with the guidelines for the use of water treatment with the appliance will invalidate the appliance guarantee and contravene the Building Regulations.**

**It is recommended that you fit a primary water cleanser to the system. We recommend fitting a filter that will help remove both magnetite and non-magnetic debris.**

#### 4.17 WATER TREATMENT

This boiler has a stainless steel heat exchanger, Ravenheat recommend the use of FERNOX or SENTINEL, or other treatment products recognised by Ravenheat which must be used in accordance with the manufacturer's instructions.

#### 4.18 HARD WATER AREAS

If the area of installation is recognised as a hard water area, it is recommended that a suitable water treatment device is installed on the mains supply. The water hardness can be determined by using the standard test paper or by referring to local water authority.

#### 4.19 DOMESTIC WATER

The domestic hot water must be in accordance with the relevant recommendations of BS 5546. Copper tubing to BS EN 1057 is recommended for water carrying pipework and MUST be used for pipework carrying potable water.

##### **Important:**

It is important that at installation allowance must be made for the expansion of DHW within the appliance. If the DHW inlet has a back flow prevention device fitted for example a non-return valve or water meter. Then additional measure should be taken in the form of a mini expansion vessel. Fitted in the cold inlet pipe between the back flow prevention device and the boiler.

#### 4.20 ELECTRICAL SUPPLY


##### **Warning: this appliance must be earthed**

External wiring to the appliance must be carried out by a competent person and be in accordance with the current I.E.E. Regulations and local regulations which apply. Ravenheat boiler is supplied with a connection to a 230 V ~ 50 Hz single phase supply.

**The supply must be fused at 3 A.**

NOTE: The method of connection to the electricity supply MUST facilitate complete electrical isolation of the appliance, by the use of a fused, double pole isolator, having a contact separation of at least 3 mm in all poles. The point of connection to the electricity supply must be readily accessible and adjacent to the appliance except, where the appliance is installed in a bathroom.

**The current electrical IEE Wiring regulations must be followed in UK.**

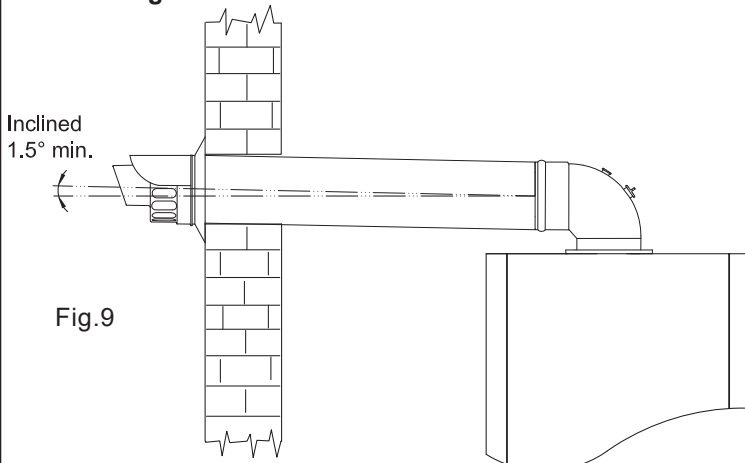

## 5 INSTALLATION

### 5.1 WARNING

It is MOST IMPORTANT that this appliance is installed in a HORIZONTAL POSITION, with the flue air duct passing through the wall. **Make sure the flue is at a 1.5° incline, rising from the boiler with 50 mm. Flue terminal diagram states 1.5° - 25 mm, fall back on flue (fig. 9).**

### 5.2 DELIVERY

##### **The appliance carton contains:**

- Installation instructions, user instructions and Benchmark log book
- Guarantee card.

##### **IMPORTANT NOTES:**

This appliance will produce a plume of condensation in cool weather. This is due to the High Efficiency and hence low flue gas temperature of the boiler. A plume management kit is available. (see section 5.7)

### 5.3 UNPACKING OF BOILER

##### **IMPORTANT:**

With regard to the Manual Handling Operations, 1992 Regulations, the following lift operation exceeds the recommended weight for a one man lift.

- Stand the boiler carton upright.
- Open the top of the carton.
- Rest the carton on the floor (keeping the flaps open).
- Turn the carton over with the boiler inside and then pull the carton up away from the boiler.
- Rest the boiler on its back on the floor to prepare it for installation.


### 5.4 POSITIONING OF THE BOILER

Unscrew the two lower screws that secure the front panel and pull forward and lift up (fig. 39).

Unscrew the 4 screws that fasten the lower grating on the casing and remove it from the bottom of the casing.

Make sure the casing and screws are put to one side in a safe place.

## 5.5 FLUE TERMINAL POSITION

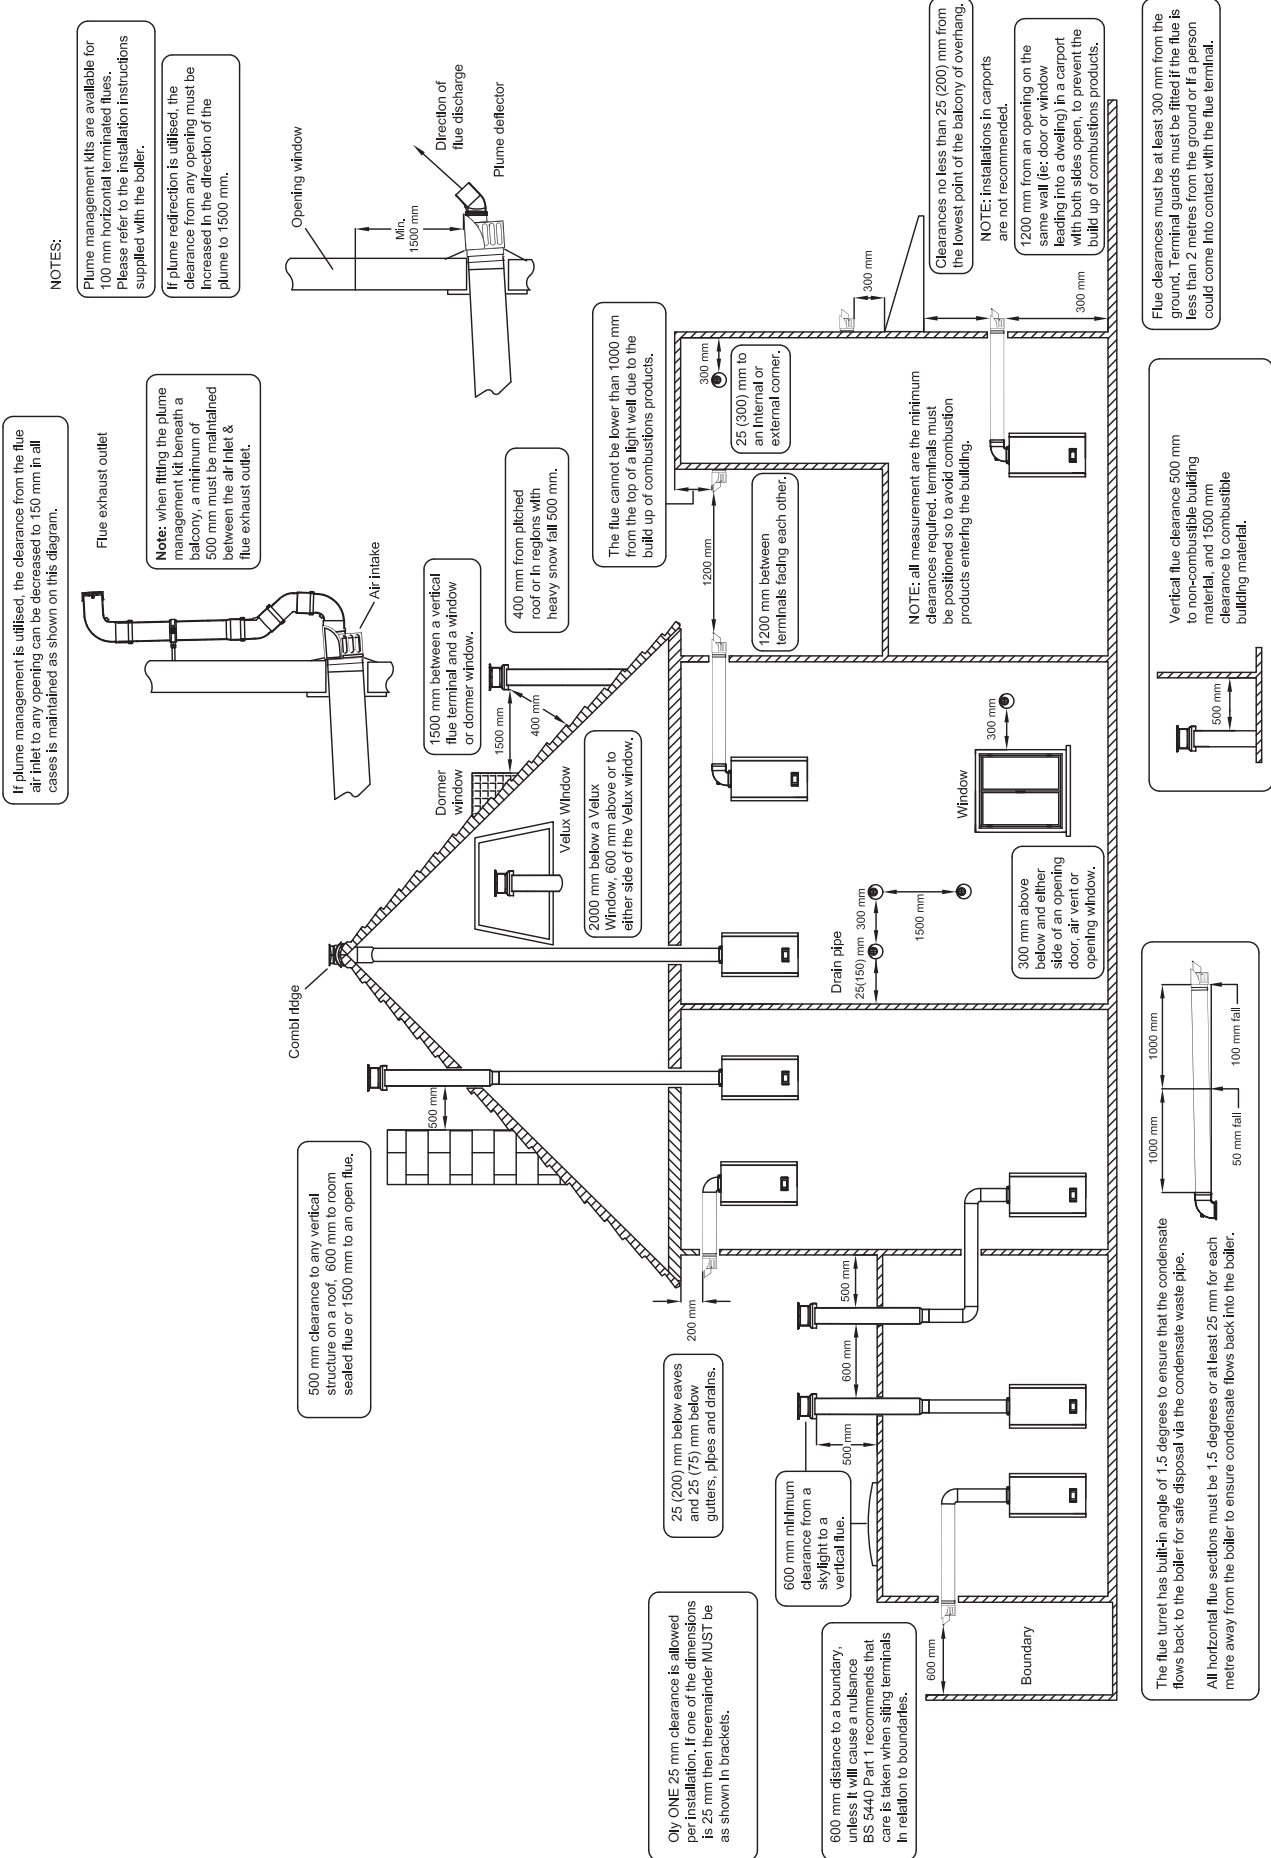

## 5.6 OPTIONAL EXTRAS

### HORIZONTAL FLUE KIT BOX CONTAINING (Fig 10):

- 52 - Self-cutting joint securing screw
- 57 - Elbow header
- 59 - Rubber seal Ø 60
- 56 - Rubber seal Ø 100
- 60 - Fumes sample point
- 61 - Flue exhaust duct
- 62 - Air intake duct
- 69 - Air sample point
- 127 - Terminal Rubber wall seal

**IMPORTANT:** Please lubricate the internal part of the seals before fitting.

Generally speaking, oils and greases are not suitable for the “peroxide -EPDM”, therefore we suggest a correct lubrication using silicon-substances, for instance “Silikon Spray“ (Arexons).

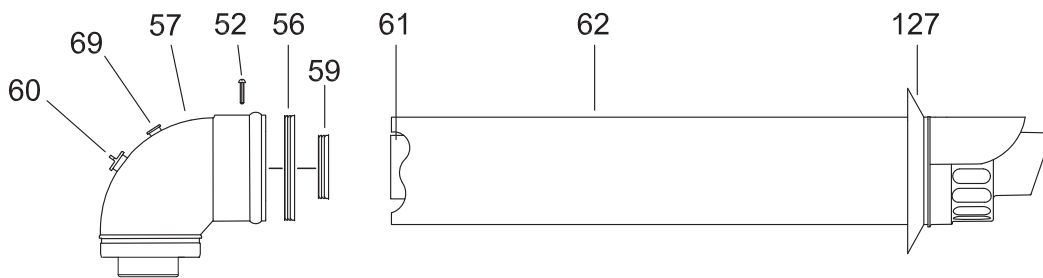


Fig 10

### FLUE EXTENSION BOX CONTAINING (Fig. 11):

1000 mm flue extension duct as an extra cost only when requested for side and vertical flue applications.

**WARNING:** With horizontal concentric flue, the maximum flue length is 8 metres, duct extension can be used with the standard flue (see table “Type flue system”).

- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension

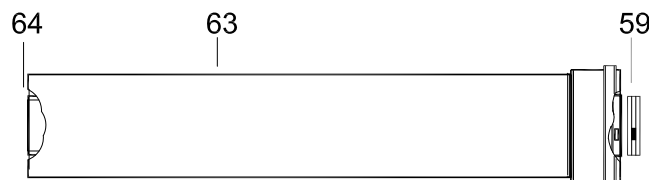


Fig 11

TYPE OF FLUE SYSTEM (All types) - minimum and maximum distance					TABLE
Flue type	C <sub>13</sub>		C <sub>33</sub>		C <sub>53</sub> <sup>1</sup>
Flue Diameter	60/100 (concentric)	80/125 (concentric)	60/100 (concentric)	80/125 (concentric)	80 mm single pipe
Minimum length (m)	0.3 (horizontal length)	0.3 (horizontal length)	1.0 (vertical length)	1.0 (vertical length)	0.5
Maximum length (m)	8.0	23.0	13.0	26.0	43.0
Equivalent length of 45° bend (m)	0.5	1.25	0.5	1.25	1.25
Equivalent length of 90° bend (m)	1.0	2.5	1.0	2.5	2.5

**5.7 PLUME MANAGEMENT KIT (Fig 12)**

Max 6000 mm flue extension duct as an extra cost only when requested to reduce plumbing nuisance of condensation from 60/100 horizontal concentric flue.

<b>Plume Management Kit</b>	
Maximum Length (mm)	6000
minimum length (mm)	500
Equivalent length of 45° bend (mm)	500
Equivalent length of 90° bend (mm)	1000
The Maximum permitted flue length is measured from the centre line of the flue terminal to the top of the outlet terminal	
<b>IMPORTANT : Max flue length must not exceed 6 m with a horizontal concentric 60/100 flue of 3 m ( L )</b>	
Plume Management Kit Part No.	
Part. No.	Description
TER110101 (Fig. 12)	1 metre high plume kit containing: n. 1 terminal bend n. 1 90° elbow bend n. 2 45° bend n. 1 metre 60 M-F flue length n. 1 flue length bracket
CUR110050 (Fig. 12a)	45° flue exhaust deflection bend
CUR110100 (Fig. 12a)	90° flue exhaust deflection bend

**IMPORTANT: Please lubricate the internal part of the seals before fitting.**

**FLUE EXHAUST DEFLECTION BEND (Fig 12a)**

Flue exhaust deflection bend are also available. These come in both 45° and 90° degree versions. These bends fit directly onto the flue exhaust terminal to deflect the flue gas plume in an upward or sideways direction. Although they are not substitute for a plume kit, they can be considered useful where condensate plumbing is causing a nuisance or can be used to eliminate condensate collecting on the end of the horizontal flue terminal.

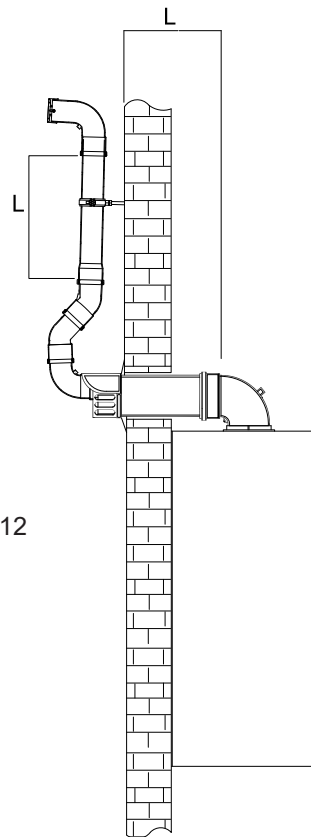


Fig. 12

L+L max 6000 mm  
minimum plume kit length 500 mm

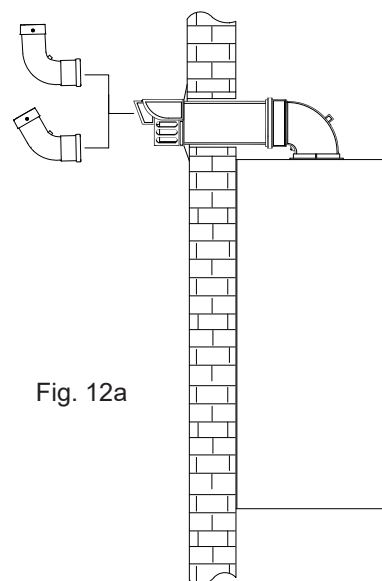


Fig. 12a

## 5.8 INSTALLING THE APPLIANCE FOR REAR FLUE OUTLET (Fig. 13, 16, 17, 18). FOR APPLIANCE CLEARANCES SEE SECT. 4.4 AND SECT. 4.10

Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the clearance distance is no less than that shown in fig. 13.

- Mark the two holes for the top fixing bolts to fix the boiler on the wall as well as the centre of the flue duct.
- Detach the template from the wall.
- Use a 10 mm dia drill to make the 2 holes. Insert the plastic expansion plugs.
- Cut or core drill a 105 mm dia hole for inserting the flue duct.

Fit the elbow header into the flue flange on the top of the boiler, positioning it towards the required direction (fig 13).

**Important: Make sure that the inner 60 mm diameter of the elbow header is inserted fully into the heat exchanger, and the rubber seal is correctly fitted. (Fig 17 item 65)**

If using the horizontal flue duct and it is too long it can be shortened. Should it be necessary to cut the flue always cut on right angles and ensure the cut is de-burred.

**Note:** Add 30 mm to allow for terminal rubber wall seal (fig.10 item 127).

Insert the flue assembly locating it onto the wall.

Lift the boiler on the wall, locating onto the top two fixing bolts. Tighten the two bolts using a spanner to secure to the wall.

Working above the boiler pull the flue exhaust duct towards the boiler in order to engage tube (fig. 18 item 61) into its header.

Position flue into elbow header and push so as to locate inner and outer flue correctly ensuring a good seal is made with O-rings. Tighten the two screws on the flue flange to secure the elbow header in place

Fit the terminal rubber wall seal and if necessary terminal guard.

Extension kits are available to order for flue extension of up to a total overall length of 8 metres (fig.18).

Each extension length extends the pipe by approximately 1000 mm long up to a maximum of seven extensions.

Extensions must be installed with the widened end of the pipe and the tapered end of the flue pipe aimed towards the exhaust terminal.

### IMPORTANT:

Inline flue bend - 1000 mm must be deducted from overall length for each 90° bend. Obtuse flue bend - 500 mm must be deducted from overall length for each 135° bend (see table 4).

## 5.9 INSTALLING THE APPLIANCE FOR SIDE FLUE OUTLET (Fig. 14, 15, 16, 17, 18)

- Attach the template to the wall with adhesive tape, making sure that the centre line is vertical and that the distance from the centre line to the nearest side wall is not less than measurement in fig.14.

- Mark the two fixing bolt securing holes on the wall and extend the axis of the flue duct hole to the side wall ensuring it is horizontal.

- **Make sure flue slopes 1.5° down towards the boiler and that there is a 25 mm fall per metre of the flue length.**

- Trace the centre of the flue duct hole and measure distance from the corner of the wall (fig.14), measure the distance 124 mm between the centre of flue duct hole to the corner.

Detach the template from the wall.

- Use a 10 mm. dia drill to make the 2 holes for the fixing bolts. Insert the plastic expansion plugs. Core drill a 105 mm dia. hole in the side wall for inserting the flue duct.

Fit the elbow header into the flue flange on the top of the boiler, positioning it towards the required direction.


**Important: Make sure that the inner 60mm diameter of the elbow header is inserted fully into the heat exchanger, and the rubber seal is correctly fitted. (Fig 17 item 65)**

If using the horizontal flue duct and it is too long it can be shortened.

Should it be necessary to cut the flue always cut on right angles and ensure the cut is de-burred.

**Note:** Add 30 mm to allow for terminal rubber wall seal (fig.10 item 127).

## REAR FLUE OUTLET

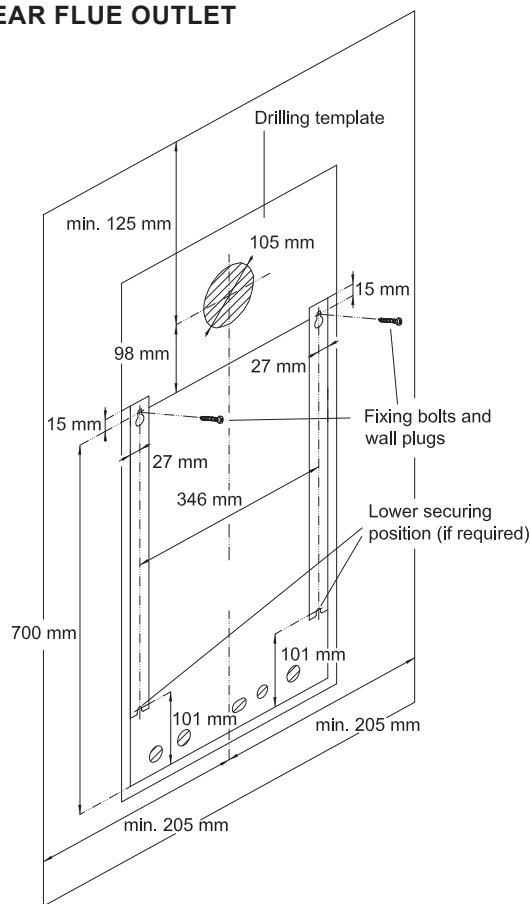

**NOTE:** The position of the appliance must provide minimum side clearances of 5mm as the side panels do not require removing for servicing. However, if the option is preferred to remove the panels then a minimum clearance of 55mm is required.

Fig 13

Insert the flue assembly into the wall, making sure it will not interfere when fixing the boiler on the wall.

Lift the boiler on the wall, locating onto the two fixing bolts. Tighten the two bolts using a spanner to secure to the wall.

Working above the boiler pull the flue duct towards the elbow in order to engage the tube into its header (fig.10). Position the flue elbow in line with the flue and push so as to locate inner and outer flue correctly. Ensuring a good seal is made with O-rings. Tighten the two screws on the flue flange to secure the elbow header in place.

### IMPORTANT:

Terminal rubber wall seal must be fitted (127 fig.10 item 127).

Each extension length extends the pipe by approximately 1000 mm long up to a maximum of seven extensions. Pipe length can be established using the instructions in section 5.5. Extensions must be installed with the widened end of the air intake pipe and the tapered end of the flue pipe aimed towards the exhaust terminal.

Extensions must be joined together with the standard terminal pipe, and inserted in each other as far as they can go.


If an extension must be shortened, this must be done from the straight end, and not from the widened or tapered end. To measure the pipeline properly all components must be assembled and total length measured before cutting. The straight end of the extension connects to the boiler. The flue output and air intake pipes fits into the boiler header until it stops (fig.17 - 18).

When cutting both inner and outer ducts of the extension, always ensure that the reduced end (male) of the inner and outer duct are square and to the same length.

**See section 11 "Template drawing".**



## SIDE FLUE OUTLET

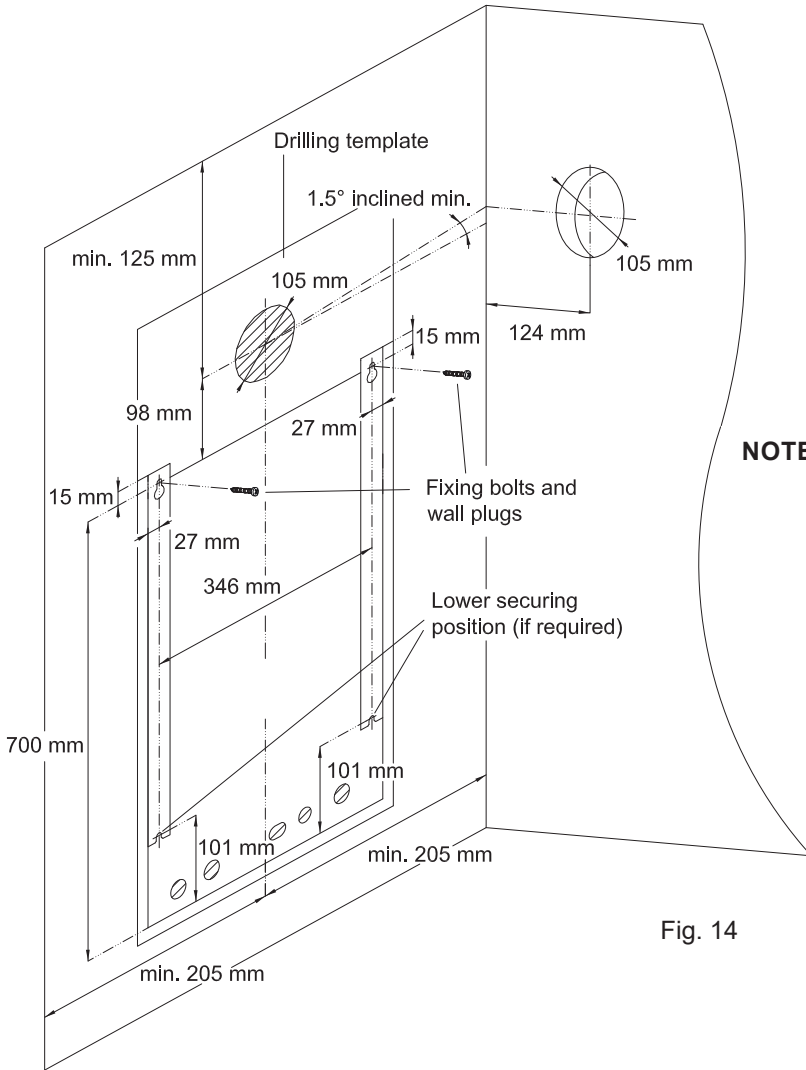

**NOTE: The position of the appliance must provide minimum side clearances of 5mm as the side panels do not require removing for servicing. However, if the option is preferred to remove the panels then a minimum clearance of 55mm is required.**

Fig. 14

All joints must be sealed with the rubber seals supplied.

It is important to put the centering spacer, supplied with the unit, inside between the two pipes, from the side opposite the extension's straight end.

**NOTE:** A suitable support bracket (flue bracket) is available from Ravenheat and should be used to support the flue length at least every one metre preferably at each joint this bracket should be secured to wall and flue duct.

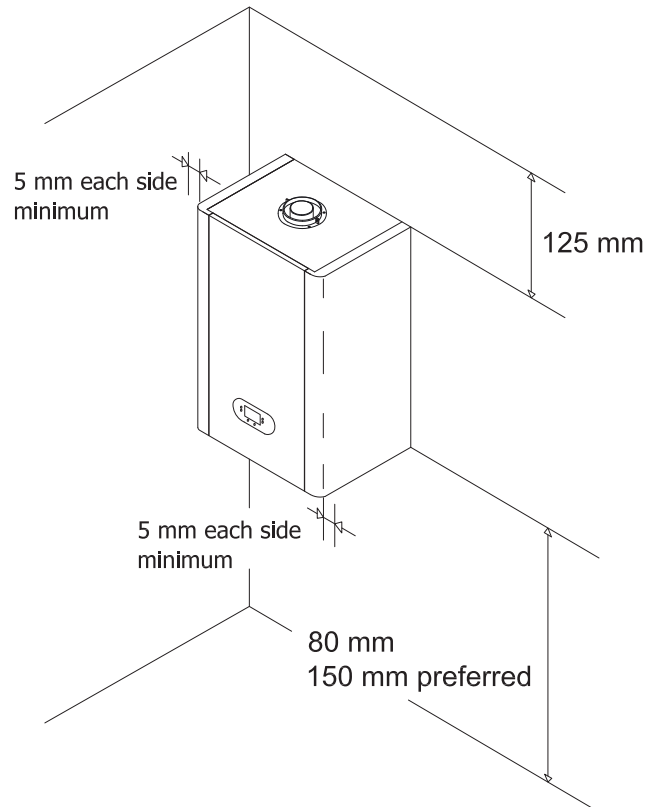


Fig. 15

### 5.10 COMPLETING HORIZONTAL FLUE INSTALLATION.

Ensure the flue system has been checked for soundness, is stable and secure. Where the horizontal flue terminal passes through the external wall, **it is essential that the flue must be sealed on both in exterior and interior part of the wall, and securing screws fitted.** The terminal rubber must also be fitted (fig. 16-17 item 127).

Must be sealed

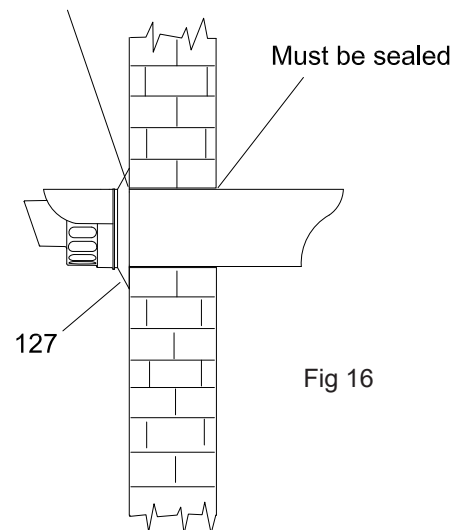


Fig 16

### 5.11 INTAKE AND EXHAUST TERMINAL COMPONENTS

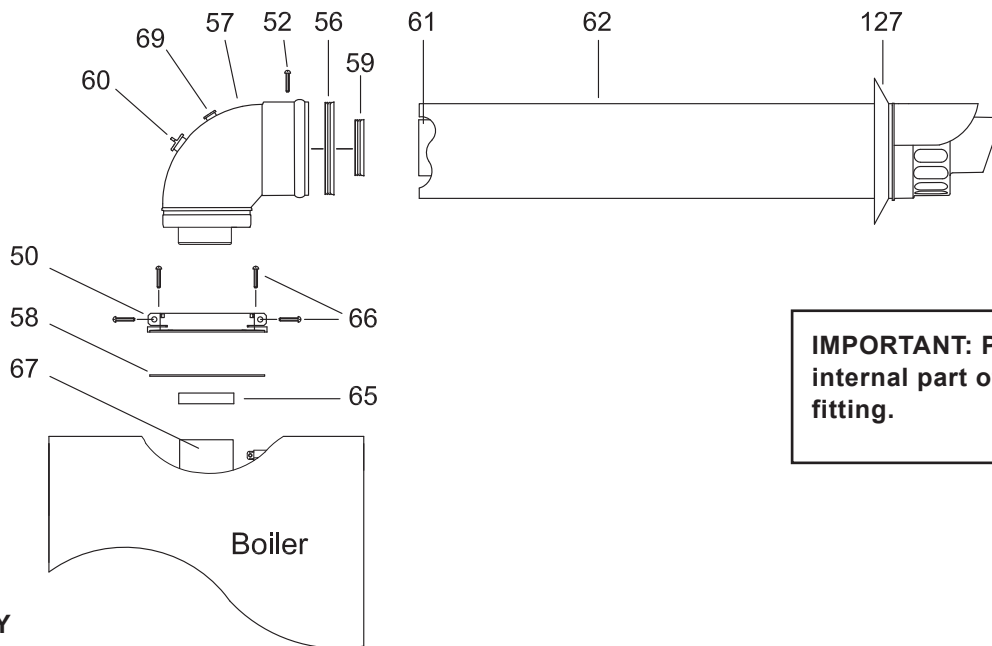


Fig.17

**IMPORTANT: Please lubricate the internal part of the seals before fitting.**

#### KEY

- |  |                                |                                 |
|--|--------------------------------|---------------------------------|
| 50 - Flue adapter                      | 59 - Rubber seal Ø 60          | 66 - Securing screw             |
| 52 - Self-cutting joint securing screw | 60 - Fumes sample point        | 67 - Flue temperature sensor    |
| 56 - Rubber seal Ø 100                 | 61 - STD flue exhaust duct     | 69 - Air sample point           |
| 57 - Elbow header                      | 62 - Terminal                  | 127 - Terminal Rubber wall seal |
| 58 - Header gasket                     | 65 - Flue manifold rubber seal |                                 |

### 5.12 IN-LINE FLUE BEND AND FLUE EXTENSION

#### IN-LINE FLUE BEND

Measure the distance between the flue bends or the flue/terminal assembly. The measurements should be taken from the outer edge of the flue and bend (fig. 18).

- 49 - In-line Flue Bend
- 52 - Self-cutting joint securing screw
- 56 - Rubber seal Ø 100
- 59 - Rubber seal Ø 60
- 63 - Air intake duct extension
- 64 - Flue exhaust duct extension

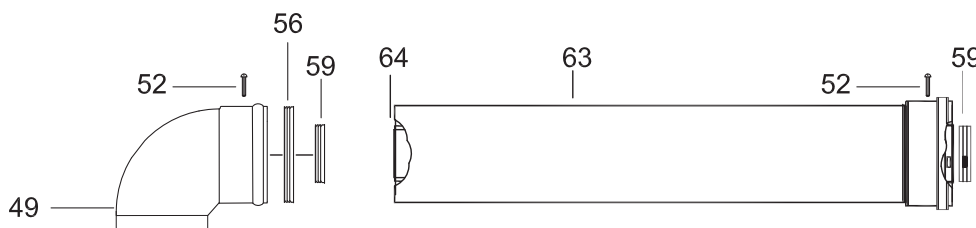


Fig.18

**5.13 VERTICAL FLUE INSTRUCTION ONLY (Fig. 19-20-21)  
SEE SECT. 4.10 FOR PERMISSIBLE FLUE POSITION**

IN-LINE FLUE BEND - 1000 mm MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 90° BEND  
OBTUSE FLUE BEND - 500 mm MUST BE DEDUCTED FROM OVERALL LENGTH FOR EACH 135° BEND.

The vertical flue kit is intended for use where a horizontal flue outlet is not possible or desired. The vertical flue can be used either with a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and in-line 135°/90° flue bend (fig. 19).

**IMPORTANT NOTES : For greater flue length see twin flue or concentric 80/125 flue instructions**

Proceed with installation as detailed in section 5 ignoring all references to horizontal flue installations. Use adhesive tape to attach the template to the wall, making sure that the centre line is vertical and that the flue centre line is virtually below the point at which the flue will exit the roof.


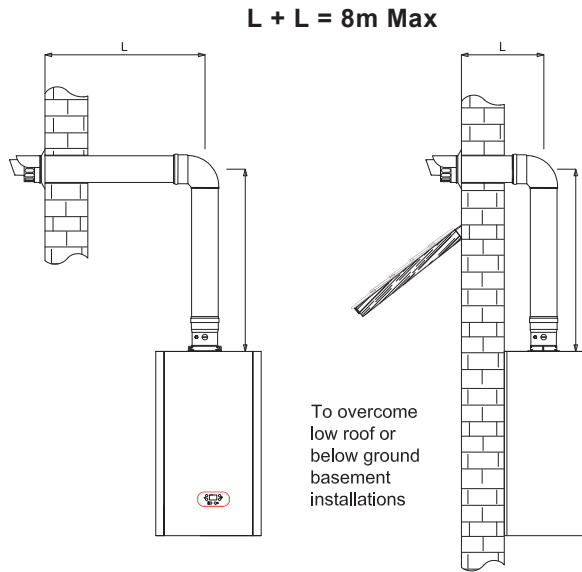


Fig. 19

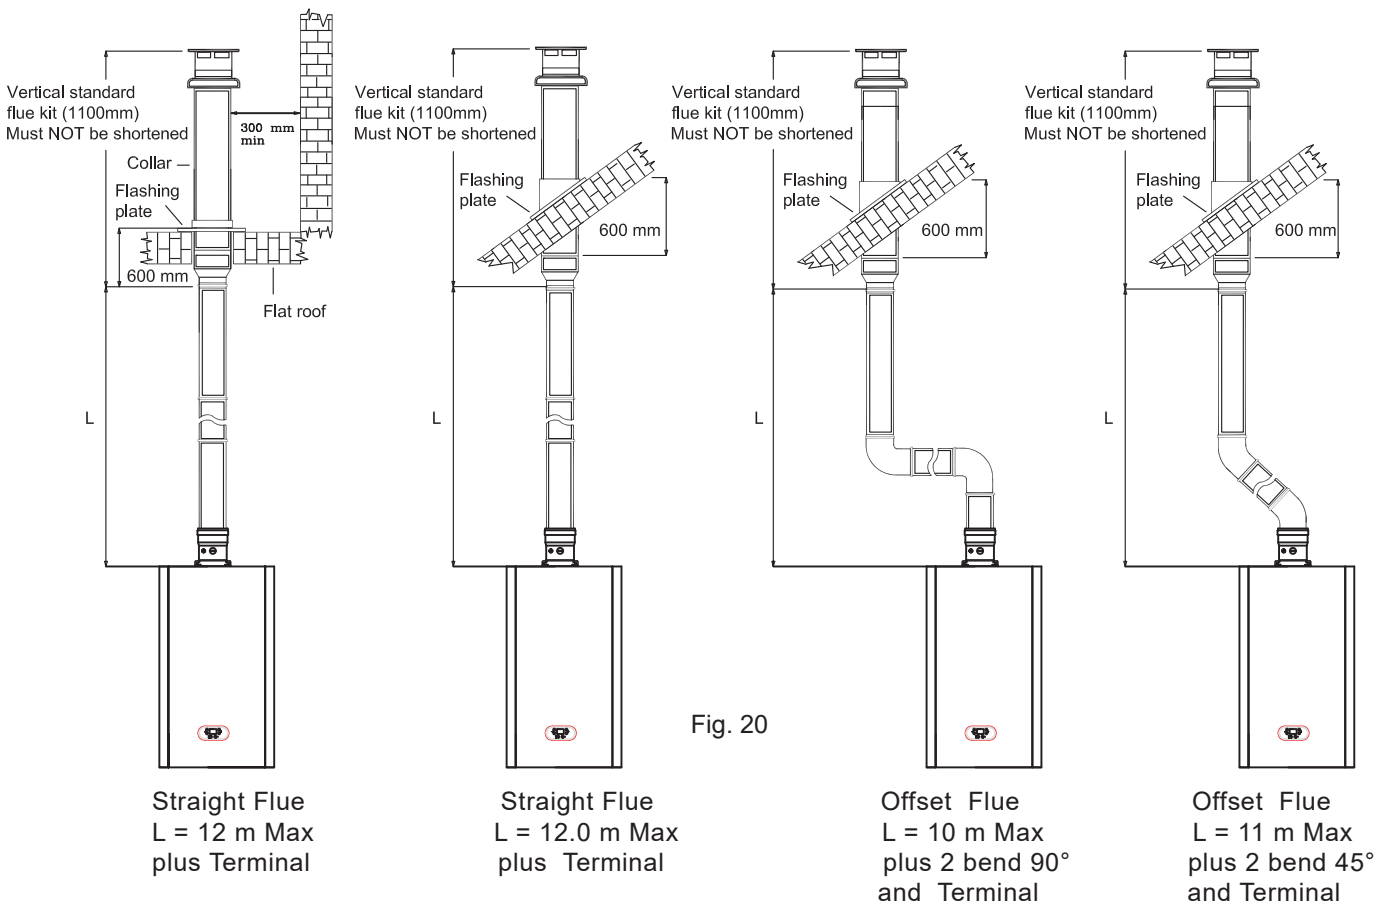

- Ensure that the maximum permissible flue length is not exceeded (fig. 20 and see table 5).
- Mark the two wall fixing bolt holes
- Detach the template from the wall.
- Use a 10 mm dia. drill to make the 2 holes.
- Insert plastic expansion plug.
- Screw in the two coach bolts.
- Position the flue sample point starter (straight flue header which must be fitted) and tighten the two screws on the flue flange (fig. 22 item 66),

and ensure that the gasket is correctly fitted.

**Important: Make sure that the inner 60 mm diameter of the straight flue header is inserted fully into the heat exchanger, and the rubber seal is correctly fitted. (Fig 22 item 65)**

Cut a 105 mm diameter hole through the ceiling and/or roof, at the point previously marked.

Fit a roof flashing slate to the roof, available from Ravenheat. Insert the Vertical Flue terminal assembly through the flashing slate from the outside.

Lift the boiler on the wall, locating onto the top two fixing bolts. Tighten the two bolts using a spanner to secure to the wall.

Measure the vertical distance between the top of the flue and the bottom of the flue terminal assembly (fig. 21). The measurements should be taken from the outer diameter of the flue.

NOTE: Where this length does not match any standard combination of the extensions, only the extension can be cut to the required length (fig. 23).


When cutting both inner and outer ducts of the extension, always cut on spigot side, and they must be de-burred.

Starting at the appliance end, assemble the extension duct sections, making each inner and outer (flue) joint by inserting the spigot end into the socket end of the next tube, making sure the seal rings are correctly located (fig. 22). Make sure that the entire flue is adequately supported. Use at least one bracket for each extension used.

Ensure that all inner flue connections have a good fit/seal, and that the space clips in each extension are correctly positioned.

**ACCESSORIES CONCENTRIC FLUE 60/100 EXTRAS:**

Part. No.	Description
COL0160050	Straight flue header / sample point 60/100
PRFE	Flue Extension 60/100 L1000
PR45FBI	45° bend 60/100
PR90FBI	90° Elbow bend 60/100
PR5023016	Horizontal terminal 60/100
TER110200	Vertical flue Terminal
TEG060050	Flashing Sleeve/Slate

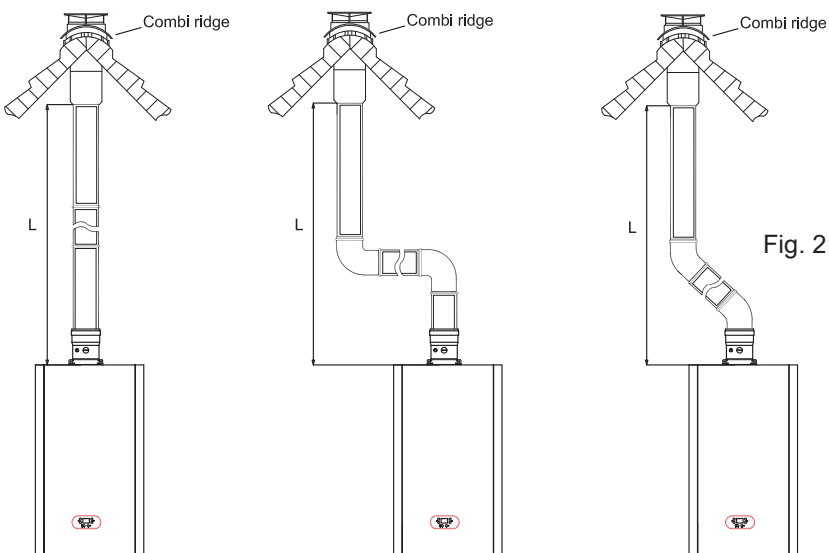


Straight Flue  
L = 12 m Max  
plus Combi ridge

Offset Flue  
L = 12 m Max  
plus 2 bend 90°  
and Combi ridge

Offset Flue  
L = 11 m Max  
plus 2 bend 45°  
and Combi ridge

Fig.23

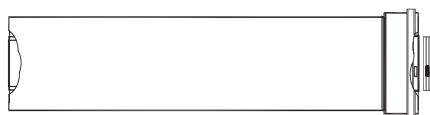

Cut Flue extension

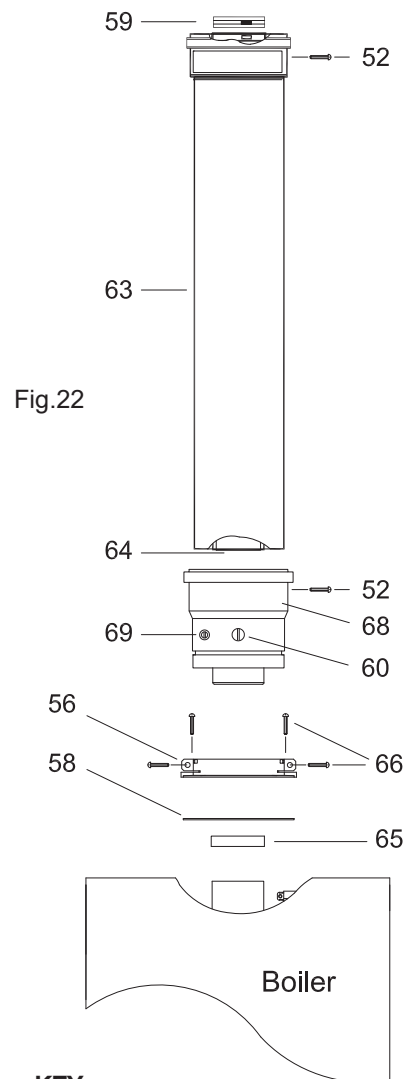


Fig.22

**KEY**

- 52 - Self-cutting joint securing screw
- 56 - Flue adapter
- 58 - Header gasket
- 59 - Rubber seal Ø 60
- 60 - Fumes sample point
- 63 - Flue extension
- 64 - Flue exhaust duct extension
- 65 - Flue manifold rubber seal
- 66 - Securing screw
- 68 - Flue starter
- 69 - Air sample point

**IMPORTANT: Please lubricate the internal part of the seals before fitting.**

## 5.14 INSTALLATION INSTRUCTIONS FOR TWIN FLUE PIPE (ECCENTRIC FLUE DUCT SYSTEM)

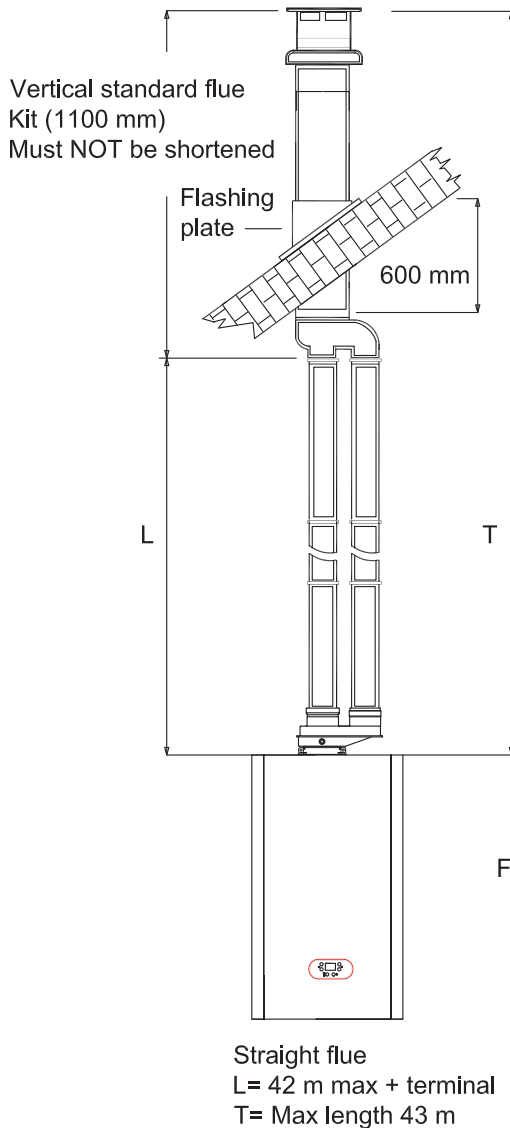


Fig. 24

**IMPORTANT: Please, lubricate the internal part of the seals before fitting.**

### IMPORTANT:

These instructions must be read in conjunction with the main installation and servicing instructions.

As with all flues the kits must be installed taking due account of the current issue of BS 5440 parts 1 & 2 and timber frame housing DM2 is referenced to the Institute of Gas Engineers Document IGE/UP/7.

Also note that the requirements will vary depending upon the kit being installed. Guidance is provided but unless otherwise stated, always comply with the recommendations of the relevant codes of practice.

Part. No	Description
SDO160050	Twin flue header F80/F80
PRO110200	Straight pipe L.1000 80
CUR110150	90° elbow bend 80
CUR110200	45° bend 80
GRI110050	Air inlet terminal 80
GRI110100	Exhaust terminal 80
TER060110	Vertical eccentric flue Terminal

## 5.15 TWIN FLUE INSTRUCTIONS

This part of the installation manual covers the installation and fixing instructions of the twin flue eccentric flue duct systems only.

When ordering twin flue it must be stated for HE 25/30/35/40 C range.

Typical installation procedures are illustrated by the drawing (fig.24).

Remove the front panel of the case (sect.8.1). Unscrew the screws on the flue adaptor.

Make sure that the heat exchanger rubber seal is located, and lubricate the internal part of the seal before assembly.

Locate the header gasket on the twin flue header and push into the flue adaptor making sure that the inner plastic exhaust locates firmly in the outlet spigot of the heat exchanger, and screw the securing screws that secure the twin flue header on to the boiler.

Locate the 2 x 80 mm O-rings in the twin flue header and lubricate the internal part of the seal before assembly to ensure an easy snug fit.

Measurements and bends must be calculated correctly to ensure the maximum flue length is not exceeded.

All located O-rings must be lubricated with a silicone grease to ensure a snug fit.

NOTE: Exhaust flue must slope 1.5° down towards the boiler 25 mm/m fall per metre of flue length.

### Spacing Clips

Spacing Clips are available on request should they be required.

NOTE: for eccentric vertical flue a 125 mm (5 in) diameter flashing plate will be required.

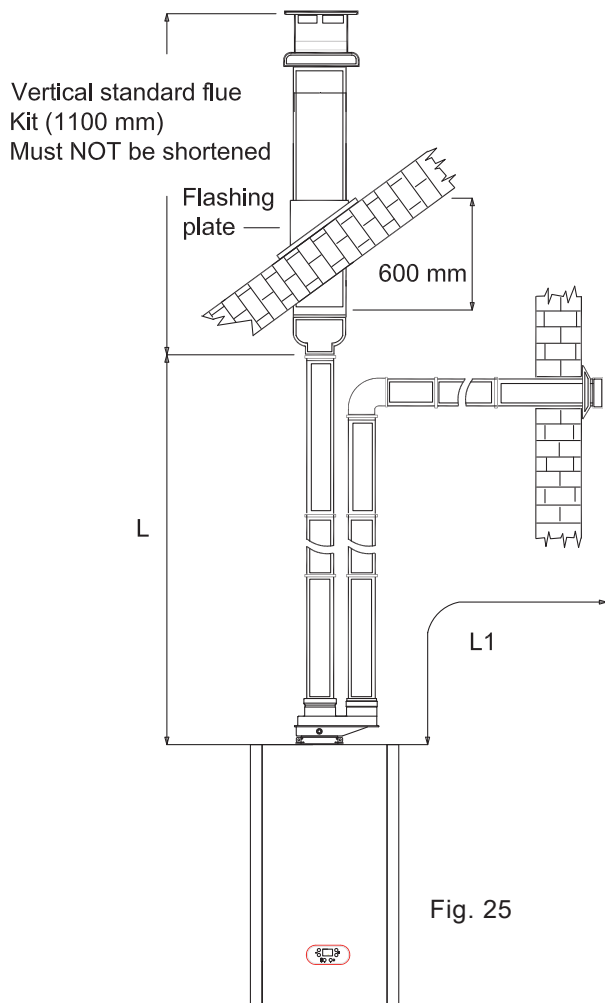


Fig. 25

$L + L1 = 39.5 \text{ m} + \text{terminal}$

**IMPORTANT:**

- See fig. 6 for terminal clearances.

**IMPORTANT NOTICE:**

- Inlet and exhaust terminals must never be installed on opposite walls of the building (PrEN 483).
- If the flue terminates less than 2 m above a balcony, above the ground, or above a flat roof to which people have access, then a suitable terminal guard must be fitted.
- Fit only recommended flue terminal guard by securing concentrically around terminal with screws.

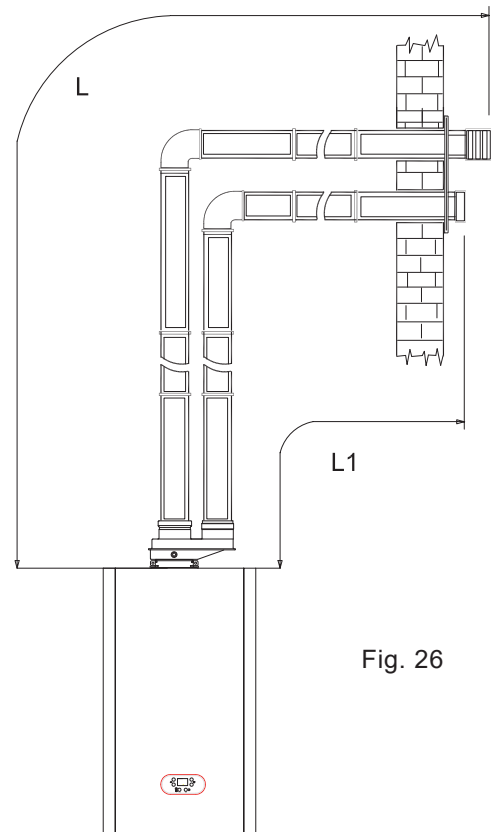


Fig. 26

$L + L1 = 37 \text{ m}$

**5.16 Exhaust/suction system with concentric pipes for flat or sloping roofs. Extensions with two separate pipes (fig. 24).**

Maximum distance:  $T = L = 21 + 21 = 42 \text{ metres} + \text{Terminal}$

Minimum distance:  $L = 0.5 + 0.5 = 1 \text{ metres} + \text{Terminal}$

**Exhaust terminal must not be cut.**

NOTE:

- If bends are used in the exhaust flue then horizontal sections must be avoided and there must be a  $1.5^\circ$  slope
- Towards the boiler 25 mm fall per metre.

**5.17 Exhaust/suction system with with two separate rated 80 dia. pipes exhaust on flat or sloping roof, suction from vertical wall (fig. 25).**

Maximum distance  $D = L + L1 = 39.5 \text{ metres} + \text{Terminal}$

Minimum total length = 2 metres

NOTE: Exhaust flue must slope  $1.5^\circ$  down towards the boiler 25 mm fall per metre.

**5.18 Exhaust/suction system with two separate pipes through a single vertical wall (fig. 26).**

Maximum distance:  $D = L + L1 = 37 \text{ metres}$

Minimum distance:  $D = L + L1 = 1 \text{ metres}$

Min distance between pipe 50 mm.

**IMPORTANT: Please lubricate the internal part of the seals before fitting.**

## 5.19 INSTALLATION INSTRUCTIONS FOR CONCENTRIC 80/125 FLUE SYSTEM

The vertical 80/125 flue kit is intended for use where a horizontal 60/100 flue outlet is not possible or desired. The vertical flue can be installed on either a flat roof or a pitched roof (maximum pitch 60°). Where a straight vertical flue is not possible or desired, an offset vertical flue can be used in conjunction with a side horizontal flue extension piece and an inline 135°/90° flue bend (fig. 27).

### IMPORTANT:

- See fig. 6 for terminal clearances.

### IMPORTANT NOTICE:

When using our vertical flue kit the 125 mm x 100 reducer is supplied complete with the vertical terminal simply remove this and fix it into the straight flue header (which must be fitted) on the top of the boiler.


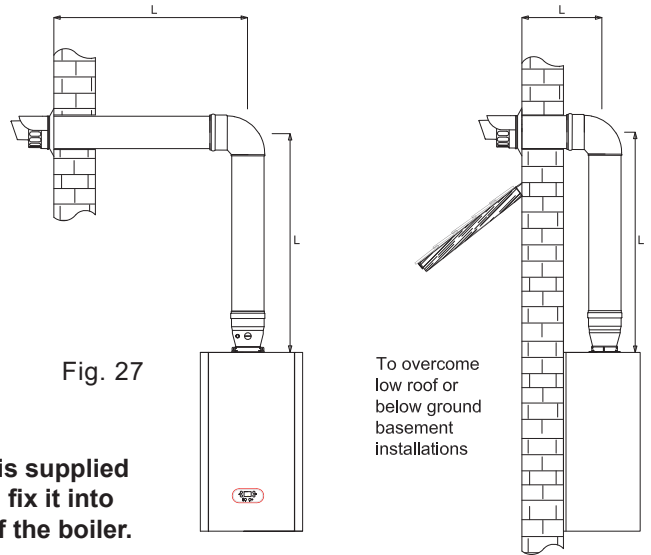


Fig. 27

$L + L = 23.5m \text{ Max}$

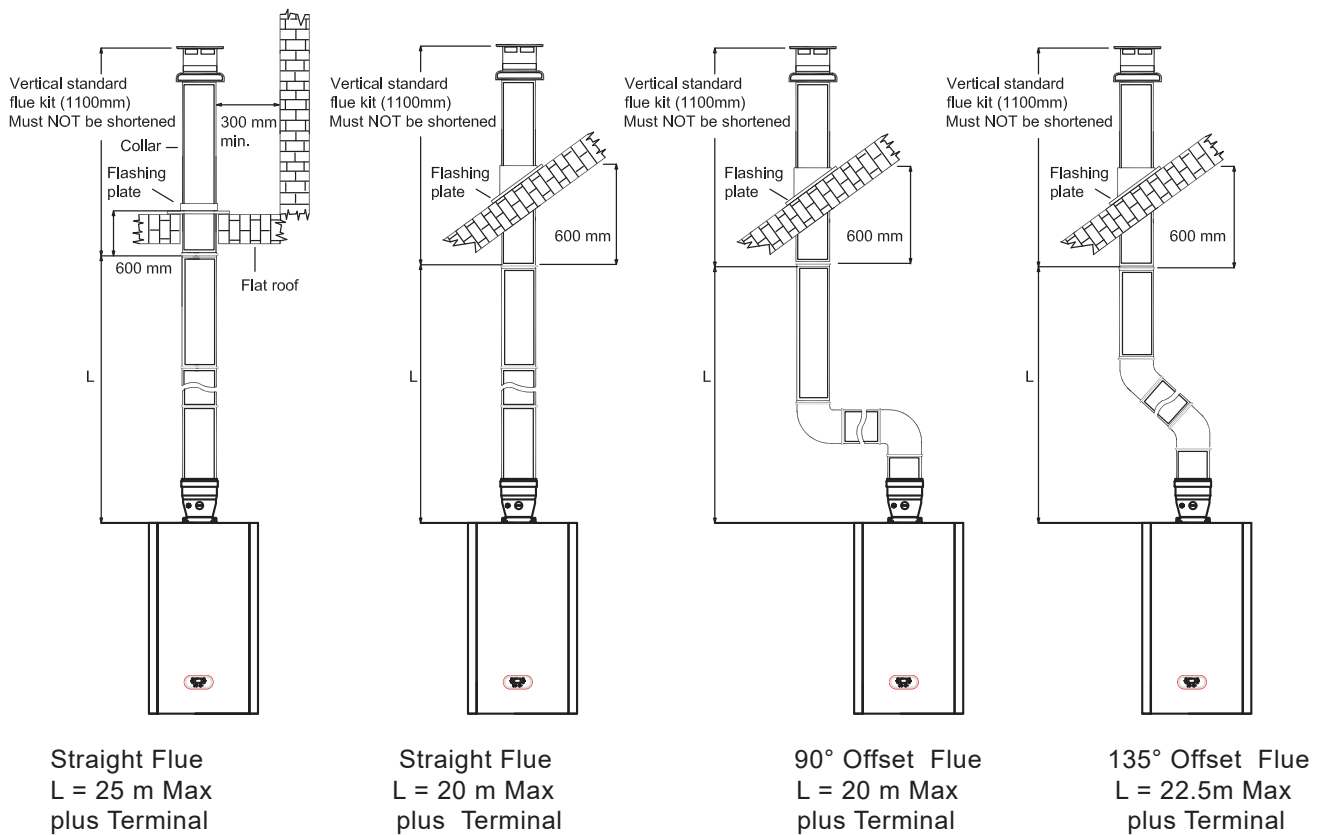

**NOTE :** If using Flue arrangement in fig. 27 then the 125x100 Flue reducer must be purchased separately.

TABLE 8

Part No	Description
COL160050	Straight flue header / sample point 60/100
PRO110300	Flue Extension 80/125 L1000
RID110050	125/80 to 100/60 Flue reducer
CUR110250	45° flue bend 80/125
CUR110300	90° elbow flue bend 80/125
TER010050	Horizontal Flue Terminal 80/125
TER110200	Vertical Flue Terminal 80/125
TEG060051	Flashing sleeve/slate

**IMPORTANT:** Please lubricate the internal part of the seals before fitting.

**5.20 ASSEMBLE BOILER**

**5.21 Fitting valve pack**

Remove plastic caps from boiler connection and fit valves as per fig. 29 using the washers provided.

**It is recommended fitting the valve pack before installing the boiler on the wall.**

**5.22 GAS CONNECTION (Fig. 29)**

A minimum working gas pressure of 20 mbar (8 in w.g.) must be available at the boiler inlet at full flow rate (37 mbar for propane). (Also see section 4.6)

Fit the gas service cock to the boiler via the union nut and connect gas pipe. Do not over tighten and use another spanner as a counter force to avoid straining internal connections. Important consult (sect 4.6).

**5.23 CENTRAL HEATING CONNECTION (Fig. 29)**

Before any central heating connections are made to the boiler all system valves should be opened and the system thoroughly flushed out with cold water.

- Connect the central heating return pipe to the isolating cock.
- Connect the central heating flow pipe to the isolating cock marked CHF.
- Pipe dimensions and positions are marked on template supplied (fig. 30).

**5.24 DOMESTIC HOT WATER CONNECTION (Fig. 29)**

The domestic hot water circuit does not need a safety valve but it is essential to ensure that the pressure of the cold water supply does not exceed 10 bar. If in doubt it is advisable to install a pressure reducing valve. The minimum pressure needed to operate the domestic hot water system is 0.5 bar with a flow of approx 3 L per min. Flush out all foreign matter from the supply pipe before and after connecting to the appliance.

- Connect the 15 mm. cold water pipe to the appliance inlet.
- Connect the 15 mm. hot water pipe to the appliance outlet.

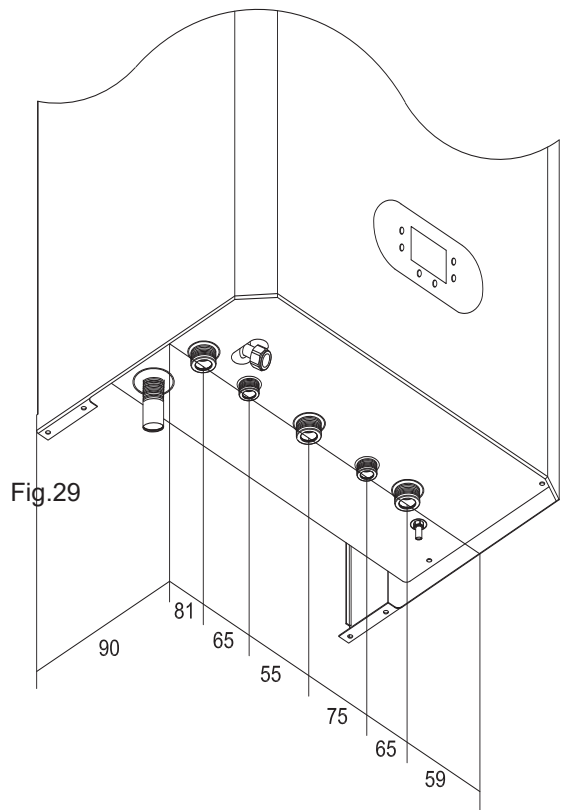


Fig.29

**5.25 POSITION OF WATER/GAS CONNECTIONS**

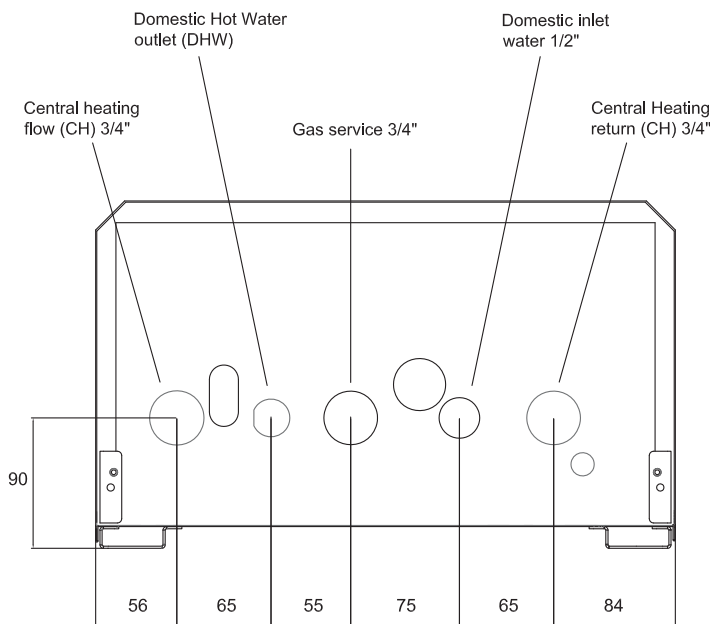


Fig. 30



## 5.26 SAFETY VALVE DISCHARGE

The safety valve is located to the rear (15 mm copper) to permit a discharge pipe to be connected. When connecting ensure the discharge pipe does not restrict access. The discharge should terminate facing downward exterior to the building in a position where discharging (possibly boiling water & steam) will not create danger or nuisance, and not to cause damage to electrical components or wiring. The discharge must not be over an entrance or a window or any other type of access.

## 5.27 CONDENSATE DRAIN CONNECTION

The condensate drain connection is a flexible 3/4" pipe and is therefore adjustable Fig. 29.

The drain pipe should have a fall of at least 2.5° away from the boiler. Condensate should, if possible be discharged into the household internal drainage system.

If this is not practicable, discharge can be allowed into the external household drains or a purpose designed soak away.

It is recommended that any external condensate drain pipe is insulated and also must be of 40 mm (1" 1/2) diameter, through the outside wall to prevent freezing in adverse weather conditions. It is not necessary to provide air breaks or extra traps in discharge pipe as there is already a 125 mm high trap inside the boiler.

Fitting an extra trap may cause the boiler siphon to work incorrectly.

Refer to BS5546 or BS6798 for advice on disposal of boiler condensate.

**Notes: ALL EXTERNAL PIPE RUNS MUST BE IN ACCORDANCE WITH BS 6798**

### 1 - INTERNAL TO SINK WASTE UPSTREAM OF SINK WASTE TRAP

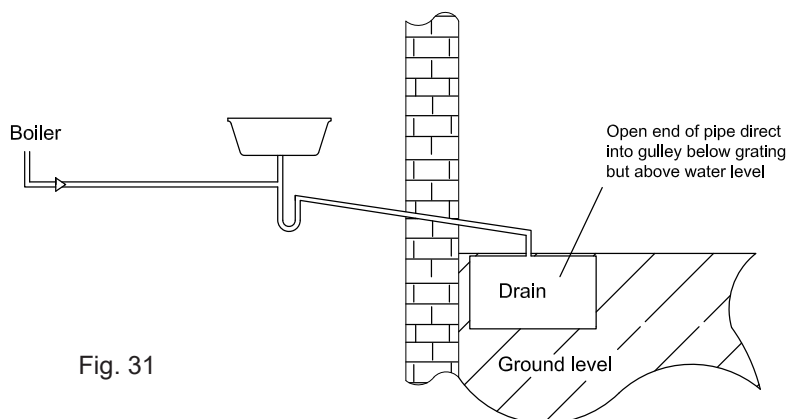


Fig. 31

### 2 - INTERNAL CONNECTION TO SOIL VENT STACK

Make connection to SVP using a solvent welded saddle.

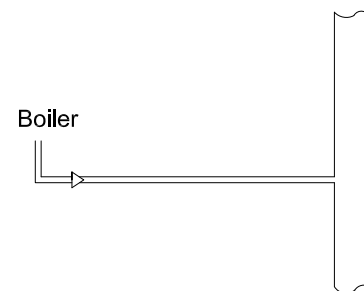


Fig. 32

### 3 - TERMINATION TO SOAK AWAY

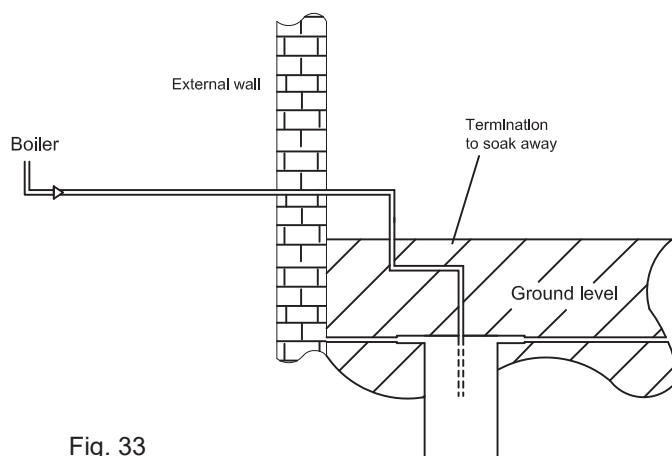


Fig. 33

### 4 - TERMINATION TO DRAIN / GULLY

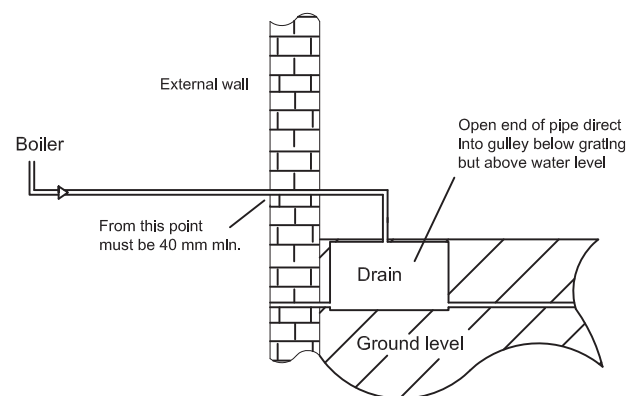


Fig. 34

## 5.28 EXTERNAL CONTROLS

### IMPORTANT:

Electricity supply must be as specified in clause (sect. 4.22).

- When controls external to the appliance are required, design of the external electrical circuits should be undertaken by a competent person. In accordance with the IEE wiring regulations.


**It is essential that all external controls are VOLT FREE.**

Factory fitted internal wiring must not be disturbed when wiring external controls.

- To gain access to the electrical box remove the front panel of the case as described in clauses sect. 8.2.

You can slide towards the top the instrument panel box and push the retaining latches and remove the instrument panel (sect. 8.24).

- Heat resistant flexible cable is fitted between the isolator and the terminal block which is a 3 core cable of 0.75 mm<sup>2</sup> (24x0,2 mm) to BS 6500.

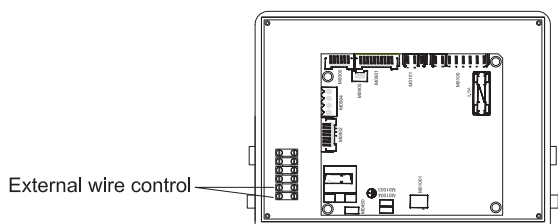

Make sure all wires to the appliance are routed away from sharp edges and hot surfaces.

The cable must be fastened with its cord anchorage and connected so that it should make the cable slip from the anchorage until the current carrying conductors

become taut before the earthing conductor. Securely tighten all terminal screws and arrange the cable with slack between the cord anchorage and the terminal block.

### WARNING:

**If the supply cord is damaged, it must be replaced by a service engineer (supply cord available from Ravenheat).**

## 5.29 OUTDOOR SENSOR

For use, consult Outdoor Sensor instructions.

## 6 COMMISSIONING

Each boiler has been through a rigorous operational testing procedure at our factory and should not require any further adjustment, if you are not the installer but just commissioning this boiler check that the boiler has been installed in accordance with these instructions, and the integrity of the flue system and the flue seals, as described in the flue installation section.

### IMPORTANT:

Also refer to the commissioning check list attached to the front of the boiler.

## 6.1 GAS SUPPLY INSTALLATION

Inspect the entire installation including the gas meter, test for soundness and purge, all as described in BS 6891.

In Ireland refer to IS 813:2002.

## 6.2 ELECTRICAL INSTALLATION

Preliminary electrical systems checks to ensure electrical safety shall be carried out by a competent person.

ALWAYS carry out the preliminary electrical system checks:

i.e. earth continuity, polarity, resistance to earth and short circuit, using a suitable test meter.

## 6.3 INITIAL FILLING OF THE SYSTEM

Open central heating flow and return valves Unscrew the cap on automatic air release valve positioned on the top of the pump housing one full turn (leave open permanently).

- Close all air release taps on the central heating system. Press the info button to display the current pressure (code E08 will display if the pressure is nil/too low).
- Gradually open stopcock at the filling point connection to the central heating system until water is heard to flow.

- Starting with the lowest radiator open each air release tap in turn. Close when the water is clear, free of bubbles and flows out. In the same way release air from any high points in the pipework.
- Continue filling the system until 1.5 bar register on digital display. Press the ESC button once again to return to the main screen.

Then turn off the filling points stopcock.

- Inspect the system for water soundness and remedy any leaks discovered.

#### 6.4 SETTING THE HEATING SYSTEM DESIGN PRESSURE


The design pressure must be a min. 1bar and max. 1.5 bar. These figures are read on the digital display by pressing the INFO button.

The actual reading should ideally be 1 bar + the height in metres to the highest point of the system above the base of the appliance (up to max of 1.5 bar).

N.B.: The safety valve is set to lift at 3 bar (30 m/42.5 psi).

To lower the system pressure to the required value unscrew the drain point (fig. 36) or drain on the heating circuit.

Throttle: Adjust with a 2.5 mm Allen key

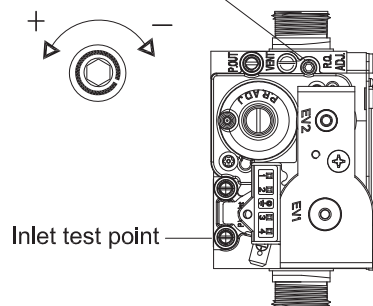

SIT gas valve

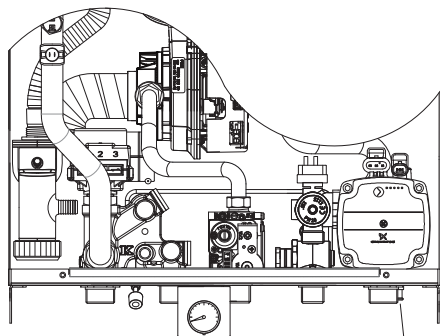


Fig. 36

Drain point

#### 6.5 FILLING THE HOT WATER SYSTEM

Close all hot water draw-off taps. Open the cold water inlet cock. Slowly open each draw-off tap until clear water is discharged.

#### 6.6 LIGHTING THE BOILER

Before lighting the boiler make sure that the heating circuit flow and return valves are open and also that the cold water input cock is open.

- If external controls are installed (E.g. time clock and thermostat) make sure that they are calling for heat.
- Select winter function, the winter icon in digital display will be flashing (item 3 fig. 2).
- To select the minimum heating temperature press the radiator button.

#### IMPORTANT:

Before lighting the boiler select the minimum central heating temperature. This must be left at minimum for approx 5 mins to purge air safely from the boiler.

Fig. 35

- To select the minimum heating temperature press the radiator button.
- Press arrow up and arrow down buttons to adjust.
- The digital display shows the current set temperature in central heating.
- After a few seconds the digital display shows the central heating temperature in demand (CH icon flashing, item 3 fig. 2).
- The fan starts and after a few seconds or so the digital led display will show that the ignition has commenced.

- The ignition control will automatically make three attempts to start, if it doesn't start this may be due to air in the gas supply line. If the burner fails to light, the digital led display and fan will stop, and the display will show the lockout code (E01 depicts flame failure).
- If necessary push the boiler Reset button (item 2 fig.1) and the boiler will restart automatically.
- After the boiler has lit, allow to warm at minimum temperature setting to purge any air from the system.
- Once the system has been purged of air, set the heating temperature to the desired setting.

Anti-clockwise to increase CO<sub>2</sub>.  
 Clockwise to decrease CO<sub>2</sub>.  
 After any new regulation wait to stabilise for about one minute.  
 Replace the front cover.

TYPE OF GAS	CO <sub>2</sub> %
NAT GAS	9.0 (+0.5 / -0.5)
LPG	10.5 (+0.5 / -0.5)

### 6.8 CHECK THE GAS PRESSURE

Check the gas mains pressure at the gas valve inlet pressure test point (fig.35) with the boiler operating at full rate. Check with the Local Gas supplier if the pressure differs significantly from 20 mbar G20 (natural gas), 37 mbar G31 (propane). With leak detection fluid test for gas tightness of all gas components and joints.

**IMPORTANT:**  
**The Gas Valve Throttle adjuster is required to be sealed with tamper proof paint after adjustment (fig. 35).**

### 6.9 COMBUSTION CHECK

Check all gas carrying components along with, the combustion of the appliance which should be checked as follows. Remove the front panel of the appliance. Ensure the boiler and external controls are calling for heat. Turn on the electrical supply, open the hot water tap at maximum flow rate. Wait at least five minutes or until the unit has reached its operating temperature. Unscrew the test sample screw on the boiler elbow bend (item 60 fig. 10). Measure the level of CO<sub>2</sub>. Check the reading against the corresponding value in table 9.

**It is essential that this test is repeated with the casing on as this will check the integrity of the flue.**

If adjustment proves necessary then proceed as follows.

**IMPORTANT:** Any adjustment to the gas valve should only be carried out by a qualified person. Referring to the table 9, adjust the maximum level of CO<sub>2</sub> with the Throttle using a 2.5 mm hex on the gas valve (fig.35).

**IMPORTANT:** Do not insert the analyser probe into the sample point immediately or leave in long periods. This will prevent saturation of the analyser.

During the calibration function the combustion ratio may increase for a short time while the boiler performance is optimised.

The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser.

The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN50379-3 and be calibrated in accordance with the analyser manufacturer's requirements.

### ELECTRODES POSITION

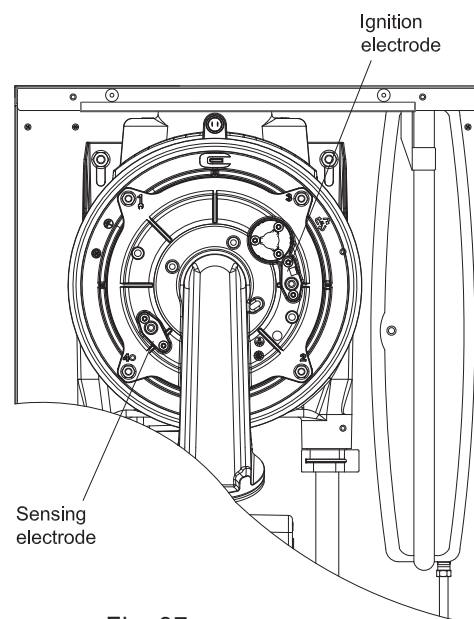


Fig. 37

## 6.10 CHECKING THE FLUE SYSTEM

The flue system should be visually checked for soundness. Check all connections and fixings are secure and tight.

## 6.11 CHECKING THE HEATING THERMOSTAT

Allow the system to warm up and then select the C.H thermostat to ensure the main burner modulates from "high" to "low" and "low" to "off" and vice versa (scale range covers approx. 35 °C - 80 °C, sec 1.5 key 5 to set heating temperatures).

## 6.12 TESTING AND REGULATING THE DOMESTIC HOT WATER SYSTEM FLOW AND CHECK THE OPERATIONAL (WORKING) INLET PRESSURE

Set up the boiler to operate at maximum rate by opening the hot tap to maximum flow. With the boiler operating at the maximum rate check the operational dynamic (working) gas pressure test complies with the requirements.

Ensure that this inlet pressure can be obtained with all other gas appliances in the property working.

Put the appliance in summer position (item 1 fig. 1).

- Open a domestic hot water tap (preferably the bath tap). Ensure the cold water inlet stopcock is open and the DHW is set at maximum, press the arrow up (item 3 fig. 1) the digital display shows the set temperature, if necessary adjust with arrow up and arrow down buttons.
- After a few seconds the digital display shows water temperature in demand (D.H.W. icon flashing, item 10 fig. 2).
- If the boiler does not light check that the water flow rate is above the min. required to operate the differential pressure 2.8 L/min. (0.61 gals/min).
- The temperature of the water will depend on the rate at which it flows. If, due to high water pressure, the flow rate is too high (and the temperature too low for practical use) the flow rate may be adjusted. It is better to set for the lowest acceptable temperature preferably at the bath tap since the user can gain higher temperatures at other restricted flow taps.
- If the cold supply is subject to large fluctuations or is above the permitted max. water pressure, a suitable pressure/flow regulator should be fitted on the cold water supply to the appliance.
- Slowly close the draw off tap to reduce the flow rate to the min (approx. 2.8 L/min).

- Select a different temperature for DHW. to ensure it operates at its various setting.
- Close the draw-off tap still further. The burner should stop when the rate falls below about 2.8 L/min (0.61 gals/min).

## 6.13 KEEP HOT

The boiler comes with an optional keep hot facility.

This can be switched on by a competent person.

This will result in the boiler, at any time, periodically firing to keep the water within the boiler up to temperature to reduce the time delay of hot water delivered to any hot draw off point.

- Press ESC and arrow down buttons together (item 2 and 3 fig. 1) for 5 seconds to enter in USER PARAMETERS mode.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1), to select P003, and press ENTER (item 1 fig. 1).
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1) to select the followings option: "0" disabled, "1" enable, adjust if necessary and press ENTER (item 1 fig. 1) to confirm.

## 6.14 C.H. HIGH/LOW TEMPERATURE

The boiler comes set, in Central heating, at the 80°C flow temperature.

It is possible to adjust the max set-point to max 50°.

- Press ESC and arrow down buttons together (item 2 and 3 fig. 1) for 5 seconds to enter in USER PARAMETERS mode.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1), to select P004.
- Use arrow up and arrow down buttons (item 3 and 4 fig. 1) to select the followings option: "0" low temperature, "1" high temperature.

## 6.15 RANGE RATING CENTRAL HEATING OR/AND DOMESTIC HOT WATER

The boiler comes set, in Central heating, at the MID RANGE of its output.

The boiler has already been adjusted by the manufacturer during production. If the adjustments need to be made again, observe the following procedures.

The adjustment to fan speed must be strictly in the sequence indicated, by qualified personnel only.

Range rating regulation of Central Heating				
C.H. regulations	Heat input (kW) - Fan speed (rpm)			
	HE 25 C	HE 30 C	HE 35 C	HE 40 C
Maximum setting	21 - 5200 (nat gas) - 5000 (lpg)	25 - 5400 (nat gas) - 5200 (lpg)	29 - 6200 (nat gas) - 6000 (lpg)	33 - 6800 (nat gas) - 6600 (lpg)
Minimum setting	3,7 - 1200	4,0 - 1200	4,0 - 1200	4,0 - 1200

Range rating regulation of Domestic water				
D.H.W. regulations	Heat input (kW) - Fan speed (rpm)			
	HE 25 C	HE 30 C	HE 35 C	HE 40 C
Maximum setting	25,5 - 6200 (nat gas) - 6000 (lpg)	31 - 6600 (nat gas) - 6400 (lpg)	36 - 7300 (nat gas) - 7000 (lpg)	41 - 8300 (nat gas) - 8100 (lpg)
Minimum setting	3,7 - 1200	4,0 - 1200	4,0 - 1200	4,0 - 1200

To check max fan speed, see tables sections 3.

Press ESC and arrow down buttons together (item 2 and 3 fig. 1) for 5 seconds to enter in USER PARAMETERS mode.


- Use arrow up and arrow down buttons (item 3 and 4 fig. 1) to select the followings options:
  - P001 CH max fan speed.
  - P002 DHW max fan speed.
  - Press enter (item 1 fig. 1) to select CH or DHW fan speed. Adjust if necessary.

Fig. 38

valve and how to top-up the system pressure correctly.

- Explain the operation of the boiler includin the use and adjustment of ALL system controls which should be fully explained to the householder. This will ensure the optimum fuel economy for the household requirements of both heating and hot water consumption. Advise the User of the precaution necessary to prevent damage to the system, and to the building, in the event of the system remaining inoperative during frost conditions.

### RATIO BETWEEN FAN SPEED AND HEAT INPUT

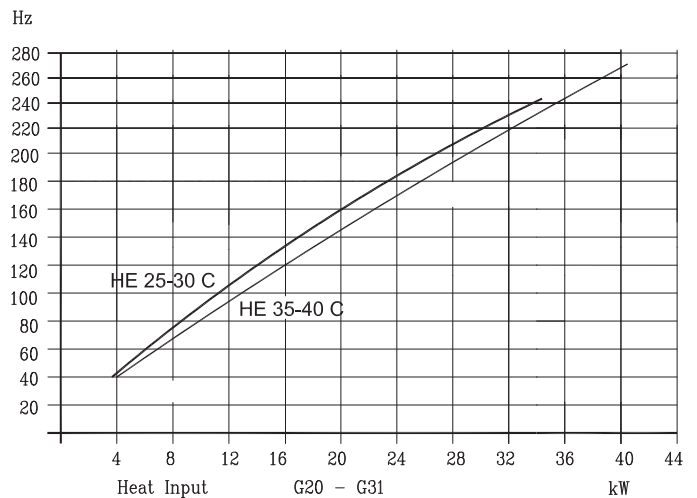

- Explain the function and the use of the boiler, the summer/winter button, the ON/OFF switch and the reset of the digital display.
- Explain and demonstrate the function of the temperature controls, radiator valves etc. for the economic use of the system.
- If an external time clock is fitted, then draw attention to ensure the boiler timer is left in the manual position.
- Stress the importance of regular servicing by a qualified Heating Engineer and that a comprehensive service should be carried out AT LEAST ONCE A YEAR.
- Fill in the Benchmark log book and leave completed with the customer.
- Explain to the user how to isolate the appliance from the gas, water and electricity supplies and the locations of all drain points.

## 6.16 TEST MODE

It is possible to activate the test mode. Press together 2 and 4 buttons (Fig. 1). Press the arrow up and the arrow down buttons 3 and 4 to set the maximum or minimum fan speed. The function is enabled for maximum 15 minutes. Press RESET to esc test mode.

## 6.17 INSTRUCTING THE USER

After completion of the installation and commissioning of the system, the installer should hand over to the householder by taking the following actions:

- To the Householder explain his/her responsibilities under The Gas Safety (Installation and Use) Regulations 1998.
- Explain and demonstrate the lighting and shutting down procedures.
- Show the user the location of the filling

## 7 SERVICING INSTRUCTIONS

- During routine servicing, and after any maintenance or change of part of the combustion circuit, the following must be checked:
- The integrity of the flue system and the flue seals.
- The integrity of the boiler combustion circuit and the relevant seals.
- The operational dynamic (working) gas inlet pressure at maximum rate.
- The gas rate.
- The combustion performance (Refer to page 65).
- Check all joints and connections in the appliance and remake any that show signs of leakage.

### NOTE:

**Service consumables are not covered by the warranty.**

**To view warranty exclusions please visit [www.ravenheat.co.uk](http://www.ravenheat.co.uk) or contact us on 01132 527007.**

### COMPETENCE TO CARRY OUT THE CHECK OF COMBUSTION PERFORMANCE.

Please note: BS6798:2009 Specification for installation and maintenance of gas-fired boilers of rated input not exceeding 70 kW net advises that:

- The person carrying out a combustion measurement should have been assessed as competent in the use of a flue gas analyser and the interpretation of the results.
- The flue gas analyser used should be one meeting the requirements of BS7927 or BS-EN 50379-3 and be calibrated in accordance with the analyser manufacturers requirements.
- Competence can be demonstrated by satisfactory completion of the CPA1 ACS assessment which covers the use of electronic portable combustion gas analysers in accordance with BS 7967, Parts 1 to 4.

#### 7.1 BOILER FROST PROTECTION

The appliance has a built in frost protection device that protects the boiler from freezing. With the gas and electric supplies ON and irrespective of any room thermostat setting, the frost protection device will operate the pump when the temperature falls below 10 °C and will operate the burner when the temperature falls below 5°C.

The burner will switch off when the temperature reaches 27 °C. When the frost protection device operates "AF" is displayed on the digital display.

### IMPORTANT NOTE:

The system should be protected by incorporating a system frost thermostat.

To ensure continued efficient operation of the appliance it is necessary to carry out servicing and cleaning at regular intervals. The frequency of servicing and cleaning will depend upon the particular installation conditions and usage but in general, once a year is advisable.

### WARNING:

**Before the start of any servicing or replacement of components always isolate the electricity supply to the appliance and always turn off the appliance gas supply at the gas service cock.**

The data badge is positioned low on the inside left panel.

- The following notes apply to the appliance and its controls but it should be remembered that attention must also be paid to the heating and hot water circuits with special attention to radiator valves, thermostats, clocks, leaking hot water taps etc.
- Where it is necessary to replace a gasket that relies on adhesive for securing - this adhesive will be supplied with the gasket as a spare item.
- In all cases prior to servicing, remove the front panel of the case. Operate the appliance by turning the hot water services on to a high water flow. Measurement of the products of combustion can be achieved by connection of a probe to the combustion analyser test point.

**- IMPORTANT NOTE:**

After completing any servicing or replacement of gas carrying components it is essential that a test for gas soundness is always carried out along with functional checks in operation.

**7.2 TO INSPECT AND CLEAN THE APPLIANCE**

Before carrying out the cleaning operation, cover the electrical control panel with a piece of waterproof material to protect it from debris.

Inspect the heat exchanger for any blockage. Deposits of any material should be brushed away using a soft brush.

**NOTE:** Do not use brushes with metallic bristles.

Examine internal pipe-work connections and automatic air vent for any water leaks and rectify if necessary.

Examine and remove loose debris from the combustion chamber using a soft brush and vacuum cleaner.

Carefully flush, by spraying water at any remaining debris through the condensate trap.

(Ensure the water is kept away from electrical components).

**It is important to verify that the drip-plate with drain trap contains water (this check is particularly important if the boiler has not used for extended periods of time). If necessary, the drip plate can be filled using the trap provided (Fig. 49).**

Examine the spark and sensing electrodes for any mechanical damage. Clean away any debris and check the spark and sensing gap.

Examine flue duct and flue manifold and ensure that there is no obstruction. Examine the gasket at the entry into the flue manifold.

It is essential that a good seal is made at the outlet to the flue manifold, renew this gasket if there is any sign of damage or deterioration.



## 8 REPLACEMENT OF PARTS

### 8.1 GENERAL

Replacement of parts must be carried out by a competent person.



Before replacing any parts the boiler should be isolated from the mains electric supply and the gas should be turned off at the service cock on the boiler.

After replacing any parts always test for gas soundness and if necessary carry out functional test of the controls.

For replacement of parts, the front, and bottom panels of the boiler will need to be removed (it is not necessary to remove the side panels as all parts are accessible from the front or beneath the boiler).


### 8.2 TO REMOVE THE BOILER PANELS

To remove the front panel unscrew the two lower screws that secure the front panel to the boiler and lift off.

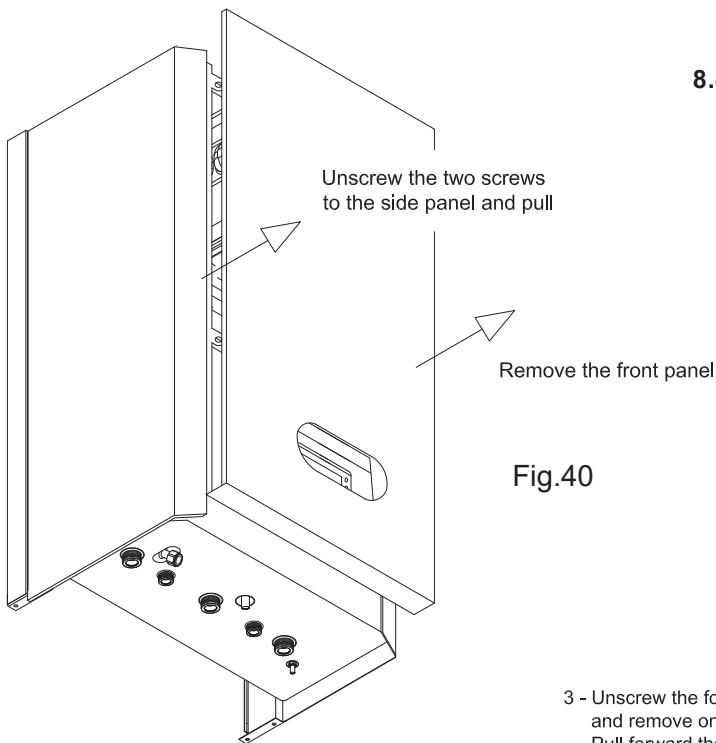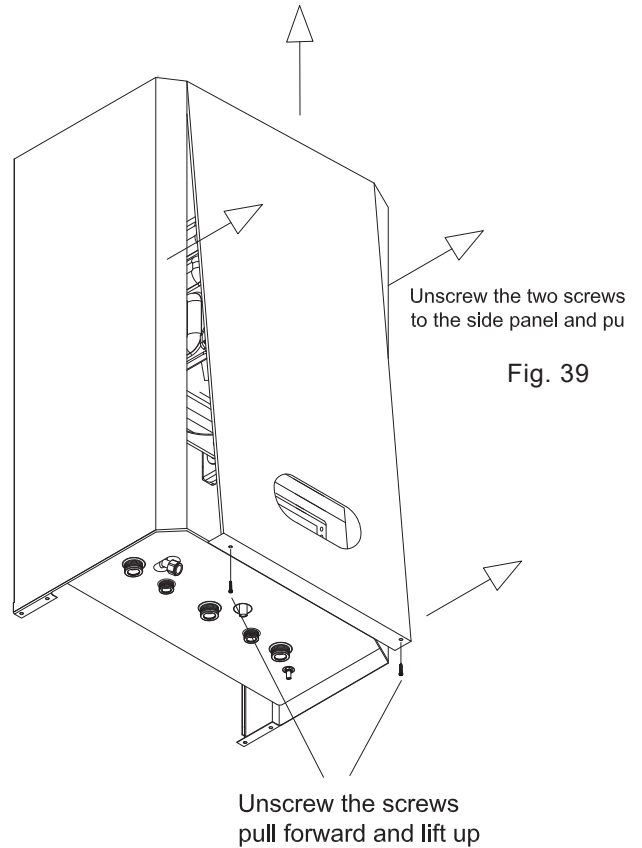

### 8.4 TO REMOVE/REPLACE FAN (Fig. 41)

Remove the front panel (fig. 39).  
Unscrew the gas pipe nut and remove the retaining clip. Detach the connectors from the fan.  
Unscrew the four screws that fix the fan and remove only in front screws.  
Pull forward the fan.  
Replace in reverse order (always fitting a new gasket).

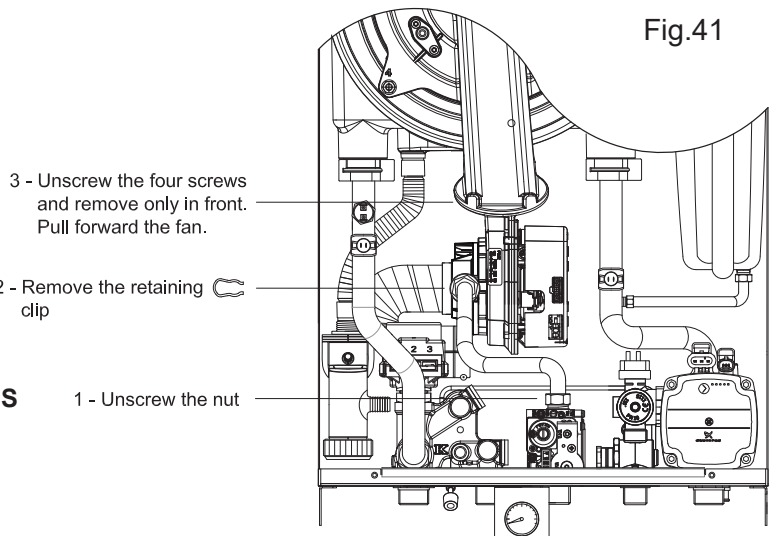

### 8.3 TO REMOVE LEFT AND RIGHT PANELS (Fig. 40)

Remove the front panel (fig. 39).  
Unscrew the four screws to the bottom panel.  
Unscrew the two screws to the side panel and pull.

**8.5 TO REMOVE/ REPLACE THE ELECTRODES (Fig.37)**

Remove the front panel (fig. 39).  
 Remove the ignition and/or sensing lead plug.  
 Unscrew the securing screws with a TORX T15 screwdriver and put them into a suitable container so that they don't get lost.  
 Withdraw the Spark electrode and/or Sensing electrode carefully from the burner cover being careful not to damage the seal.  
 Replace with a new electrode in reverse order. Ensure the gap is correct and there is a good seal when replaced (always fitting a new gasket).

**8.6 TO REMOVE/REPLACE THE BURNER (FIG.42)**

Remove the front panel (fig. 39).  
 Unscrew the gas pipe nut and remove the retaining clip. Detach the connectors from the fan.  
 Unscrew the four screws that fits the burner door to the heat exchanger and remove it.  
 Remove the electrodes (sect. 8.5), and remove the insulation pad, is helpful to use a screwdriver to move the fastening clips.  
 To remove the burner, unscrew the screws with a TORX T15 screwdriver.  
 Replace in reverse order.

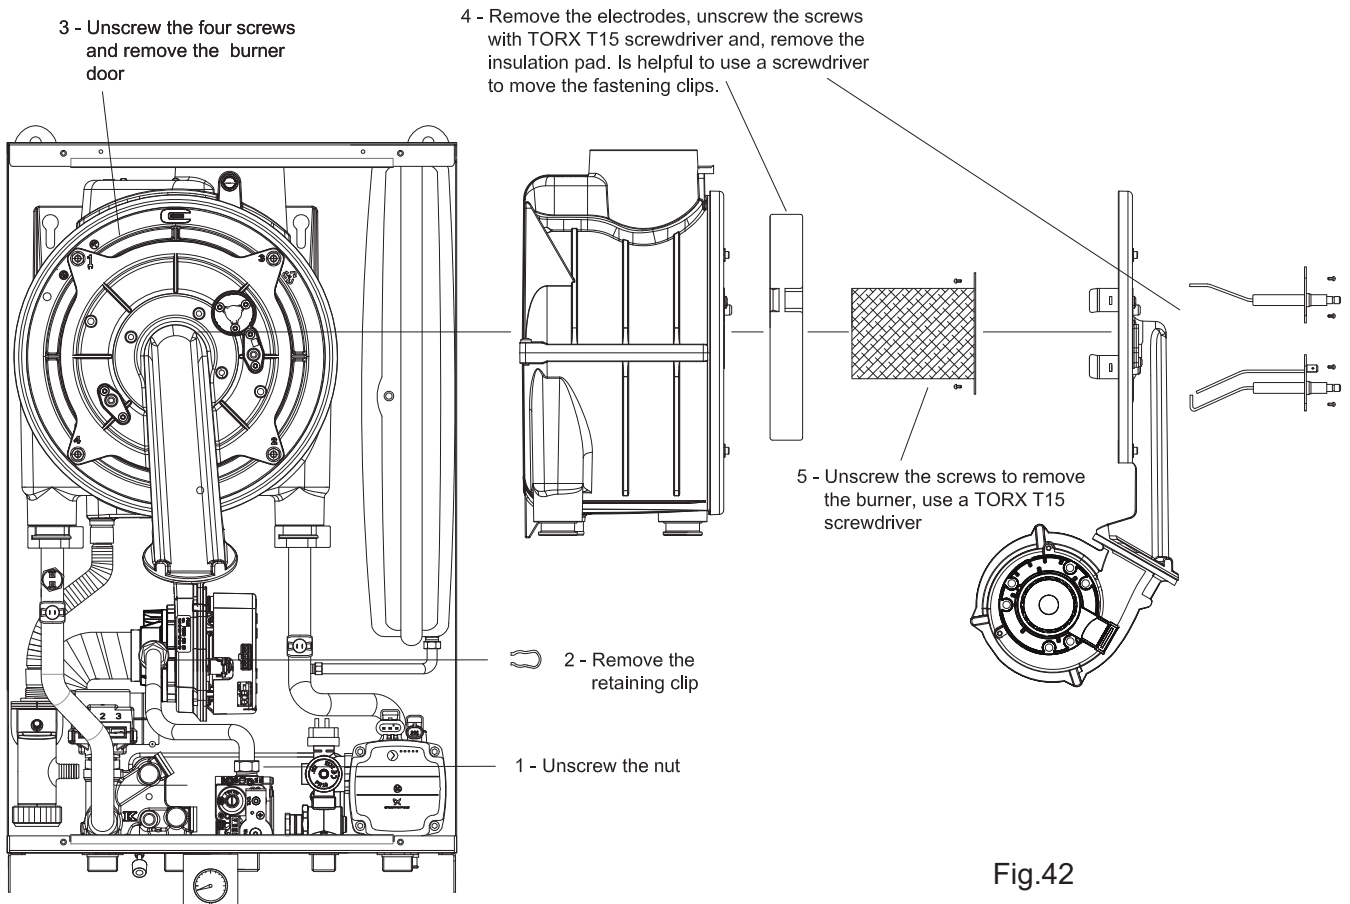


Fig.42

**8.7 TO REMOVE/REPLACE THE MAIN HEAT EXCHANGER**

Remove the front and bottom panels (fig. 39-40).  
 Drain the boiler CH circuit and drain the DHW circuit. Follow the instructions to remove the burner (sect. 8.6). Pull down to remove the condense pipe on the bottom of the heat exchanger. Disconnect the flow and return pipes at the heat exchanger.  
 Loosen the four heat exchanger securing screws and clamps then carefully ease the heat exchanger out.

**CAUTION :** There will be water in the heat exchanger.

Replace in reverse order, always use new O-ring seals.

**8.8 TO REMOVE/REPLACE EXPANSION VESSEL (Fig.43)**

Remove the front and bottom panels (fig. 39-40).  
Close the on/off valves for the heating circuit and drain the water at the drain point (fig.36). Unscrew the fixing bracket and the nut connecting the expansion vessel. Lift up the vessel and remove.  
Replace in reverse order. Use a new gasket, taking care to ensure they are replaced correctly.

**8.9 TO REMOVE/REPLACE GAS VALVE (Fig. 44)**

Remove the front and bottom panels (fig. 39-40).  
Unscrew the nut at the top and the four screws on the bottom of the gas valve.  
Replace in reverse order.

**IMPORTANT:**  
when the gas valve is re-fitted, **check combustion CO<sub>2</sub> and adjust if necessary (see section 6.9).**

**8.10 TO REMOVE/REPLACE PLATE HEAT EXCHANGER (Fig. 44)**

Remove the front and bottom panels (fig. 39-40).  
Remove the panel control box (sect. 8.22).  
Close off the on/off valves for CH circuit and DHW circuit and drain the boiler and drain hot water from the lowest hot water tap.  
Unscrew the two allen screws that connect the DHW heat exchanger and pull it out from the boiler (fig. 46).  
If necessary the pipes from the flow manifold may have to be removed for easier access. Lift up the plate heat exchanger.  
Replace in reverse order.  
NOTE: Always use new O-rings.

**8.11 TO REMOVE/REPLACE THE WATER PRESSURE TRANSDUCER (Fig. 45)**

Remove the front and bottom panels (fig. 39-40).  
Close the on/off valves for the heating circuit and drain the water at drain point (fig.36).  
Detach the wire connector, remove the securing clip.  
Replace in reverse order.

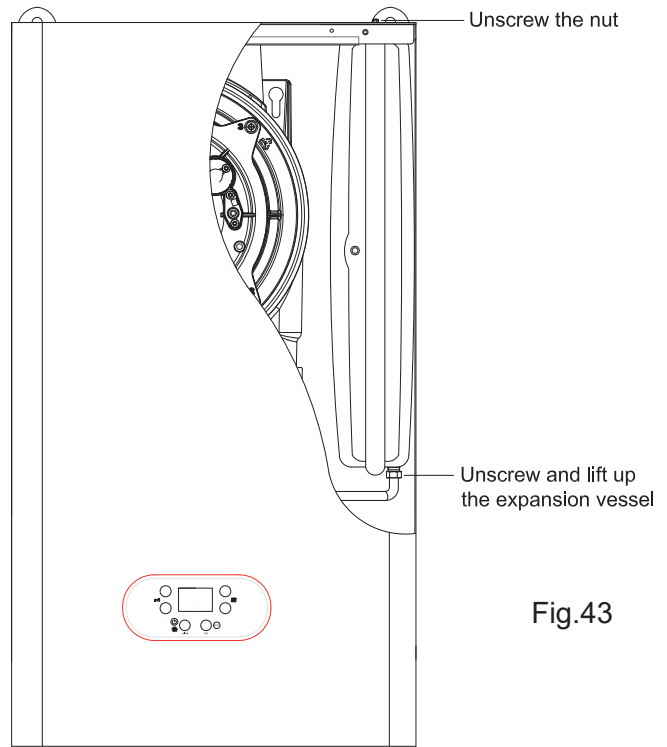


Fig.43

Fig.44

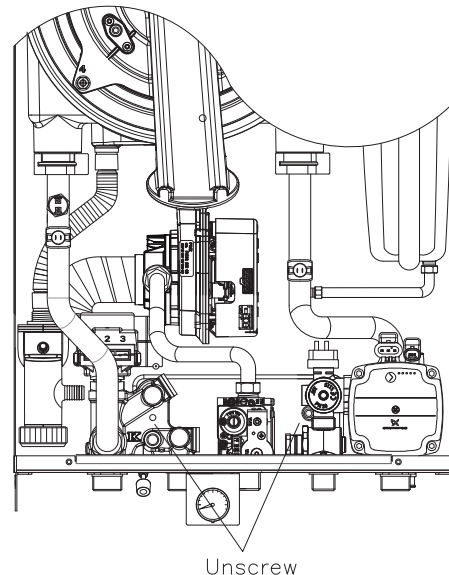
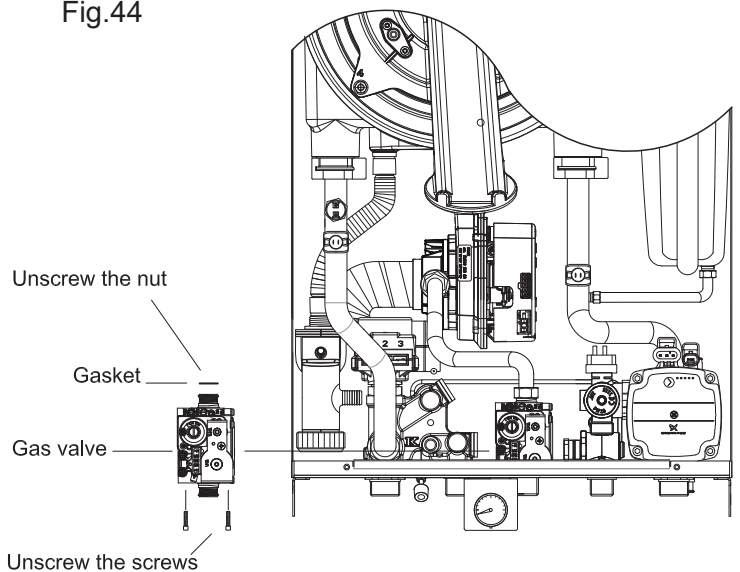



Fig.45

**8.12 TO REMOVE/REPLACE DIVERTER VALVE MOTOR (Fig. 46)**

Remove the front and bottom panels (fig. 39-40).  
Detach the electrical plug and remove the retaining clip. Replace in reverse order.

**8.13 TO REMOVE/REPLACE C.H. DIVERTER VALVE (Fig. 46)**

Remove the front and bottom panels (fig. 39-40).  
Remove the panel control box (sect. 8.222). Close the on/off valves for the heating circuit and drain the water at drain point (fig.46).  
Remove diverter valve motor switch, to allow access and unscrew the C.H.diverter valve (fig.47).  
Replace in reverse order.  
NOTE: Always use new O-ring.

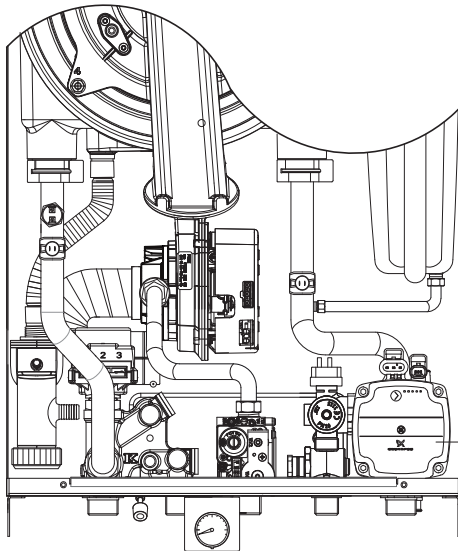

**8.14 TO REMOVE/REPLACE D.H.W. DIVERTER VALVE MECHANISM ( Fig. 46)**

Remove the front and bottom panels (fig. 39-40).  
Remove the panel control box (sect. 8.22).  
Close the on/off valves for the heating circuit and drain the water at drain point (fig.36).

Remove flow detector and unscrew DHW diverter valve.  
Replace in reverse order.  
NOTE: Always use new O-ring.

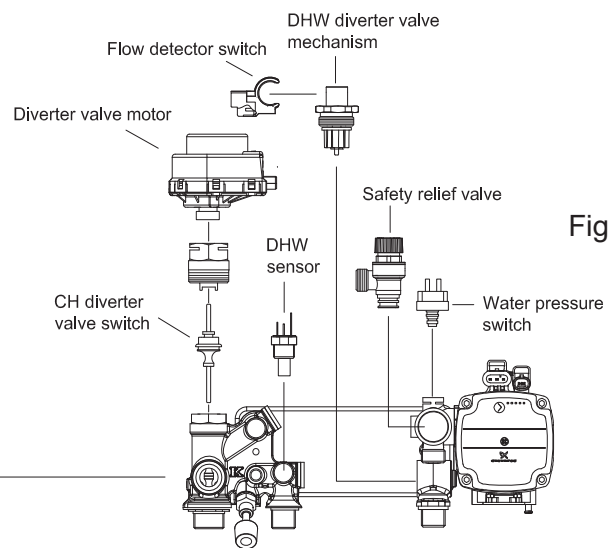


Fig.46

**8.15 TO REMOVE/REPLACE PUMP (Fig.47)**

Remove the front and bottom panels (fig. 39-40).  
Close the on/off valves for the heating circuit and drain the water at drain point (fig.36).  
Detach the supply wire connector from the pump.  
Unscrew the nut that fastens the pump to the CH pipe and remove the pump and remove the securing clip at the pump manifold.  
Replace in reverse order.  
NOTE: Always use new O-ring.

Remove the clip and pull the automatic air vent from the pump.  
Replace in reverse order.  
NOTE: Always use new O-ring.

**8.16 TO REMOVE/REPLACE AUTOMATIC AIR VENT (Fig. 47)**

Remove the front and bottom panels (fig. 39-40).  
Remove the panel control box (sect. 8.22).  
Close the on/off valves for C.H. circuit and drain the water from at drain point Fig.36.

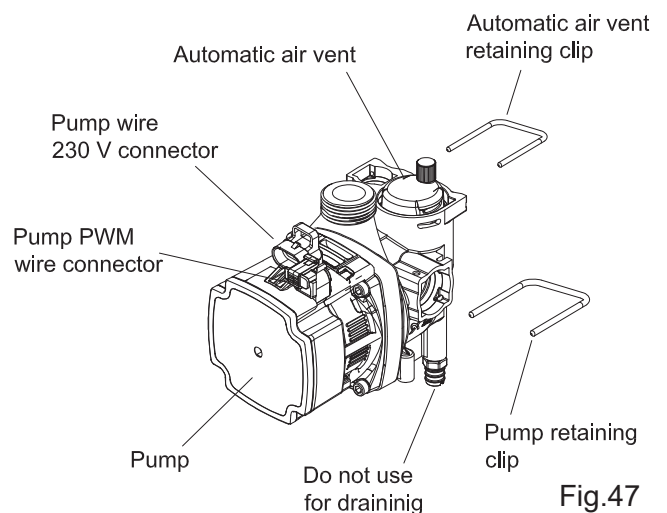


Fig.47

**8.17 TO REMOVE/REPLACE SAFETY RELIEF VALVE (Fig. 46)**

Remove the front and bottom panels (fig. 39-40).  
 Close the on/off valves for C.H. circuit and drain the water from at drain point fig.36.  
 Unscrew the safety relief valve screw and pull up.  
 Replace in reverse order and using a new gasket.

**8.18 TO REMOVE/REPLACE D.H.W. SENSOR (Fig. 46)**

Remove the front and bottom panels (fig. 39-40).  
 Close the on/off valve for the DHW circuit and drain the hot water from the lowest hot water tap.  
 Detach the wire connector and unscrew the sensor.  
 Replace in reverse order.

**8.19 TO REMOVE/REPLACE C.H. FLOW AND RETURN SENSORS (Fig. 48)**

Remove the front panel (fig. 39).  
 Detach the wire connector and remove the retaining clip sensor from the pipe.  
 NOTE: When reconnecting ensure the correct wires go to the relevant sensor (the polarity on each one is unimportant).

**8.20 TO REMOVE/REPLACE FLUE SENSOR (Fig. 3 item 23)**

Remove the front panel (fig. 39).  
 Detach the wire connector and rotate the sensor.  
 Replace in reverse order.

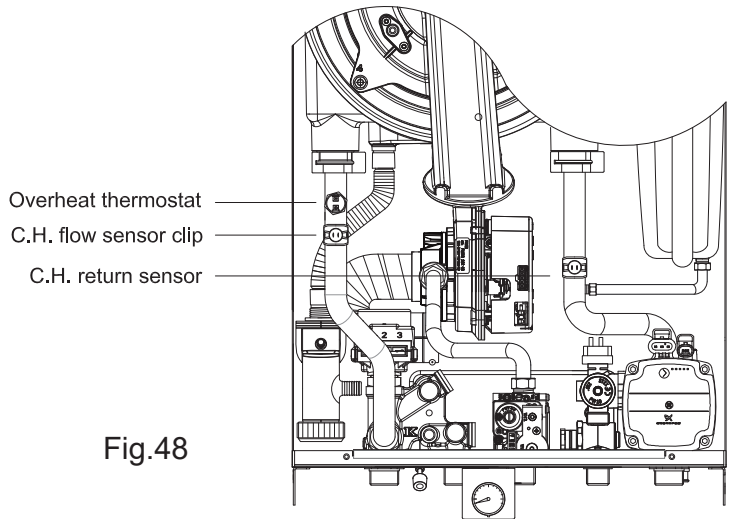


Fig.48

**8.21 TO CLEAN AND REMOVE/REPLACE CONDENSING TRAP (Fig. 49)**

Remove the front panel (fig. 39), bottom and left side panels (fig. 40).  
 Remove the securing clip and pull out the plastic pipe that connects the condensing trap at the heat exchanger.  
 Unscrew the nut that fastens the condensing trap to the depression chamber and remove it.  
 If the side panel can not be removed then remove the gas valve (see sec 8.9) and continue with the above instructions.  
 Replace in reverse order.





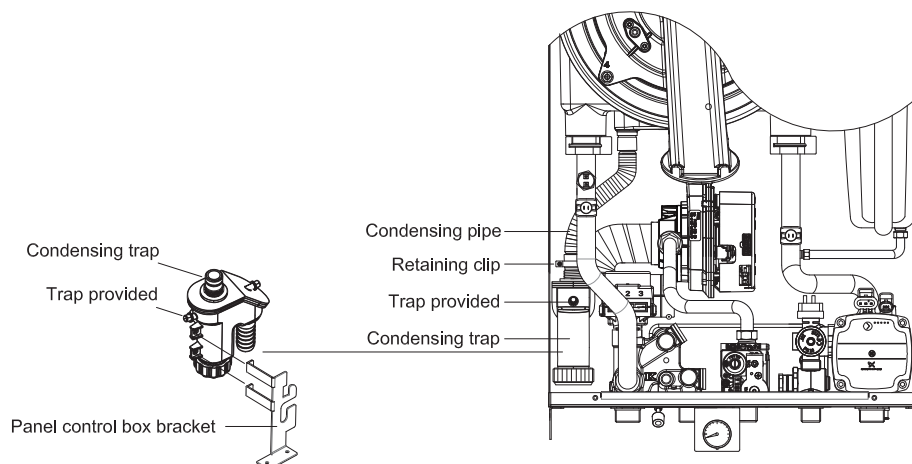


Fig.49

**8.22 TO REMOVE PANEL CONTROL BOX (Fig. 50,51).**

Remove the front panel (fig. 39).  
 Pull the control panel box until it is slightly out of the boiler.  
 As doing so move the box forward until the control box becomes free.  
 This will allow free access to lower part of the boiler.

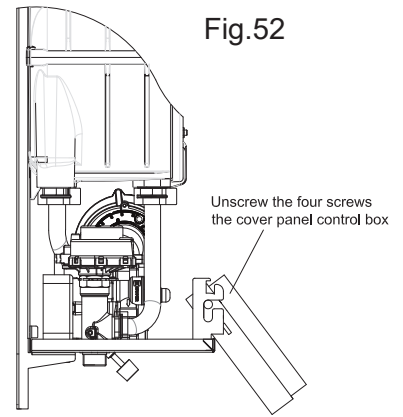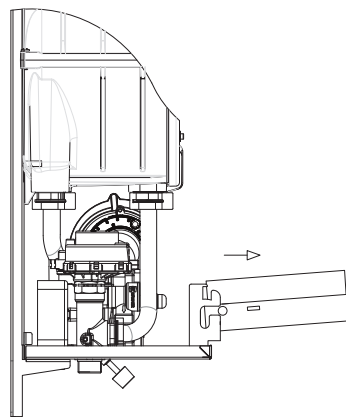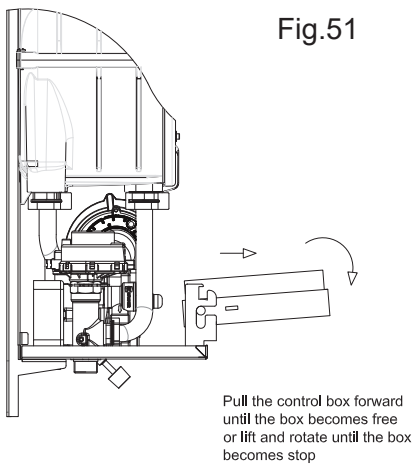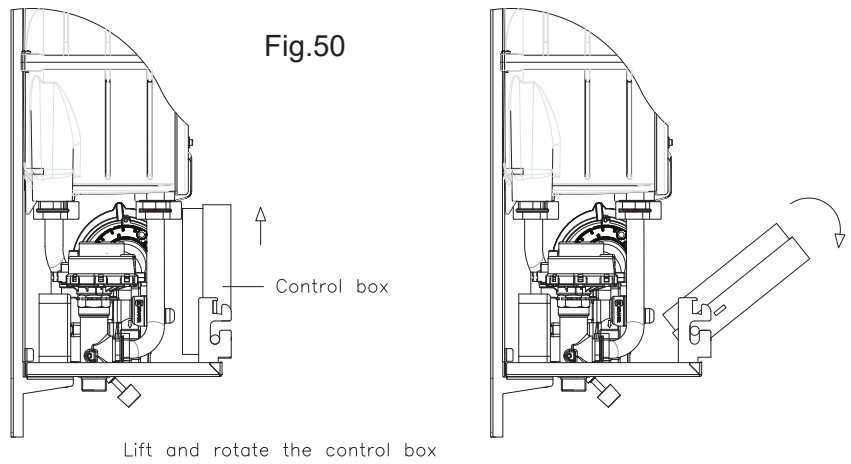

**8.23 TO REMOVE/REPLACE CONTROL BOARD (Fig.52).**

Remove the front panel (fig. 39).  
 Remove the the panel control box (sect. 8.22).  
 Detach all connectors from control board, unscrew the four screws and lift up.

Replace in reverse order.

**8.24 TO REMOVE/REPLACE DIGITAL DISPLAY BOARD.**

Remove the front panel (fig. 39).  
 Remove the panel control box (sect. 8.22), and let it fix at the depression chamber like in fig. 52.  
 Unscrews the four screws that fix the cover panel control box and lift up.  
 Detach all connectors from control board, unscrew the four screws and lift up.  
 This will allow free access to digital display. Detach the connector and unscrew the four screws and lift up.

Replace in reverse order.

**8.25 EXTERNAL CONTROL CONNECTION (Fig. 53)**

Remove the front panel (fig. 39).  
 Remove the external wire link on the panel control box.  
 Replace with external wire controls. **(These must be volt free).**


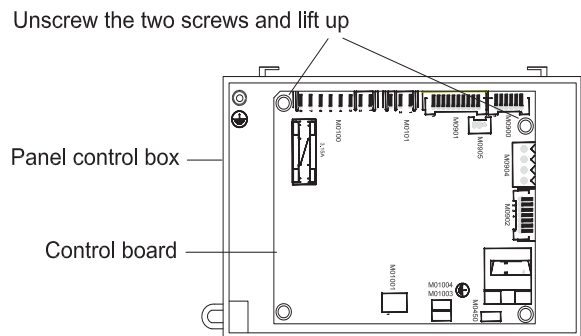


Fig.53

## 9 FAULT FINDING CENTRAL HEATING


Before trying to operate the boiler make sure that: all gas supply cocks are open and the gas supply has been purged of air. The heating system pressure is at least 1 bar min to 1.5 bar max, select winter position on the digital display and set the central heating temperature to maximum. (sect. 1.5).

Ensure external controls are calling for heat (room thermostat/ digital clock) and check the following appliance operations:

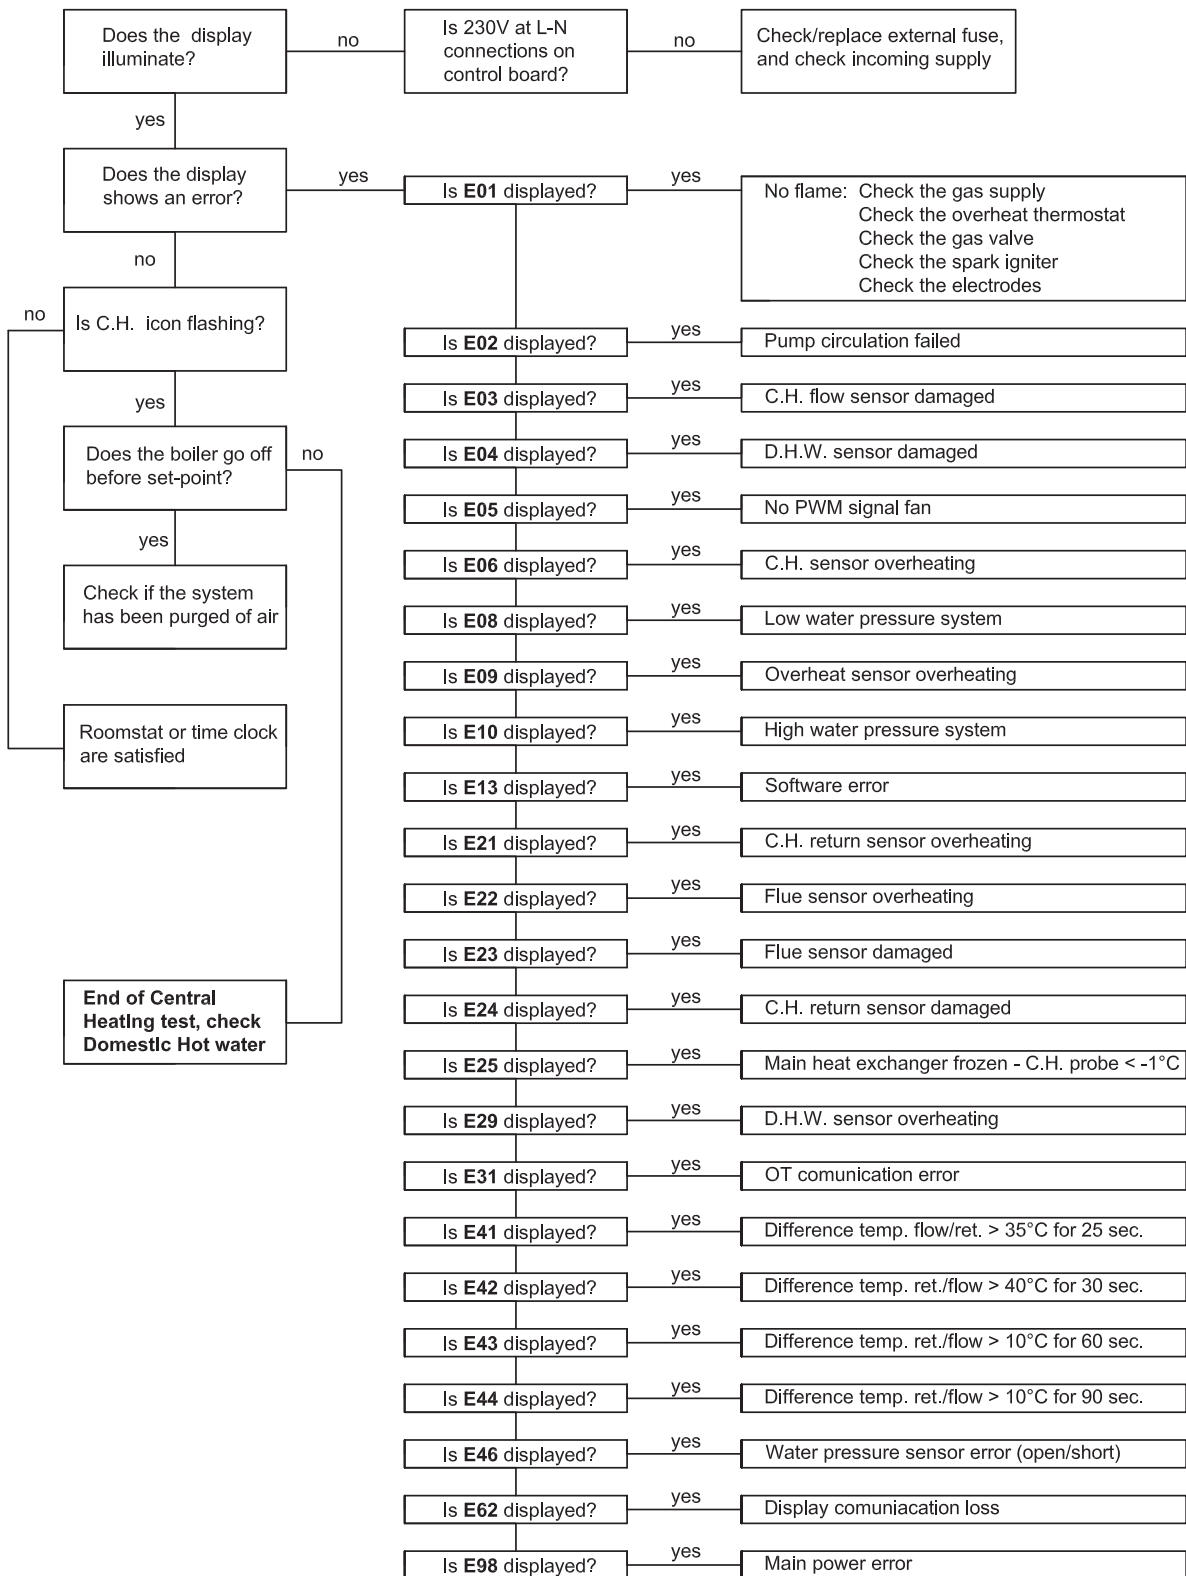

## 9.1 FAULT FINDING DOMESTIC HOT WATER

Before continuing see section 9, and after selecting the summer position on the digital display and setting the domestic hot water temperature to maximum (sect.1.5).  
Open the domestic hot tap and check the following appliance operations:

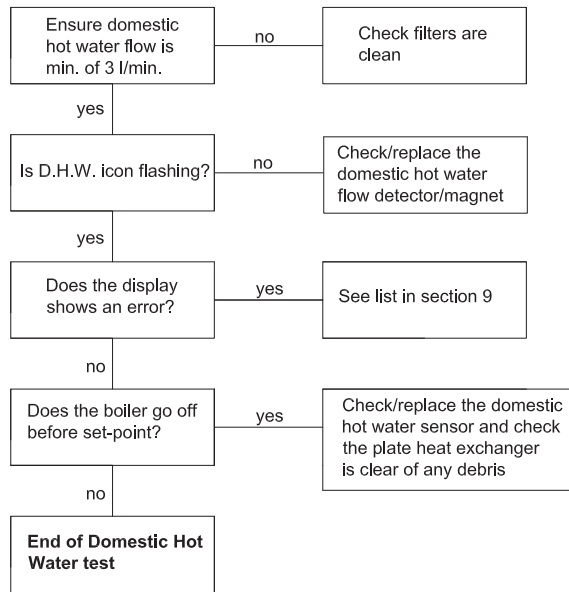

## 10 ELECTRICAL SYSTEM DIAGRAM


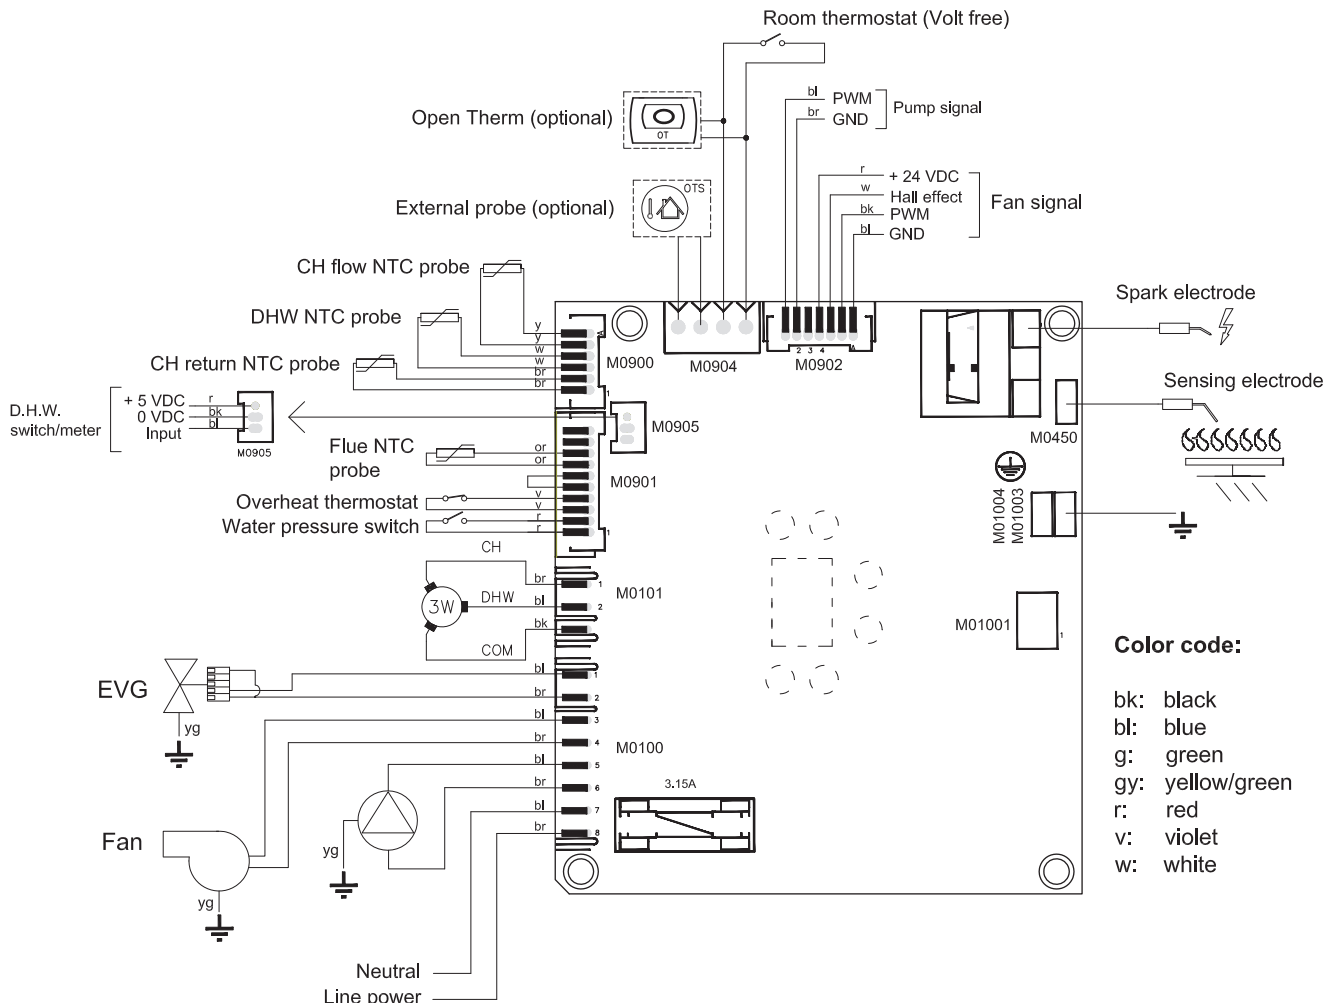


Fig. 55



11 TEMPLATE DRAWING

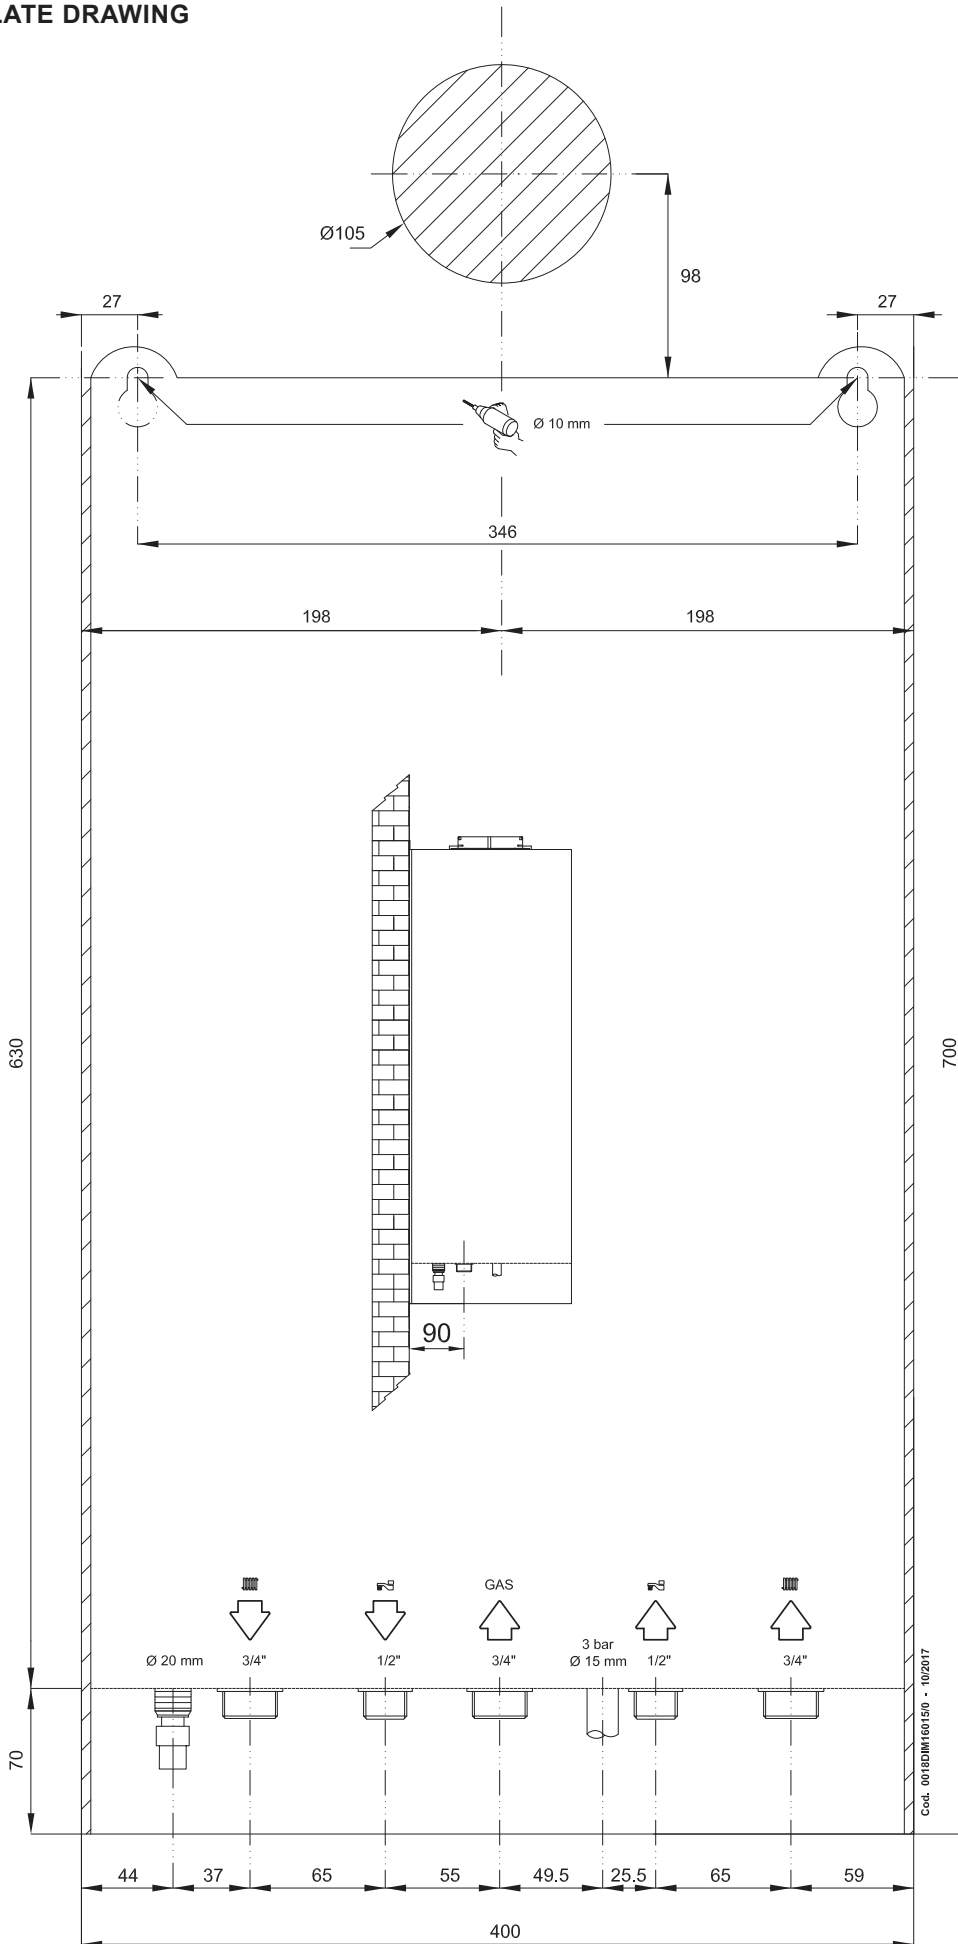

12 SPARE PARTS

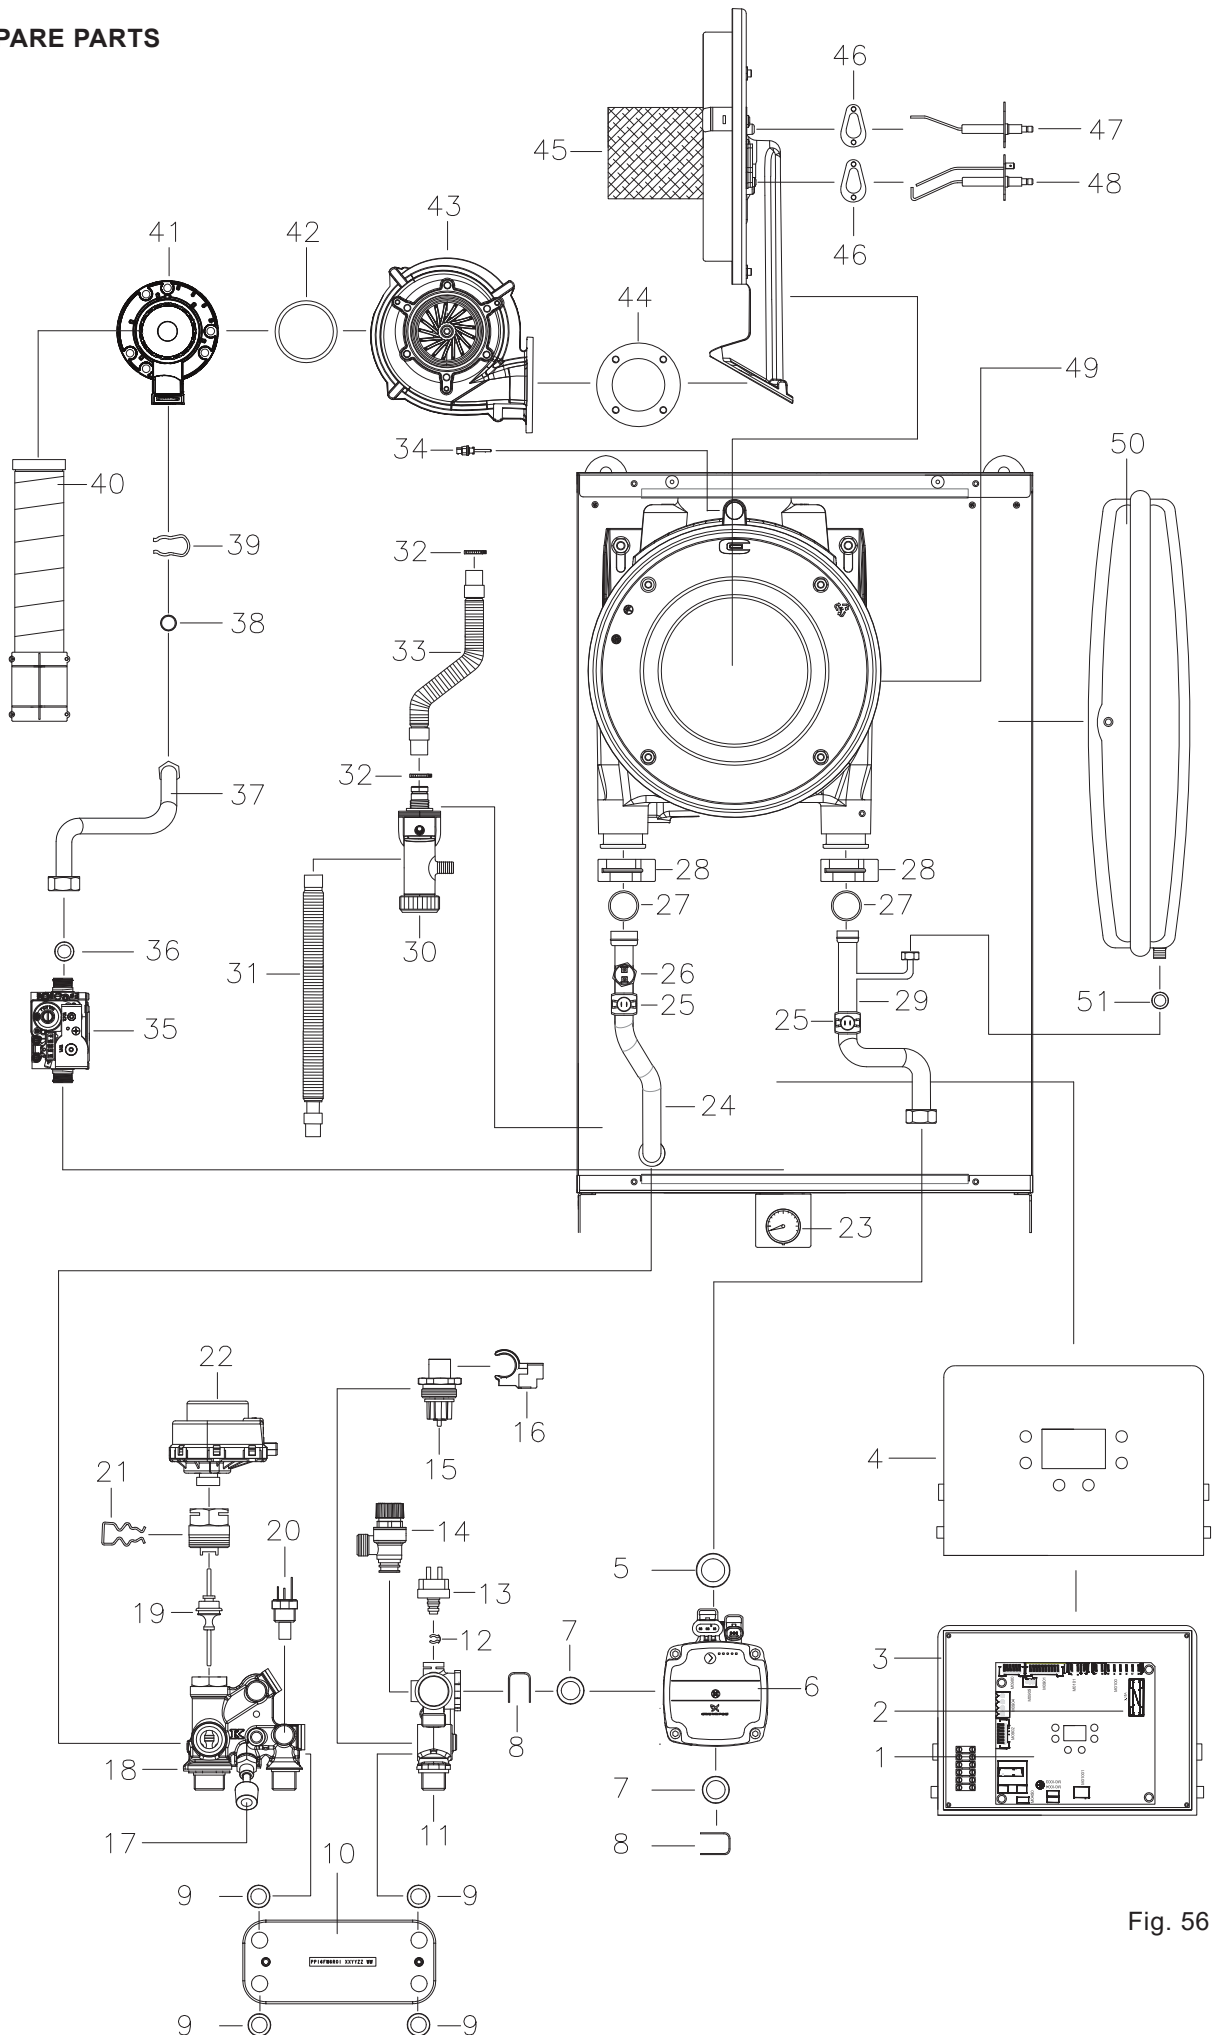


Fig. 56

## RAVENHEAT HE 25 C - HE 30 C - HE 35 C - HE 40 C COMPACT

### SHORT LIST OF SPARE PARTS AND FLUE ACCESSORIES

Pos.	Part. No.	G.C. Part. No.	Description
1	CIR160050		Digital display
2	FUS010150		Internal fuse 3.15 A
3	SCA160050		Control board box
4	SCA160050		Instrument panel box
5	GUA010311		1" gasket
6	CIR160050		Pump
7	ORI150150		Pump Oring
8	FOR150200		Pump clip
9	ORI110450		Plate heat exchanger Oring
10	SCA150170		Plate heat exchanger HE 25 C
10.1	SCA11030		Plate heat exchanger HE 30 C
10.2	SCA110250		Plate heat exchanger HE 35/40 C
11	GRU18010		Return manifold
12	FOR15025		Water pressure clip
13	PRE180050		Water pressure
14	VAL180050		Safety relief valve
15	TUR150050		Turbine
16	RIV150050		Flow detector switch
17	VAL180100		C.H. valve load
18	GRU180050		Flow manifold
19	OTT150050		Diverter valve by-pass
20	SON150050		D.H.W. sensor
21	FOR150150		Diverter valve motor clip
22	MOT150050		Diverter valve motor
23	IDR090060		Pressure gauge
24	TUB160080		Flow pipe
25	SON110100		C.H. sensor
26	TER130050		Overheat thermostat
27	ORI110250		Pipe Oring
28	FOR160050		Primary heat exchanger clip
29	TUB16014		Return pipe
30	RAC160050		Condensing trap
31	TUB110300		Flexible condensing pipe
32	FAS150050		Condensing trap pipe hose clamp 12-22
33	TUB160100		Condensing pipe
34	SON130050		Temperature flow sensor
35	VAL150300		Gas valve
36	GUA010260		3/4" gas valve gasket
37	VAL160180		Gas valve pipe

Pos.	Part. No.	G.C. Part. No.	Description
38	ORI160050		Air/gas mixer junction O-ring
39	FOR150100		Air/gas mixer junction clip
40	SIL150050		Silencer
41	MIX150150		Air/gas mixer
42	ORI110050		Air/gas mixer - fan O-ringr
43	VEN160050		Fan HE 25/30 C
43.1	VEN160150		Fan HE 35/40 C
44	GUA110052		Fan - burner gasket
46	BRU160100		Burner
46	GUA150050		Sensing/spark electrode gasket
47	CAN160100		Sensing electrode
48	CAN160050		Spark electrode
49	SCA160100		Primary heat exchanger HE 25/30 C
49.1	SCA160150		Primary heat exchanger HE 35 C
49.2	SCA160200		Primary heat exchanger HE 40 C
50	VAS160050		Expansion vessel
51	GUA050050		3/8" gasket (GUA060111)
/	IMP160100		Wiring harness

## Plume Management Kit (see sect. 5.6)

Part. No.	Description
TER160050	1 metre high plume kit
CUR110050	45° flue exhaust deflection bend
CUR110100	90° flue exhaust deflection bend

## Accessories concentric flue 60/100 (see sect. 5.12 - Table 7)

Part. No.	Description
COL160050	Straight flue header / sample point 60/100
FLA110050	Flue adaptor
PRFE	Flue Extension 60/100 L1000
PR45FBI	45° bend 60/100
PR90FBI	90° elbow bend 60/100
TER160050	Horizontal terminal 60/100
TER110200	Vertical flue Terminal

## Accessories concentric flue 80/125 (see sect. 5.18)

Part. No.	Description
COL160050	Straight flue header / sample point 60/10
PRO110300	Flue Extension 80/125 L1000
RID110050	125/80 to 100/60 Flue reducer
CUR110250	45° bend 80/125
CUR110300	90° elbow bend 80/125
TER010050	Horizontal Flue Terminal 80/125
TER110200	Vertical Flue Terminal 80/125
TEG060050	Flashing sleeve/slate

## Accessories eccentric flue 80/80 (see sect. 5.13 - 5.14 - 5.15 - 5.16 - 5.17)

Part. No.	Description
SDO160050	Twin flue header F80/80
PRO110200	Straight pipe L1000 80
CUR110150	90° elbow bend 80
CUR110200	45° bend 80
GRI110050	Air inlet terminal 80
GRI110100	Exhaust terminal 80
TER060110	Vertical eccentric flue terminal





RAVENHEAT INTERNATIONAL s.r.l. Via Dell' Agricoltura, 50 37059 Zevio (VR) IT  
Tel. 045/6051578 - Fax 045/6060662  
e-mail: [info@ravenheat.it](mailto:info@ravenheat.it)

Ravenheat reserves the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet.